

Naval Surface Warfare Center
Carderock Division
West Bethesda, MD 20817-5700

NSWCCD-80-TR-2013/011 April 2013

Naval Architecture and Engineering Department
Technical Report

NAVSEA INTERACTIVE ELECTRONIC TECHNICAL MANUAL (IETM) VIEWER SOFTWARE PERFORMANCE REQUIREMENTS

by

Stephanie Z. Farina (NSWCCD)

L. John Junod (NSWCCD)

Kathleen A. Moore (NSWCCD)

Lori Westbrook (NSWCCD)

Phil Deuell (AMSEC)

F. Joseph Garner (AMSEC)



Distribution Statement A:
Approved for Public Release; Distribution is Unlimited.

NSWCCD-80-TR-2013/011

REPORT DOCUMENTATION PAGE			<i>Form Approved</i> <i>OMB No. 0704-0188</i>	
Public reporting burden for this collection of information is estimated to average 1 hour per response, including the time for reviewing instructions, searching existing data sources, gathering and maintaining the data needed, and completing and reviewing this collection of information. Send comments regarding this burden estimate or any other aspect of this collection of information, including suggestions for reducing this burden to Department of Defense, Washington Headquarters Services, Directorate for Information Operations and Reports (0704-0188), 1215 Jefferson Davis Highway, Suite 1204, Arlington, VA 22202-4302. Respondents should be aware that notwithstanding any other provision of law, no person shall be subject to any penalty for failing to comply with a collection of information if it does not display a currently valid OMB control number. PLEASE DO NOT RETURN YOUR FORM TO THE ABOVE ADDRESS.				
1. REPORT DATE (DD-MM-YYYY) 16-04-2013		2. REPORT TYPE Final		3. DATES COVERED (From - To) 8/10/12 – 4/16/13
4. TITLE AND SUBTITLE NAVSEA INTERACTIVE ELECTRONIC TECHNICAL MANUAL (IETM) VIEWER SOFTWARE PERFORMANCE REQUIREMENTS			5a. CONTRACT NUMBER	
			5b. GRANT NUMBER	
			5c. PROGRAM ELEMENT NUMBER	
6. AUTHOR(S) Stephanie Z. Farina (NSWCCD); L. John Junod (NSWCCD); Kathleen A. Moore (NSWCCD) Lori Westbrook (NSWCCD); Phil Deuell (AMSEC); F. Joseph Garner (AMSEC)			5d. PROJECT NUMBER	
			5e. TASK NUMBER	
			5f. WORK UNIT NUMBER N0002412WX05718, N0002413WX07048	
7. PERFORMING ORGANIZATION NAME(S) AND ADDRESS(ES) NAVAL SURFACE WARFARE CENTER CARDEROCK DIVISION (CODE 821) 9500 MACARTHUR BOULEVARD WEST BETHESDA, MD 20817-5700			8. PERFORMING ORGANIZATION REPORT NUMBER NSWCCD-80-TR-2013/011	
9. SPONSORING / MONITORING AGENCY NAME(S) AND ADDRESS(ES) COMMANDER NAVAL SEA SYSTEMS COMMAND ATTN: SEA 1333 ISAAC HULL AVE SE WASHINGTON NAVY YARD DC 20376			10. SPONSOR/MONITOR'S ACRONYM(S) NAVSUP N00AL	
			11. SPONSOR/MONITOR'S REPORT NUMBER(S)	
12. DISTRIBUTION / AVAILABILITY STATEMENT Distribution Statement A: Approved for Public Release: Distribution Unlimited.				
13. SUPPLEMENTARY NOTES N/A				
14. ABSTRACT This NAVSEA Interactive Electronic Technical Manual (IETM) Viewer Software Performance Requirements document defines the standard requirements necessary for IETM viewer software to satisfy the look, feel, and interaction requirements for NAVSEA IETMs. These performance requirements have been created to provide NAVSEA IETM users a familiar, and consistent operation of the viewer software product, and a common look and feel of IETM information presentation. The requirements defined in this document establish an IETM viewer software functional standard that is intended to give developers of NAVSEA IETM viewer software a stable and well-defined requirement, but Acquiring Activities and developers are to be aware that compliance with this standard does not, in itself, assure accreditation and approval of the software product by Navy.				
15. SUBJECT TERMS IETM, Viewer, Technical Manual Viewer, Performance Requirements, NAVSEA Viewer, Standard NAVSEA Integrated Publishing Process, SNIPP				
16. SECURITY CLASSIFICATION OF:			17. LIMITATION OF ABSTRACT SAR	18. NUMBER OF PAGES 107
a. REPORT UNCLASSIFIED	b. ABSTRACT UNCLASSIFIED	c. THIS PAGE UNCLASSIFIED		
			19b. TELEPHONE NUMBER (include area code) 301-227-3346	

Table of Contents

1 Introduction	1
1.1 Introduction.....	1
1.1.1 Navy Approved Software	1
1.1.2 Information Assurance	1
1.2 Scope.....	2
2 Applicable Documents, References and Acronyms	2
2.1 General.....	2
2.2 Documents/Standards.....	2
2.3 Acronyms	3
3 REQUIREMENTS	3
3.1 Background	3
3.2 Physical IETM Screen Layouts - The Title Bar and Outer Shell.....	3
3.2.1 Title Bar	4
3.2.2 The Outer Shell	4
3.3 Physical IETM Screen Layout and Functions - The Inner Shell	4
3.3.1 Guidepost	5
3.3.1.2 IETM ID	6
3.3.1.3 Revision Summary	7
3.3.1.4 Safety Summary	7
3.3.1.5 Navy Distance Support.....	7
3.3.1.6 Feedback	8
3.3.1.6.1 TMDER Website	8
3.3.1.6.2 TMDER PDF	8
3.3.1.6.3 Other Feedback.....	8
3.3.1.7 Certification Sheet	8
3.3.1.8 Print Current Window	8
3.3.1.9 Session Control.....	8
3.3.1.10 Exit	10
3.3.2 Classification and Distribution Bar.....	10
3.3.3 Navigation Panel	11

3.3.4 Subtitle Bar	11
3.3.5 Main Menu Bar	11
3.3.5.1 Previous and Next	11
3.3.5.2 Table of Contents (TOC)	11
3.3.5.3 History	11
3.3.5.4 Search Function	12
3.3.5.5 Print	12
3.3.5.5.1 Print Current Window	13
3.3.5.5.2 Print Current Module	13
3.3.5.5.3 Print Module Figures	13
3.3.5.5.4 Print Current Figure	13
3.3.5.6 Feedback	13
3.3.5.6.1 TMDER Website	14
3.3.5.6.2 TMDER PDF	14
3.3.5.6.3 Other Feedback	16
3.3.5.7 Exit	16
3.3.5.8 Help	16
3.3.5.9 IDSTATUS (S1000D only)	16
3.3.6 Additional Information Bar	16
3.3.6.1 Back	16
3.3.6.2 Forward	17
3.3.6.3 Applicability	17
3.3.6.4 Annotations	17
3.3.6.4.1 Add Bookmark	17
3.3.6.4.2 Add Note	18
3.3.6.4.3 Manage Bookmarks/Notes	18
3.3.6.5 Additional Content	18
3.3.7 Table of Contents (TOC) Panel	18
3.3.8 Main Content Window	19
3.3.8.1 Content Window Classification Bar	19
3.3.9 Status Bar	19
3.4 Icons	19
3.5 Screen Resolutions	20

3.6 Style and Format Requirements.....	20
3.6.1 Text and Display Colors	20
3.6.2 Standard Text/Fonts	21
3.6.2.1 Font Requirements.....	21
3.6.2.2 Margins	22
3.6.2.3 Justification	22
3.6.2.4 Text Wrapping	22
3.6.3 Display of IETM Content.....	22
3.6.3.1 Title Screen	22
3.6.3.2 Display of Change Markings.....	22
3.6.3.3 Paragraphs.....	22
3.6.3.4 Procedural Steps	23
3.6.3.4.1 Linear Display of Procedural Steps for IETMs	24
3.6.3.4.2 Check-off Lists	24
3.6.3.4.3 Steps with Illustrations	24
3.6.3.5 Lists	24
3.6.3.5.1 Random List	24
3.6.3.5.2 Sequential List.....	24
3.6.3.5.3 Definition List.....	24
3.6.3.6 Display and Acknowledgement of Alerts and Notes	25
3.6.3.6.1 In-line Alerts and Notes.....	26
3.6.3.6.2 Pop-up Alerts and Notes.....	27
3.6.3.6.3 Alert Display on Status Bar	27
3.6.3.6.4 Alert Colors	28
3.6.3.6.5 Hazardous Material Icons.....	28
3.6.3.6.6 Display of Notes.....	29
3.6.3.7 Hot Spots/Links.....	29
3.6.3.8 Tables	29
3.6.3.8.1 Standardized Information Tables	29
3.6.3.8.2 CALS and Simple Tables	29
3.6.3.9 Graphics.....	30
3.6.3.9.1 Oversize Graphics.....	30
3.6.3.9.2 Illustrated Parts Breakdown (IPB)	30

3.6.3.9.3 Troubleshooting Diagrams.....	31
3.6.3.9.4 Tear Offs	31
3.6.3.10 Multimedia.....	31
3.6.4 Security Markings.....	31
3.6.4.1 Security Markings for Classification Authority Box.....	31
3.6.4.2 Security Markings for Electronically Displayed Data.....	32
3.6.4.3 Security Markings for Printed Material.....	32
3.6.4.4 Security Markings for Portions	32
3.7 Interactive IETM Session Requirements.....	33
3.7.1 User Interaction/Screen Dialogs	33
3.7.2 Screen Stacking	33
3.7.3 Response Time.....	34
3.7.4 Login.....	34
3.7.5 Audit Trail	34
APPENDICES	35
APPENDIX A USER INTERFACE INNER SHELL SCREEN	A-1
A.1 User Interface Screen Regions Tool	A-1
A.1.1 Single Main Frame Layout.....	A-3
A.1.2 Upper Lower Dual Frame Layout	A-4
A.1.3 Left Right Dual Frames Layout.....	A-5
A.1.5 Triple Frame Layout	A-7
A.1.6 No TOC Frame Layout.....	A-11
APPENDIX B SUGGESTED ICONS AND SYMBOLS	B-1
B.1 Suggested Icons and Symbols.....	B-1
APPENDIX C STANDARDIZED INFORMATION TABLES	C-1
C.1 Standardized Information Table Markup.....	C-1
C.2 Standardized Table Types.....	C-1
C.3 Controls and Indicators Table	C-2
C.4 Displays/Alerts Table.....	C-2
C.5 Environmental Conditions List.....	C-3
C.6 Equipment, Accessories, and Documents Supplied Table.....	C-3

C.7 Equipment Modification Table.....	C-4
C.8 Fault Descriptions Table	C-5
C.9 Field and Factory Changes List.....	C-6
C.10 Major Equipment Table.....	C-7
C.11 Materials List.....	C-7
C.12 Protective Devices Index.....	C-8
C.13 References List	C-9
C.14 Required Conditions	C-10
C.15 Safety Conditions List.....	C-10
C.16 Required Persons List (S1000D Only)	C-11
C.17 Special Tools List	C-11
C.18 Test Fault Impacts Table.....	C-12
C.19 Electrical Troubleshooting Index	C-13
C.20 Abbreviations List.....	C-14
C.21 Troubleshooting Procedure-B.....	C-14
C.22 Usable On Codes List.....	C-15
C.23 Group Assembly Parts List (GAPL)	C-16
C.24 Numerical Index of Parts	C-18
C.25 Reference Designation Index.....	C-19

APPENDIX D REQUIREMENTS FOR PREVIOUS (STEP) AND NEXT (STEP) AND RELATION TO OUTER SHELL BACK AND FORWARD.....D-1

D.1 Introduction.....	D-1
D.1.1 General Requirements and Definitions.....	D-1
D.1.2 Other Actions and Functions	D-5
D.2 Step Use cases	D-5
D.2.1 Basic Step Navigation	D-5
D.2.2 Basic Step Branching (Within the same DM or IP)	D-6
D.2.3 Basic Step Navigation with Traverse Hyperlinks (Between DMs or IPs).....	D-8
D.2.4 Step Branching with ‘Yes-No’ Dialog Box (Within the same DM or IP).....	D-10
D.2.5 Step Branching with Multiple Choice Responses (Within the same DM or IP)	D-12

APPENDIX E REQUIREMENT REFERENCES TO OTHER SPECIFICATIONS E-1

List of Tables

Table 3-1 Minimum Screen Resolutions	20
Table 3-2 Alerts	26
Table 3-3 Alert Icons	28
Table 3-4 8 Bit Safe Colors for Alerts	28
Table 3-5 Security Markings and Colors.....	32
Table D - 1 Other Actions & Functions	D-5
Table D - 2 Basic Step Navigation	D-5
Table D - 3 Basic Step Branching	D-8
Table D - 4 Basic Step Navigation with Traverse Hyperlinks	D-10
Table D - 5 'Yes-No' Dialog Box	D-12
Table D - 6 Step Branching with Multiple Choice Responses	D-14

List of Figures

Figure 3-1 Outer and Inner Shells.....	4
Figure 3-2 Inner Shell Features	5
Figure 3-3 IETM ID.....	7
Figure 3-4 Session Control Flow Chart	10
Figure 3-5 Sample TMDER Form.....	15
Figure 3-6 Browser-Safe Web Palette	21
Figure 3-7 Paragraph/Subparagraph Example	23
Figure 3-8 In-line Alerts Display	27
Figure 3-9 Note.....	29
Figure 3-10 Classification Authority Box	32
Figure 3-11 Screen Stacking	33
Figure A - 1 Inner Shell Layout.....	A-2
Figure A - 2 Single Main Frame Layout.....	A-3
Figure A - 3 Upper Lower Dual Frame Layout	A-4
Figure A - 4 Left Right Dual Frames Layout	A-5
Figure A - 5 Quadrant Frame Layout.....	A-6
Figure A - 6 Triple Frame Layout (Upper Left, Upper Right, and Lower)	A-7
Figure A - 7 Triple Frame Layout (Upper, Lower Left, and Lower Right).....	A-8
Figure A - 8 Triple Frame Layout (Upper Left, Lower Left, and Right).....	A-9
Figure A - 9 Triple Frame Layout (Left, Upper Right, and Lower Right)	A-10
Figure A - 10 No TOC Frame Layout.....	A-11
Figure C - 1 Controls and Indicators Table Template	C-2
Figure C - 2 Controls and Indicators Table Example	C-2
Figure C - 3 Displays/Alerts Table Template	C-2
Figure C - 4 Displays/Alerts Table Example	C-3

Figure C - 5 Environmental Conditions List Template.....	C-3
Figure C - 6 Environmental Conditions List Example.....	C-3
Figure C - 7 Equipment, Accessories, and Documents Supplied Table Template.....	C-4
Figure C - 8 Equipment, Accessories, and Documents Supplied Table Example.....	C-4
Figure C - 9 Equipment Modification Table Template.....	C-5
Figure C - 10 Equipment Modification Table Example.....	C-5
Figure C - 11 Fault Descriptor Table Template.....	C-6
Figure C - 12 Fault Descriptor Table Example.....	C-6
Figure C - 13 Field and Factory Changes List Template.....	C-6
Figure C - 14 Field and Factory Changes List Example.....	C-6
Figure C - 15 Major Equipment Table Template.....	C-7
Figure C - 16 Major Equipment Table Example.....	C-7
Figure C - 17 Materials List Template.....	C-8
Figure C - 18 Materials List Example.....	C-8
Figure C - 19 Protective Devices Index Template.....	C-9
Figure C - 20 Protective Devices Index Example.....	C-9
Figure C - 21 References List Template.....	C-9
Figure C - 22 References List Example.....	C-10
Figure C - 23 Required Conditions Template.....	C-10
Figure C - 24 Required Conditions Example.....	C-10
Figure C - 25 Safety Conditions List Template.....	C-11
Figure C - 26 Safety Conditions List Example.....	C-11
Figure C - 27 Required Persons List.....	C-11
Figure C - 28 Special Tools List Template.....	C-12
Figure C - 29 Special Tools List Example.....	C-12
Figure C - 30 Test Fault Impacts Table Template.....	C-13
Figure C - 31 Test Fault Impacts Table Example.....	C-13
Figure C - 32 Electrical Troubleshooting Index Template.....	C-13
Figure C - 33 Electrical Troubleshooting Index Example.....	C-14
Figure C - 34 Abbreviations List Template.....	C-14
Figure C - 35 Abbreviations List Example.....	C-14
Figure C - 36 Troubleshooting Procedure-B Template.....	C-15
Figure C - 37 Troubleshooting Procedure-B Example.....	C-15
Figure C - 38 Usable On Codes List Template.....	C-16
Figure C - 39 Usable On Codes List Example.....	C-16
Figure C - 40 GAPL Template.....	C-17
Figure C - 41 GAPL Example.....	C-18
Figure C - 42 Numerical Index of Parts Template.....	C-19
Figure C - 43 Numerical Index of Parts Example.....	C-19
Figure C - 44 Reference Designation Index Template.....	C-19

Figure C - 45 Reference Designation Index Example..... C-20
Figure D - 1 Step Display in Content Window D-2

Administrative Information

The Technical Information Systems Branch (Code 8210) of the Future Concepts & Design Integration Process Division (Code 82) of the Naval Architecture and Engineering Department (Code 80) at the Naval Surface Warfare Center, Carderock Division (NSWCCD), wrote this report. The work was funded by the NAVAL SUPPLY SYSTEMS COMMAND under work order numbers N0002412WX05718 and N0002413WX07048.

1 INTRODUCTION

1.1 Introduction

This NAVSEA Interactive Electronic Technical Manual (IETM) Viewer Software Performance Requirements document defines the standard requirements necessary for IETM viewer software to satisfy the look, feel, and interaction requirements for NAVSEA IETMs. The requirements specified in this document satisfy adherence to NAVSEA specification MIL-DTL-24784 and the international specification S1000D within the scope of look and feel and viewer/user interaction. The requirements define how the software product is to manage and present/display IETM information to users, as well as, how the product is to support user viewing and interaction with that information. These performance requirements have been created to provide NAVSEA IETM users a familiar, and consistent operation of the viewer software product, and a common look and feel of IETM information presentation. Software products developed to meet these requirements must comply with Department of Navy (DON) information assurance criteria and be certified and approved by the Navy for use within the Navy ship and shore-based information infrastructure. The requirements defined in this document establish an IETM viewer software functional standard that is intended to give developers of NAVSEA IETM viewer software a stable and well-defined requirement, but Acquiring Activities and developers are to be aware that compliance with this standard does not, in itself, assure accreditation and approval of the software product by Navy.

1.1.1 Navy Approved Software

Software satisfying the performance requirements set forth in this document must also satisfy Navy infrastructure and shipboard and Navy Marine Corps Intranet (NMCI) shore requirements. Using approved infrastructure software and components ensures Acquisition Activities of expeditious and successful deployment of publication products. Approved software is listed in the DON Application and Database Management System (DADMS). If proposed viewer software is not already approved, the Preparing and Acquiring Activities must obtain this approval and secure its accreditation within NMCI. The potential for failing to achieve accreditation must be considered and addressed before final delivery of the NAVSEA data and product.

1.1.2 Information Assurance

Software used within the Navy information infrastructure must comply with DON information assurance criteria and be certified and approved for use aboard ship and on the Navy Marine Corps Intranet (NMCI) infrastructure serving shore-based activities. Information assurance includes measures, procedures and precautions that protect and defend information and information systems by ensuring their availability, integrity, authentication, confidentiality, and non-repudiation. Certain types of software, software code, and functions are precluded by Navy information assurance guidelines. In addition, due to shipboard and NMCI security requirements, many commercial hardware and software products either fail to function at all, need some modifications or special procedures to operate, or have security vulnerabilities that must be corrected before being allowed on Navy systems and networks. NMCI does not allow users to install software, or hardware that requires software or drivers, onto NMCI desktops.

All software and applications destined for shipboard installation must be approved and certified by SPAWAR and NETWARCOM. Consequently all software applications and components must be tested, certified compatible with NMCI and/or approved shipboard computing environments, and packaged for deployment to NMCI desktops and ships. In addition, all modifications to a product must be recertified before deployment. To assist activities in using approved software for shipboard use, NAVSEA has established a standard infrastructure for development, management, and use of technical manuals and data (NAVSEAINST 4160.3B). Compatibility and compliance with this infrastructure will ease installation of TM data and applications on ship.

1.2 Scope

This document defines the performance requirements for IETM viewer products that are to be used for NAVSEA IETMs, and in particular, NAVSEA IETMs conforming to NAVSEA specification MIL-DTL-24784 and international specification S1000D. It defines standard screen architecture, uniform presentation of IETM content, and a common presentation of user options irrespective of presentation hardware.

2 APPLICABLE DOCUMENTS, REFERENCES AND ACRONYMS

2.1 General

The documents listed below are not necessarily all of the documents referenced herein but are the ones that are needed in order to fully understand the information provided by this guide. Other references are cited throughout this document where they are used.

2.2 Documents/Standards

1. DoD Instruction 5200.01 , “DoD Information Security Program and Protection of Sensitive Compartmented Information”, www.dtic.mil/whs/directives.
2. DOD Manuals M-5200.01 Volumes 1 through 4, DOD Information Security Program, www.dtic.mil/whs/directives.
3. DoD Instruction 5230.24 Distribution Statements on Technical Documents, <http://www.dtic.mil/whs/directives/corres/pdf/523024p.pdf>.
4. SECNAV Instruction 5510.36, Department Of The Navy (DON) Information Security Program (ISP) Instruction, <http://doni.daps.dla.mil>.
5. SECNAV Manual M-5510.36, DON Information Security Program, <http://www.ncis.navy.mil/securitypolicy/Information/SECNAVINST/SECNAV%20M-5510.36%20-%20Complete%20Manual.pdf>.
6. NAVSEAINST 4160.3, Technical Manual Management Program, <https://nsdsa.nmci.navy.mil>.
7. Web-Based Interactive Electronic Technical Manual (IETM) Common User Interface Style Guide Version 2.0 – NSWCCD-20-TR-2003/05, <http://www.navsea.navy.mil/nswc/carderock/tecinfo/sys/etm/rep-pap-pre/index.html>.
8. S1000D™, the International Specification for Technical Publications utilizing a Common Source Database, www.s1000d.org.
9. MIL-DTL-24784, Detail Specification: Manuals, Technical: General Acquisition and Development Requirements, General Specification for, <https://assistdocs.com>

10. ANSI Z535 Series of Safety Alerting Standards,
<http://www.nema.org/Standards/z535/Pages/default.aspx>.

2.3 Acronyms

ACN	Advanced Change Notice
CALS	Continuous Acquisition and Life-Cycle Support
DWCNs	Dangers, Warnings, Cautions, and Notes
GFE	Government Furnished Equipment
IETM	Interactive Electronic Technical Manual
IPB	Illustrated Parts Breakdown
NAVSEA	Naval Sea Systems Command
NMCI	Navy Marine Corps Intranet
NSWCCD	Naval Surface Warfare Center Carderock Division
PDF	Portable Document Format
QA	Quality Assurance
TM	Technical Manual
TMDER	Technical Manual Deficiency/Evaluation Report
TOC	Table of Contents

3 REQUIREMENTS

3.1 Background

NAVSEA specification MIL-DTL-24784 and the international specification S1000D detail content and development requirements for IETMs. The use of a common internet browser to view IETMs standardizes many user interaction features of the electronic document but also allows unique user interaction features either built into proprietary software products or customized for the IETM by its developer. Two documents (Web-Based Interactive Electronic Technical Manual (IETM) Common User Interface Style Guide Version 2.0 – July 2003; and DoD Handbook for Interoperability of Interactive Electronic Technical Manuals, MIL-HDBK 511, 15 May 2000) have standardized the common style and look and feel requirements of IETMs for NAVSEA developers and users. IETM procurements that require an IETM viewer which conforms to the requirements in these documents will provide common IETM look-and-feel interface. However, mere conformance to these common look and feel requirements does not preclude the underlying components and software, necessary for the user to view the IETM product, from varying from acquisition to acquisition or from being proprietary in nature. The following sections of this document define the standard requirements for IETM viewer software to satisfy the look, feel and interaction requirements for NAVSEA IETMs. This standard NAVSEA IETM viewer software will be called the Viewer, or the NAVSEA Viewer, in the sections below.

3.2 Physical IETM Screen Layouts - The Title Bar and Outer Shell

The NAVSEA Viewer shall produce a display having both an outer shell and an inner shell, Figure 3-1.

3.2.1 Title Bar

The NAVSEA Viewer shall display a horizontal title bar at the top of the screen in the outer shell. The title bar shall include the overall classification of the IETM and the Technical Manual (TM) identification number. Following these entries, the Viewer may also display the IETM title in the horizontal title bar.

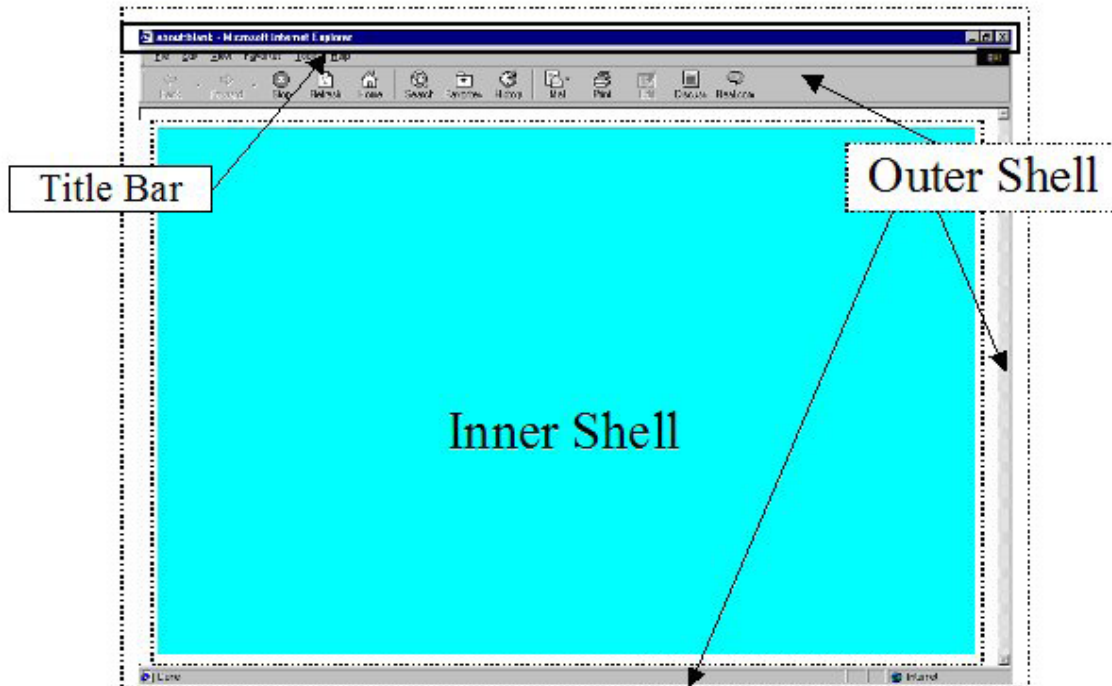


Figure 3-1 Outer and Inner Shells

3.2.2 The Outer Shell

The outer shell is the application/browser window and is the portion of the screen that surrounds the inner shell. The Viewer shall display an outer shell containing a title bar as illustrated in *Figure 3-1*. Specific browsers are not intended to be implied by this example. In addition, the diagrams and screen shots, included in this document, are intended for illustration purposes only and shall not be construed as identifying requirements.

3.3 Physical IETM Screen Layout and Functions - The Inner Shell

The inner shell (see *Figure 3-1*) is the portion of the screen, within the browser shell, provided as the client application display area. The inner shell is the only portion of the screen area under the developer's control. The NAVSEA Viewer shall display the inner shell with the following features as illustrated in *Figure 3-2*.

- Guidepost
- Classification and Distribution Bar
- Navigation Panel
 - Subtitle Bar
 - Main Menu Bar

- Additional Information Bar
- Table of Contents Panel
- Content Window Classification Bar
- Main Content Window
- Status Bar

The Viewer shall display these features satisfying the requirements set forth below.

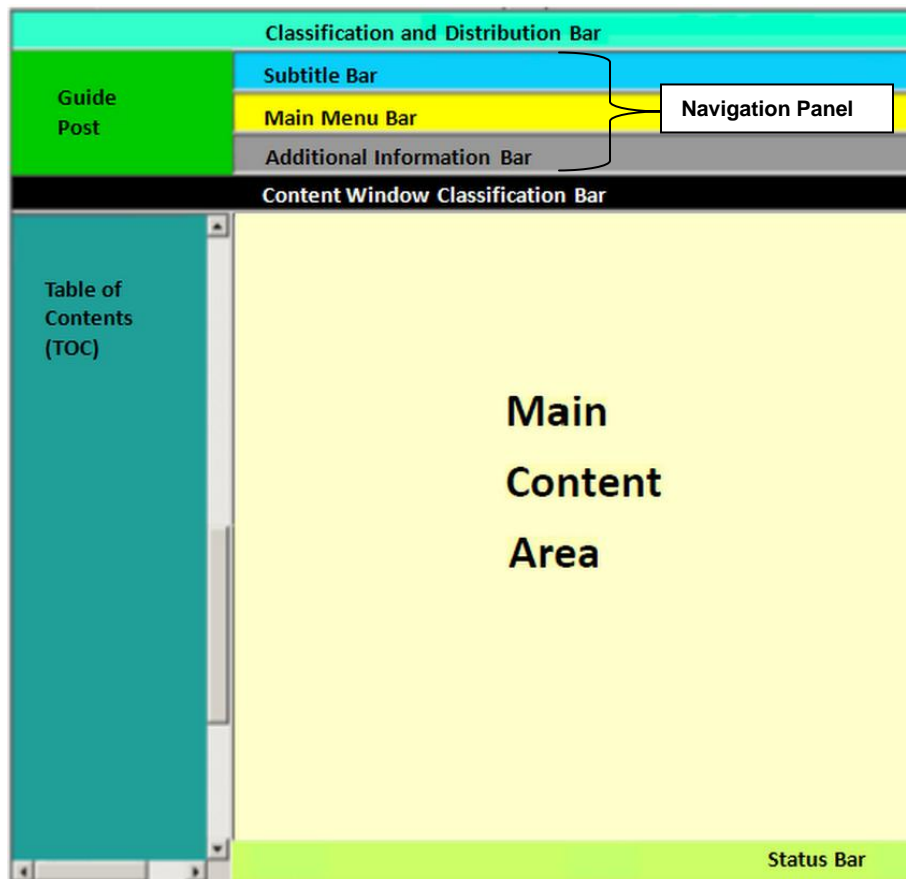


Figure 3-2 Inner Shell Features

3.3.1 Guidepost

The Viewer shall display a drop-down Guidepost menu in the upper left corner of the inner shell. This menu shall provide user access to IETM document information and the ability to return to the standard default user interface. The Viewer may create the Guidepost such that it can be minimized and visually replaced by a compass rose icon. When the Viewer includes the compass rose capability, it shall allow the user to toggle back and forth between the compass rose icon and the full Guidepost. Upon user selection of the Guidepost function when viewing an IETM, the Viewer shall display a drop-down menu listing the following function names in this exact order, top to bottom: Reset User Interface, IETM ID, Revision Summary, Safety Summary, Navy Distance Support, Feedback, Certification Sheet, Print Current Window, and Suspend Session. The Viewer may display, after these standard guidepost functions, other

optional custom functions requested by an IETM Acquiring Activity. Exit is a standard guidepost function and will always be the last function listed on the Guidepost. The Viewer shall gray out any of the Guidepost functions that are not applicable to the data being displayed. The Viewer requirements for the Guidepost drop-down menu functions are described below.

3.3.1.1 Reset User Interface

The Viewer shall allow the user to reset the user interface to the initial user interface displayed upon normal IETM start-up. The initial user interface is the default user interface. Prior to resetting the user interface, the user shall be asked whether the user interface should be reset. Upon user selection of the Reset function, the Viewer shall display a dialog box with an OK button and Cancel button at the bottom, and the following three selections: “Refresh the whole IETM view”, “Refresh current module”, and “Change applicability and refresh whole IETM view”. Upon user selection of “Refresh the whole IETM view” the Viewer shall close all open modules and reset the Table of Contents in the IETM. Upon user selection of “Refresh current module” the Viewer shall refresh only the module within which the user is working. Upon user selection of “Change applicability and refresh whole IETM view”, the Viewer shall display the applicability options and, upon selection, shall refresh the whole IETM view as described above.

3.3.1.2 IETM ID

Upon user selection of the IETM ID function, the Viewer shall display administrative information, typically shown on a paper technical manual title page, in a separate window. This information includes security classification, TM identification number, revision number, manual title, type of manual, maintenance level(s), prime title, subtitle, manufacturer, contract number, seal, supersedure notice, supplement notice, disclosure notice, distribution statement, export control notice, destruction notice, copyright and proprietary information credit line, classification authority box, stock number, publishing authority, and publication date as applicable.

SECURITY CLASSIFICATION//Caveat		
TMIN	TYPE OF PUBLICATION MAINTENANCE LEVELS	REVISION NO.
Add'l TMIN	(PRIMARY TITLE) NOMENCLATURE OF EQUIPMENT (TYPE, MODEL, PART NUMBER, NATIONAL STOCK NUMBER)	HEADING/ISSUE STATUS
Add'l TMIN		
Add'l TMIN		
Add'l TMIN		
SUBTITLE		Seal
Manufacturer of Equipment Contract Number		
Supersede notice		
Supplement notice		
DISCLOSURE NOTICE		Seal
DISTRIBUTION STATEMENT		
Export Control Notice/WARNING		
DESTRUCTION NOTICE		
Copyright credit line		
'Classified by:' (person & position, office of origin) 'Reason:' (text) 'Derived from:' (the agency and, where available, the office of origin, and the date of the source or guide). If the information is derived from multiple sources, the words "Multiple Sources" shall be placed after 'Derived From:' and a link to a list of the multiple sources shall be provided. (optional) 'Downgrade to:' (text) 'on' (date) (optional) 'Upgrade to:' (text) 'on' (date) 'Declassify on:' (date or other text)		
Stock Number	PUBLISHING AUTHORITY	
SECURITY CLASSIFICATION//Caveat		
PUBLICATION DATE		

Figure 3-3 IETM ID

3.3.1.3 Revision Summary

Upon user selection of the Revision Summary function, the Viewer shall display the administrative information summarizing all of the revisions for the currently open IETM. The Viewer shall include in this summary hotlinks providing the user access to the various places within the IETM where the changes were made. The Revision Summary shall be auto-generated based on XML tags or attributes containing the reason for the change.

3.3.1.4 Safety Summary

Upon user selection of the Safety Summary function, the Viewer shall display the Safety Summary. The Safety Summary emphasizes the proper use of controls, describes the hazards to maintenance personnel and potential damage to the equipment, and recommends precautions, and includes warnings and dangers applicable to hazardous materials and related information.

3.3.1.5 Navy Distance Support

Upon user selection of the Navy Distance Support function, the Viewer shall provide the user information on contacting Navy Distance Support in a separate window.

3.3.1.6 Feedback

Upon selection of the Feedback function, the Viewer shall display menu options for the Technical Manual Deficiency/Evaluation Report (TMDER) website URL (TMDER Website), the locally stored TMDER (TMDER PDF) and other Feedback (Other Feedback). (See 3.3.5.6 *Feedback* for more details.)

3.3.1.6.1 TMDER Website

When the user selects the TMDER Website option, the Viewer shall launch the TMDER tool URL. The TMDER tool URL will be provided as GFE to IETM Acquiring Activities/IETM developers.

3.3.1.6.2 TMDER PDF

For users without Internet access or needing to obtain command approval before submittal, the Viewer shall provide an interactive PDF TMDER. (See 3.3.5.6.2 *TMDER PDF* for more details.)

3.3.1.6.3 Other Feedback

The Viewer shall allow the user to initiate and submit other feedback forms, reports and required administrative and technical data, including Maintenance Corrections Reports (MCRs), and the ordering of repair parts. (See 3.3.5.6.3 *Other Feedback* for more details.)

3.3.1.7 Certification Sheet

Upon user selection of the Certification Sheet function, the Viewer shall display the IETM Certification Sheet. Note: If the Certification Sheet is not available, this feature shall be grayed out from the Guidepost. Since the Certification Sheet is an optional requirement specified by the IETM Acquiring Activity at TMCR/TMSR creation, the Viewer need only provide the means to view a completed Certification Sheet if one is available.

3.3.1.8 Print Current Window

Upon user selection of the Print Current Window function, the Viewer opens a separate window and creates a PDF document of the content currently open/being displayed within the Main Content Window, including scrolled off content. The user can then elect to print the file (PDF) created by the Viewer.

3.3.1.9 Session Control

The Viewer shall support Session Control with the capability to Suspend, Resume or Abort a session. The only function that shall be available from the guidepost is Suspend Session. If an IETM does not include the Suspend Session function, it shall appear in the guidepost but shall be grayed out. The Viewer shall allow the user to suspend a session at any time (e.g., for a break or emergency) by selection of the Suspend Session function. Suspend Session saves the state table and history log and sets up the capability for resumption via Resume Session upon re-entry of the IETM. Both Resume Session and Abort Session functionality shall only be available at the initial startup of the IETM when a saved suspended session exists. Only one suspended session save per user/user login (see 3.7.4 *Login*) is allowed. If multiple users are assigned the same 'user'

login, then only one suspended session per IETM will be allowed per standalone/disconnected device. Having multiple users with the same assigned 'user' login on a server is disallowed since disambiguation of which user is doing what creates a very hazardous situation. If IETMs are being used on thin clients fed from a server, then each user shall have an individually unique login.

Upon user selection of the Suspend Session function from the Guidepost, the Viewer will display a dialog box stating "Suspend Session will save the history log and current location for this session and exit the IETM." with an OK button and a Cancel button. The history log and location for this IETM session shall be saved against this IETM for the current user. The IETM will then exit.

Upon opening an IETM with Session Control, the Viewer shall verify whether the Viewer has a suspended session. If a suspended session is found, the user shall be prompted whether to open the IETM with the saved suspended session (Resume Session), to keep the saved session but open the IETM under a new session, or to abort (delete) the saved session and continue to open the IETM under a new session.

If the user chooses Resume Session, the Viewer shall provide a DANGER prompt with an OK button which must be acknowledged. The DANGER prompt shall read: "DANGER: Be aware that during the suspended session, this IETM has not tracked any key parameters or condition settings that may have changed (e.g., power situation, maintenance mode, temperature change) and/or other personnel may have worked on the end-item/platform making changes. Thus, proceed with extreme Caution. If resuming at a step of a procedure, you MUST use Prev (Step) to step backwards to the very beginning of the procedure before restarting work." The Viewer shall then re-start the session at the point at which it was suspended. The Viewer will load the saved state table and history into memory and remove the capability to resume the saved session. To resave the session, the user will need to suspend the session again.

If a user chooses to keep the previously suspended session and open a new session the Viewer will prompt the user with a Note that the current session may not be suspended because there is already a suspended session saved. If the user aborts the saved session, the Viewer shall display a dialog box asking the user "All history of this suspended session will be deleted. Are you sure you want to abort this session?" with an OK button and a Cancel button.

Selecting the Abort function upon entrance into the IETM shall erase any saved suspended session for the current user. However, if the permanent audit trail functionality (see 3.7.5 *Audit Trail*) is specified, then this partial session shall be saved to the permanent file with the last entry being 'Session Aborted'. The Viewer then opens a new IETM session.

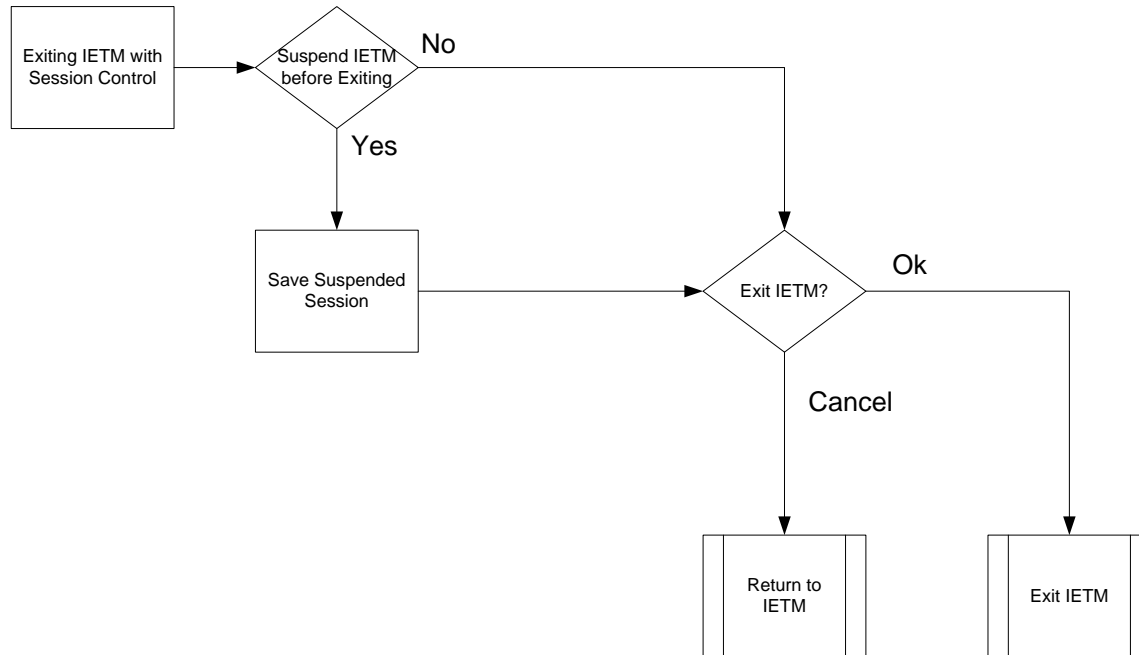


Figure 3-4 Session Control Flow Chart

3.3.1.10 Exit

Upon user selection of the Exit function, the Viewer shall display a dialog box asking the user “Are you sure you want to close the technical manual?” with a selectable OK button and a Cancel button. Upon selection of OK, the Viewer initiates the exit process. The user of the IETM shall always be asked for confirmation before the IETM exit process is executed. If the IETM has optional session control functionality, another method to exit the IETM is to use the Suspend Session function from the Guidepost (see 3.3.1.9 *Session Control*).

When a user Exits the current IETM, the history log for the session shall be cleared. When the user re-enters the same IETM, a new history shall be started. However, if the permanent audit trail functionality is specified, then prior to clearing the session it shall be saved to the permanent file with the last entry indicating that the session has been exited.

3.3.2 Classification and Distribution Bar

The Viewer shall display the Classification and Distribution Bar as a persistent horizontal bar across the top of the inner shell. It shall be displayed such that it cannot be toggled on and off. The Viewer shall display within the Classification and Distribution Bar the overall classification of the entire IETM, an indication of the special handling instructions, which are caveats for S1000D (i.e., FOUO), and shall also display the distribution statement identifier (i.e., “DISTRIBUTION STATEMENT E”) for the IETM. The Viewer shall color the background displayed in the Classification and Distribution Bar to reflect the classification level of the IETM. Classification markings and Distribution Statements shall be in compliance with current DoD/DON/NAVSEA requirements (see 2.2 *Documents/Standards*). Security markings and colors with their hex codes can be found in *Table 3-5 Security Markings and Colors*.

3.3.3 Navigation Panel

The Navigation Panel is comprised of multiple bars in the following sequence: Subtitle bar, Main Menu bar, and Additional Information bar. The Navigation Panel will appear above the Main Content Window. The position of the Navigation Panel must remain consistent throughout the application.

3.3.4 Subtitle Bar

The Viewer shall display a horizontal bar, called a Subtitle Bar, above the Main Menu Bar to display the title of the information being displayed in the Main Content Window.

3.3.5 Main Menu Bar

The Viewer shall display a Main Menu Bar as a horizontal bar across the inner shell below the Subtitle Bar. Within the Main Menu Bar, the Viewer shall provide the following minimum set of functions, which shall appear in exactly this order and left justified, on the bar: Previous, Next, TOC, History, Search, Print, Feedback, Exit, Help, and IDSTATUS (S1000D only). The Viewer shall allow the user to select any one of these functions. The Viewer shall gray out those functions not available at any point in the user interaction with the IETM display. The Viewer may display the icons associated with the functions but the text must always be displayed. See *B.1 Suggested Icons and Symbols* for suggested icons for the functions. The Viewer performance requirements upon user selection of these functions are identified below.

3.3.5.1 Previous and Next

The Viewer shall provide Previous and Next functions on the Main Menu Bar that allow the user to traverse a procedure in a sequential manner. The Viewer shall cause the Previous and Next functions to be inoperable, and shall display them as grayed out, when the user is not in a procedure. For procedural information, fault information, maintenance checklists and inspections, training/learning information, and respond-compute information (e.g., process data module, dialog driven), the use of additional navigation functionality is needed. Appendix D details the actions within a Viewer state-table for how Next and Previous are to be processed.

3.3.5.2 Table of Contents (TOC)

Upon user selection of the TOC function on the Main Menu Bar, the Viewer shall toggle the Table of Contents Panel on and off in the display.

3.3.5.3 History

The Viewer shall have a navigational history function that tracks and logs each location (link) a user has visited since the IETM was first entered which shall constitute the beginning of a session. Upon selection of the History function, on the Main Menu Bar, the Viewer shall display a selectable list of the locations that the user previously visited during that session. Through selection, the user may return to any location within the session. The log shall only be appended and shall retain all locations in the order visited without alteration.

The Viewer shall not display any history of locations until a user begins an IETM session by entering an IETM. When a user Exits the current IETM, the history log for the session shall be cleared. When the user re-enters the same IETM or enters another IETM, a new history shall be

started. However, if the permanent audit trail functionality is specified by the IETM Acquiring Activity as a Viewer option during publish time, then prior to clearing the session the history log shall be saved to a permanent file with the last entry indicating that the session has been exited. (See 3.7.5 *Audit Trail* for more details).

If the IETM has optional session control capabilities such as Suspend and Resume, the session (history log) shall be handled as follows:

1. If a user Suspends a session, via the Guidepost – Suspend Session, and upon verification that the user wants to suspend the session, the history log for this IETM session shall be saved against this IETM for the current user. The IETM will then exit.
3. If a user starts the IETM under a new session, the history log will start with an empty log.
4. If the user starts the IETM with an earlier suspended session using Resume session, the history log from the suspended session shall be loaded into history and the IETM will start where the user suspended the session. As a part of this resumption of the IETM, the saved state shall be fully restored to include any minimized alerts (e.g., Danger, Warning, Caution, etc.)
5. If the user starts the IETM as a new session but saves the previous suspended session, the history log for the earlier suspended session shall remain saved. The history log for the new session will start with an empty log.
6. If the user starts the IETM as a new session but aborts the previous suspended session, the history log shall erase any saved suspended session. However, if the permanent audit trail functionality is specified, then this partial session shall be saved to the permanent file with the last entry being ‘Session Aborted’.

3.3.5.4 Search Function

Upon user selection of the Search function, the Viewer shall display a search field to allow the user to search for items in the IETM. The Viewer shall support full text, context (categorical), and Boolean searches. The categories for context searches shall include TOC Titles, Topic Titles (24784C only), Figure Titles, Table Titles, Part Numbers, Part Nomenclature (S1000D only), Cage Code, Fault Code, Data Module Codes (S1000D only), and Data Module Titles (S1000D only). The Viewer shall search the IETM for the selected items and display the linked results in the Main Content Window. For Boolean searches, commonly supported logic include instances where both x and y appear (Logical AND), instances where neither x nor y appear (Logical NOR), and instances where only x or only y appear (Logical EXCLUSIVE OR).

3.3.5.5 Print

IETM printing involves printing a part of the manual, such as an information package, paragraph, table, or graphic. The Viewer shall limit printing and copying to sections, paragraphs, logical chunks of data, individual tables, and individual graphics and shall not allow printing of the entire IETM. In addition to the printed technical data, the Viewer shall also print, as specified below, time/date stamps, persistent alerts, classification and special handling instruction markings, distribution statements, destruction notices, and TMINS number, in accordance with DODI 5230.24.

The Viewer shall include the security classification, special handling instruction markings, distribution statement and TMINS in the header of each page of all printed content. The Viewer shall provide, in either the header or the footer of each printed page, the revision number of the IETM selection being printed and printed date/time stamp. In the footer of each printed page, the Viewer shall print the following text: “Printed from Electronic Source. Changes may have occurred since printing. Destroy after 14 days.” The Viewer shall print in both the header and the footer of each printed page: “Working Papers”. The Viewer shall assume the available printer can print only black-and-white and ensure that any use of color lends itself to black and white printing.

The Viewer shall provide a print-on-demand feature allowing printing of logical parts of the manual such as an information package or a set of instructions. The Viewer shall present information to the user to support the printing of a logical chunk of data such as a set of instructions, an operating procedure, or a diagram.

Upon user selection of the Print function on the Main Menu Bar, the Viewer shall display a drop-down menu containing the following options, in this order: Print Current Window, Print Current Module, Print Module Figures, and Print Current Figure. Upon selection of the Printer function options, the traditional printer options such as “select printer to use” or “number of copies” will appear. Viewer requirements for these options follow.

3.3.5.5.1 Print Current Window

Upon selection of Print Current Window, the Viewer shall print only the technical data in the window currently being viewed by the user, including material that is scrolled off the screen.

3.3.5.5.2 Print Current Module

Upon selection of Print Current Module, the Viewer shall print the technical data contained within the IETM module containing the data currently being viewed by the user.

3.3.5.5.3 Print Module Figures

Upon selection of Print Module Figures, the Viewer shall print all of the figures contained within the IETM module containing the data currently being viewed by the user.

3.3.5.5.4 Print Current Figure

Upon selection of Print Current Figure, the Viewer shall print the figure currently being viewed by the user.

3.3.5.6 Feedback

Upon selection of the Feedback function, the Viewer shall display menu options for the Technical Manual Deficiency/Evaluation Report (TMDER) website URL (TMDER Website), the locally stored TMDER (TMDER PDF) and other Feedback (Other Feedback). These options will allow the user to initiate and submit a TMDER and other feedback forms, reports and other required administrative and technical data, including Maintenance Corrections Reports (MCRs), and the ordering of repair parts. For an IETM with Session Control, the Audit Trail shall be saved at selection of the Feedback function and shall be transparent to the user and of use to administrative and quality assurance personnel. The audit trail shall capture all user and IETM

interaction. The Viewer shall provide to the user the ability to choose an audit trail record, by selecting the desired trail, and display a log of all interactions of that IETM session.

3.3.5.6.1 TMDER Website

When the user selects the TMDER Website option, the Viewer shall launch the TMDER tool URL. The TMDER tool URL will be provided as GFE to IETM Acquiring Activities/IETM developers.

3.3.5.6.2 TMDER PDF

For users without Internet access or needing to obtain command approval before submittal, the Viewer shall provide an interactive PDF TMDER. When the user selects the TMDER PDF option, the Viewer shall display a separate out-line window containing the PDF Technical Manual Deficiency/Evaluation Report (TMDER) form NAVSEA 4160/1 (see *Figure 3-5*) in such a manner that it can be filled out by the user. The Viewer shall allow the user to complete the form, save the form, and print the form for mailing. The Viewer shall display the Out-Line Window with the fill-in form such that it can be moved by the user in order to see and reference the IETM on which the TMDER is being submitted. The Viewer shall automatically generate an electronic locator (e.g., address, version) and, to the greatest extent possible, shall automatically fill-in relevant fields on the form (e.g., user ID, system state, originator information, etc.). The Viewer shall display a "Form fill-in completed" function which must be selected by the user before returning to the IETM (e.g., "done," "okay," "close-out," "cancel".) Upon selection of the Form Fill-in Completed function, the Viewer shall close the TMDER out-line window and return to display of the position and state of the IETM when the TMDER function was selected. The interactive PDF TMDER form will be provided as GFE to IETM Acquiring Activities/IETM developers.

Ref: NAVSEAINST 4160.3 NAVSEA S0005-AA-GYD-030/TMMP				
NAVSEA/SPAWAR TECHNICAL MANUAL DEFICIENCY/EVALUATION REPORT (TMDER)				
INSTRUCTIONS: Continue on 8 1/2" x 11" on page if additional space is needed. 1. Use this report to indicate deficiencies, problems and recommendations relating to publications. 2. For CLASSIFIED TMDERs see OPNAVINST 5510H for mailing requirements. 3. For TMDERs that affect more than one publication, submit a separate TMDER for each. 4. Submit TMDERs at web site https://nsdsa.nmci.navy.mil or mail to: COMMANDER, CODE 310 TMDERs, NAVSURFWARCENDIV NSDSA, 4363 MISSILE WAY BLDG 1389, PORT HUENEME CA 93043-4307				
1. PUBLICATION NUMBER	2. VOL/PART	3. REV/DATE OR CHG/DATE	4. SYSTEM/EQUIPMENT ID	
5. TITLE OF PUBLICATION			6. REPORT CONTROL NUMBER (6 digit UIC-YY-any four: xxxxxx-10-xxxx)	
7. RECOMMEND CHANGES TO PUBLICATION				
7a. Page #	7b. Para #	7c. RECOMMENDED CHANGES AND REASONS		
8. ORIGINATOR'S NAME AND WORK CENTER		9. DATE	10. ORIGINATOR'S E-MAIL ADDRESS	11. TMMA of Manual (NSDSA will complete)
12. SHIP OR ACTIVITY Name and Address (Include UIC/CAGE/HULL)			13. Phone Numbers:	
			Commercial () - - DSN - - FAX () - -	

NAVSEA 4160/1 (Rev. 9-2010)

S/N 0116-LF-985-4100

Figure 3-5 Sample TMDER Form

3.3.5.6.3 Other Feedback

The Viewer shall allow the user to initiate and submit other feedback forms, reports and required administrative and technical data, including Maintenance Corrections Reports (MCRs), and the ordering of repair parts. IETM Acquiring Activities shall have the capability to tailor this requirement to meet their needs, and when utilizing this functionality, IETM Acquiring Activities shall provide appropriate static or interactive forms, electronic addresses, and/or mailing addresses.

3.3.5.7 Exit

The Exit function initiates the exit process. Upon selection of the Exit function, the Viewer shall ask the user for confirmation before the IETM exit process is completed. If the IETM has session control capabilities such as Suspend and Resume, then additional dialogs shall appear prompting the user of what course of action to take.

3.3.5.8 Help

Upon selection of the Help function, the Viewer shall display a list of the available help such as IETM specific browser help, standard browser help, and help on how to use and navigate through the IETM.

3.3.5.9 IDSTATUS (S1000D only)

The Viewer shall display the IDSTATUS Info function only for S1000D IETMs. Upon selection of this function, the Viewer shall display the IDSTATUS metadata for the current data module in the Main Content Window. This data shall include the data module code, issue number and date, classification, responsible company code, and QA status. While the IDSTATUS data is being displayed, the Viewer shall change the title of this function in the Main Menu Bar to Hide IDSTATUS Info. Upon selection of the Hide IDSTATUS Info function, the Viewer shall remove the IDSTATUS metadata from the display and return to what was displayed before Display IDSTATUS Info was first selected.

3.3.6 Additional Information Bar

The Viewer shall display an Additional Information Bar as a horizontal bar across the inner shell below the Main Menu Bar. Within the Additional Information Bar, the Viewer shall provide the following minimum set of functions: Back, Forward, Applicability, and Annotations. IETM Acquiring Activities may require functions in addition to the minimum set. The Viewer shall gray out those functions not available at any point in the user interaction with the IETM display. The Viewer may display the icons associated with the functions but the text must always be displayed. See *B.1 Suggested Icons and Symbols* for suggested icons for the functions on the Additional Information Bar. Specific requirements for each of the Additional Information Bar functions are set forth below.

3.3.6.1 Back

Upon entering an IETM, the Viewer shall display the Back function as grayed out and not operable. The Back function shall not become active until the user has navigated/traversed at least two displays. In this case, upon user selection of the Back function/icon on the Additional Information Bar, the Viewer shall display the last previous display that the user was viewing.

3.3.6.2 Forward

Upon entering an IETM, the Viewer shall display the Forward function as grayed out and not operable. The Forward function shall not become active until the user has navigated/traversed at least one display and has returned to a display using the Back function. In this case, upon user selection of the Forward function/icon on the Additional Information Bar, the Viewer shall display the next display the user was viewing.

3.3.6.3 Applicability

Upon user selection of the Applicability function/icon on the Additional Information Bar, the Viewer shall display the current applicability of the IETM and allow the user to change the applicability. Applicability is the ability of the IETM viewer or presentation system to automatically display the relevant information applicable to the existing configuration. The Viewer shall provide the user a mechanism for entering/modifying configuration parameters and the Viewer shall be able to filter by configuration, that is, the Viewer shall narrow the information presented to the user to that information associated with a specific configuration of the end item. For example, filtering might include filtering by hull type, ship class, ship alterations, or field changes.

3.3.6.4 Annotations

Under the Annotations function, the Viewer shall provide to system administrators and users the ability to place special bookmarks and notes within an IETM. The default for annotations is that they are public information for all users such as special information that requires rapid deployment to the manual holders like Advance Change Notices (ACNs). Optionally, annotations can be private remarks needed only by the user such as to assist in their training. Upon user selection of the Annotations function, the Viewer shall display a drop-down menu containing the following options: Add Bookmark, Add Note, and Manage Bookmarks/Notes. Viewer requirements for these options are listed below. For annotations, the Viewer shall also satisfy the following requirements:

- The Viewer shall display a persistent visual indication that an annotation exists. The visual indication for Bookmarks shall be different from that for Notes. When the annotation is private, the visual indication shall only be visible to the owner/creator of the private annotation.
- The default initial presentation of annotations is to appear minimized.
- The Viewer shall visually differentiate public annotations from private annotations.

Note: In development of the Annotation function within the Viewer, NMCI and IT21 requirements should be explored to determine the path where annotations are saved.

3.3.6.4.1 Add Bookmark

The Viewer shall provide a means for the user to mark areas of interest within the IETM to facilitate future access. Bookmarks may be a way for users to mark “Favorites” and “Shortcuts.” Upon selection of Add Bookmark, the Viewer shall allow the user to enter a title for the book

mark. The Viewer shall default to public bookmarks. If the Viewer permits both private and public bookmarks, it shall allow the user to select whether the bookmark is public or private.

3.3.6.4.2 Add Note

The Viewer shall provide the Add Note function to enable system administrators and users to place special information within a manual in the form of notes, or annotations. The Viewer shall default Notes to being public. Optionally the Viewer may provide the option that the notes or annotations may be either public information accessible by all users (as may be the case with “Advance Change Notices” that require rapid deployment to the manual holders), or private notes needed only by the user for his own purposes. Upon user selection of Add Note, the Viewer shall allow the user to enter a title for the annotation in the empty field next to Title, enter the substance of the annotation in the empty field next to Note, and then allow the note to be public by selecting the Public Annotation option. The Viewer shall display a warning, in the Add Note dialog box stating “Information contained in a note does not supersede information contained in the document.”

3.3.6.4.3 Manage Bookmarks/Notes

Upon user selection of the Manage Bookmarks/Notes function, the Viewer shall list public annotations/notes that have been created within the IETM, and, if private annotations are allowed, private annotations created by the user. The Viewer shall list each annotation by Type (public or private and bookmark or note), Title and Creator. The Viewer shall display annotations that were not made public only to the user who created them. The Viewer shall allow the user to manage the annotations using the following functions, Edit, GoTo, Delete, and Delete All in the menu bar at the top of a dialog box.

3.3.6.5 Additional Content

The Viewer shall provide a quick means to readily access the following information: Task, Reference Material, Material Required, and Support Equipment. As the current data display may make some functions inoperable, the Viewer shall gray out any of the additional content functions that are not applicable to the actual IETM content being displayed.

3.3.7 Table of Contents (TOC) Panel

The Viewer shall display on the left side of the inner shell below the Guidepost a resizable area to display the Table of Contents, list of illustrations which includes multimedia, and list of tables. This resizable area and its contents shall be called the Table of Contents (TOC) Panel. This area shall have a resizable right-side border (so that the TOC area can be increased or reduced in size by selecting and dragging the right side border to the right or left, respectively). The Viewer shall display the full name of the TOC item when the user hovers the cursor over a TOC item. The Viewer shall indicate the security classification, if any, of paragraph titles, figure titles, and table titles in the TOC (see 3.6.4 *Security Markings*). All entries shall be linked to the actual subject matter.

The Viewer shall provide access to the TOC via a hierarchical breakdown such as system/subsystem, content functional or physical hierarchy, or by means of graphical interfaces. Note: The breakdown, based on the arrangement of content, can be enforced by the DTD or the publishing process. Example: The publishing process could arrange the TOC by identified DTD

elements, i.e., for S1000D, information codes or schema types, and for 24784C, Information Module and Information Package DTD types.

The Viewer shall expand and contract sections that are selected by the user. The Viewer may optionally display the TOC with a drill-up/drill-down function. If supported, drill-up/drill-down buttons shall be displayed above the TOC to allow the user to move through the fully expanded TOC. Drill-up moves the user back up hierarchically through the fully expanded TOC and drill-down moves the user down through the fully expanded TOC. A TOC is fully expanded when all levels of the TOC are displayed.

When either the list of illustrations or list of tables is selected, the full TOC shall be hidden and the chosen list shall be displayed in the TOC display area. As an option, the TOC may stay persistent and the list of illustrations (LOI) and list of tables (LOT) may appear after the last entry in the TOC. The Viewer shall indicate the security classification, if any, of figure and table titles in the LOI and LOT. The Viewer shall allow the user to select a list item and access the information presented in the selected item.

3.3.8 Main Content Window

The Main Content Window is the area of the inner shell below the Navigation Panel and above the Status Bar. The Viewer shall display the text and graphics of the IETM in the Main Content Window area. This area may be divided into separate panes but shall not be divided into more than 4 panes. The Viewer shall display and arrange screens and panes in accordance with Appendix A.

3.3.8.1 Content Window Classification Bar

The Viewer shall display the Content Window Classification Bar as a horizontal bar across the top of the main content window. It shall be displayed such that it cannot be toggled on and off. The Viewer shall display within the Content Window Classification Bar the classification marking for what is currently shown in the Main Content Window. The Viewer shall display the classification level of the highest level for the specific content chunk being displayed (e.g., if screen-by-screen then the chunk is a screen; if scrollable-file-by-scrollable-file, then the chunk is the scrollable-file). The Viewer shall color the background displayed in the Content Window Classification Bar to reflect the classification level of the IETM in accordance with *Table 3-5 Security Markings and Colors* (paragraph 3.6.2.9.1).

Note: The classification marking that appears in the Title Bar of the outer shell is the overall classification of the entire IETM.

3.3.9 Status Bar

The Status Bar shall be a horizontal bar located at the bottom of the inner shell. The Viewer shall display in the Status Bar status information including status indicators and icons for active dangers, warnings, cautions, and notes.

3.4 Icons

Appendix B contains suggested icons to be used in the Viewer. These or similar icons shall be used by the Viewer.

3.5 Screen Resolutions

The IETM display area and screen resolution are driven by the size and resolution of the display devices used to present/view the IETM while allowing areas for TOC, menu bars, and navigational controls. IETM and viewer application planners and developers must carefully plan for the size and resolutions of existing and anticipated display devices and technology. The Viewer shall successfully display the IETM on current and expected devices being used in the Fleet.

The minimum screen resolutions for desktops, laptops, smart phones, electronic books, and tablets are provided in *Table 3-1 Minimum Screen Resolutions*.

Device	Minimum Screen Resolutions
PC and laptop	800 x 600 pixels
Smart phone	480 x 800 pixels
Electronic book and tablet	800 x 600 pixels

Table 3-1 Minimum Screen Resolutions

3.6 Style and Format Requirements

This section covers generalized presentation requirements of an IETM and does not cover specific content issues.

3.6.1 Text and Display Colors

Unless otherwise specified herein, the Viewer shall display text as black (#000000) and background as white (#FFFFFF). This aids in support of printing without loss of content. For operational exceptions, such as night ops and where color has special meaning, the Viewer shall use the browser-safe color palette shown in *Figure 3-6* which shows the 216 windows colors with their corresponding HEX values and RGB values. The source for this figure is <http://www.lynda.com/resources/webpalette.aspx>.

990033 R: 153 G: 000 B: 051	FF3366 R: 255 G: 051 B: 102	CC0033 R: 204 G: 000 B: 051	FF0033 R: 255 G: 000 B: 051	FF9999 R: 255 G: 153 B: 153	CC3366 R: 204 G: 051 B: 102	FFCCFF R: 255 G: 204 B: 255	CC6699 R: 204 G: 051 B: 153	993366 R: 153 G: 051 B: 102	660033 R: 102 G: 000 B: 051	CC3399 R: 204 G: 051 B: 153	FF99CC R: 255 G: 153 B: 204	FF66CC R: 255 G: 102 B: 204	FF99FF R: 255 G: 153 B: 255	FF6699 R: 255 G: 102 B: 153	CC0066 R: 204 G: 000 B: 102
FF0066 R: 255 G: 000 B: 102	FF3399 R: 255 G: 051 B: 153	FF0099 R: 255 G: 000 B: 153	FF33CC R: 255 G: 051 B: 204	FF00CC R: 255 G: 000 B: 204	FF66FF R: 255 G: 102 B: 255	FF33FF R: 255 G: 051 B: 255	FF00FF R: 255 G: 000 B: 255	CC0099 R: 204 G: 000 B: 153	990066 R: 153 G: 000 B: 102	CC66CC R: 204 G: 102 B: 204	CC33CC R: 204 G: 051 B: 204	CC99FF R: 204 G: 153 B: 255	CC66FF R: 204 G: 102 B: 255	CC33FF R: 204 G: 051 B: 255	993399 R: 153 G: 051 B: 153
CC00CC R: 204 G: 000 B: 204	CC00FF R: 204 G: 000 B: 255	9900CC R: 153 G: 000 B: 204	990099 R: 153 G: 000 B: 153	CC99CC R: 204 G: 153 B: 204	996699 R: 153 G: 102 B: 153	663366 R: 102 G: 051 B: 102	660099 R: 102 G: 000 B: 153	9933CC R: 153 G: 051 B: 204	660066 R: 102 G: 000 B: 102	9900FF R: 153 G: 000 B: 255	9933FF R: 153 G: 051 B: 255	9966CC R: 153 G: 102 B: 204	330033 R: 051 G: 000 B: 051	663399 R: 102 G: 051 B: 153	6633CC R: 102 G: 051 B: 204
6600CC R: 102 G: 000 B: 204	9966FF R: 153 G: 102 B: 255	330066 R: 051 G: 000 B: 102	6600FF R: 102 G: 000 B: 255	6633FF R: 102 G: 051 B: 255	CCCCFF R: 204 G: 204 B: 255	9999FF R: 153 G: 153 B: 255	9999CC R: 153 G: 153 B: 204	6666CC R: 102 G: 102 B: 204	6666FF R: 102 G: 102 B: 255	666699 R: 102 G: 102 B: 153	333366 R: 051 G: 051 B: 102	333399 R: 051 G: 051 B: 153	330099 R: 051 G: 000 B: 153	3300CC R: 051 G: 000 B: 204	3300FF R: 051 G: 000 B: 255
3333FF R: 051 G: 051 B: 255	3333CC R: 051 G: 051 B: 204	0066FF R: 000 G: 102 B: 255	0033FF R: 000 G: 051 B: 255	3366FF R: 051 G: 102 B: 255	3366CC R: 051 G: 102 B: 255	000066 R: 000 G: 000 B: 102	000033 R: 000 G: 000 B: 051	0000FF R: 000 G: 000 B: 255	000099 R: 000 G: 000 B: 153	0033CC R: 000 G: 051 B: 204	0000CC R: 000 G: 000 B: 204	336699 R: 051 G: 102 B: 153	0066CC R: 000 G: 102 B: 204	99CCFF R: 153 G: 204 B: 255	6699FF R: 153 G: 153 B: 255
003366 R: 000 G: 051 B: 102	6699CC R: 102 G: 153 B: 204	006699 R: 000 G: 102 B: 153	3399CC R: 051 G: 153 B: 204	0099CC R: 000 G: 153 B: 204	66CCFF R: 102 G: 204 B: 255	3399FF R: 051 G: 153 B: 255	003399 R: 000 G: 051 B: 153	0099FF R: 000 G: 153 B: 255	33CCFF R: 051 G: 204 B: 255	00CCFF R: 000 G: 204 B: 255	99FFFF R: 153 G: 255 B: 255	66FFFF R: 102 G: 255 B: 255	33FFFF R: 051 G: 255 B: 255	00FFFF R: 000 G: 255 B: 255	00CCCC R: 000 G: 204 B: 204
009999 R: 000 G: 153 B: 153	669999 R: 102 G: 153 B: 153	99CCCC R: 153 G: 204 B: 204	CCFFFF R: 204 G: 255 B: 255	33CCCC R: 102 G: 204 B: 204	66CCCC R: 102 G: 204 B: 204	339999 R: 051 G: 153 B: 255	336666 R: 051 G: 102 B: 102	006666 R: 000 G: 102 B: 102	003333 R: 000 G: 051 B: 051	00FFCC R: 000 G: 255 B: 204	33FFCC R: 051 G: 255 B: 204	33CC99 R: 051 G: 204 B: 153	00CC99 R: 000 G: 204 B: 153	66FFCC R: 102 G: 255 B: 204	99FFCC R: 153 G: 255 B: 204
00FF99 R: 000 G: 255 B: 153	339966 R: 051 G: 153 B: 102	006633 R: 000 G: 102 B: 051	336633 R: 051 G: 102 B: 051	669966 R: 102 G: 153 B: 102	66CC66 R: 102 G: 204 B: 102	99FF99 R: 153 G: 255 B: 153	66FF66 R: 102 G: 255 B: 102	339933 R: 051 G: 153 B: 051	99CC99 R: 153 G: 204 B: 153	66FF99 R: 102 G: 255 B: 153	33FF99 R: 051 G: 255 B: 153	33CC66 R: 051 G: 204 B: 102	00CC66 R: 000 G: 204 B: 102	66CC99 R: 102 G: 204 B: 153	009966 R: 000 G: 153 B: 102
009933 R: 000 G: 153 B: 051	33FF66 R: 051 G: 255 B: 102	00FF66 R: 000 G: 255 B: 102	CCFFCC R: 204 G: 255 B: 204	CCFF99 R: 204 G: 255 B: 153	99FF66 R: 153 G: 255 B: 102	99FF33 R: 153 G: 255 B: 051	00FF33 R: 000 G: 255 B: 051	33FF33 R: 051 G: 255 B: 051	00CC33 R: 000 G: 204 B: 051	33CC33 R: 051 G: 204 B: 051	66FF33 R: 102 G: 255 B: 051	00FF00 R: 000 G: 255 B: 000	66CC33 R: 102 G: 204 B: 051	006600 R: 000 G: 102 B: 000	003300 R: 000 G: 051 B: 000
009900 R: 000 G: 153 B: 000	33FF00 R: 051 G: 255 B: 000	66FF00 R: 102 G: 255 B: 000	99FF00 R: 153 G: 255 B: 000	66CC00 R: 102 G: 204 B: 000	00CC00 R: 000 G: 204 B: 000	33CC00 R: 051 G: 204 B: 000	339900 R: 051 G: 153 B: 000	99CC66 R: 153 G: 204 B: 102	669933 R: 102 G: 153 B: 051	99CC33 R: 153 G: 204 B: 051	336600 R: 051 G: 204 B: 000	669900 R: 102 G: 153 B: 000	99CC00 R: 153 G: 204 B: 000	CCFF66 R: 204 G: 255 B: 102	CCFF33 R: 204 G: 255 B: 051
CCFF00 R: 204 G: 255 B: 000	999900 R: 153 G: 153 B: 000	CCCC00 R: 204 G: 204 B: 000	CCCC33 R: 204 G: 204 B: 051	333300 R: 051 G: 204 B: 000	666600 R: 102 G: 204 B: 000	999933 R: 153 G: 153 B: 051	CCCC66 R: 204 G: 204 B: 102	666633 R: 102 G: 153 B: 051	999966 R: 153 G: 204 B: 102	CCCC99 R: 204 G: 204 B: 153	FFFFCC R: 255 G: 255 B: 204	FFFF99 R: 255 G: 255 B: 153	FFFF66 R: 255 G: 255 B: 102	FFFF33 R: 255 G: 255 B: 051	FFFF00 R: 255 G: 255 B: 000
FFCC00 R: 255 G: 204 B: 000	FFCC66 R: 255 G: 204 B: 102	FFCC33 R: 255 G: 204 B: 051	CC9933 R: 204 G: 153 B: 051	996600 R: 153 G: 102 B: 000	CC9900 R: 204 G: 153 B: 000	FF9900 R: 255 G: 153 B: 000	CC6600 R: 204 G: 102 B: 000	993300 R: 153 G: 051 B: 000	CC6633 R: 204 G: 102 B: 051	663300 R: 102 G: 051 B: 000	FF9966 R: 255 G: 153 B: 102	FF6633 R: 255 G: 102 B: 051	FF9933 R: 255 G: 153 B: 051	FF6600 R: 255 G: 102 B: 000	CC3300 R: 204 G: 051 B: 000
996633 R: 153 G: 102 B: 051	330000 R: 051 G: 000 B: 000	663333 R: 102 G: 051 B: 051	996666 R: 153 G: 102 B: 102	CC9999 R: 204 G: 153 B: 153	993333 R: 153 G: 051 B: 051	CC6666 R: 204 G: 102 B: 102	FFCCCC R: 255 G: 204 B: 204	FF3333 R: 255 G: 051 B: 051	CC3333 R: 255 G: 051 B: 051	FF6666 R: 255 G: 102 B: 102	660000 R: 102 G: 000 B: 000	990000 R: 153 G: 000 B: 000	CC0000 R: 204 G: 000 B: 000	FF0000 R: 255 G: 000 B: 000	FF3300 R: 255 G: 051 B: 000
CC9966 R: 204 G: 153 B: 102	FFCC99 R: 255 G: 204 B: 153	FFFFFF R: 255 G: 255 B: 255	CCCCCC R: 204 G: 204 B: 204	999999 R: 153 G: 153 B: 153	666666 R: 102 G: 102 B: 102	333333 R: 051 G: 051 B: 051	000000 R: 000 G: 000 B: 000								

Figure 3-6 Browser-Safe Web Palette

3.6.2 Standard Text/Fonts

The Viewer shall display textual information in data panes of the content area. The Viewer shall display text in uppercase and lowercase characters as required by the IETM content. The Viewer shall display lines of text as single spaced lines except for the requirements addressed below for procedural steps.

3.6.2.1 Font Requirements

The Viewer shall display all narrative text, titles, headings, callouts, and special characters in sans-serif font. The Viewer shall not display a font size for electronic presentation smaller than 8 points.

3.6.2.2 Margins

The Viewer shall display margins in all text panes to prevent information from being obscured by borders or information in adjacent panes.

3.6.2.3 Justification

The Viewer shall employ left justification for all lines of text displayed as sentences or paragraphs.

3.6.2.4 Text Wrapping

The Viewer shall wrap text onto new lines when necessary, so that no line extends beyond the limits of the pane or right margin, including when resized. The Viewer shall break lines only between individual words or within an explicitly hyphenated word after the hyphenation symbol. If resized text exceeds the text pane area, the Viewer shall use vertical scrolling to make all necessary text accessible to the user.

3.6.3 Display of IETM Content

The Viewer shall display IETM content as described in the sections below.

3.6.3.1 Title Screen

Upon initial access or reset of the IETM, a title screen shall be displayed. The title screen shall include the information typically displayed on a paper technical manual title page. More details on the information to be included on the title screen are found in 3.3.1.2 IETM ID. See *Figure 3-3 IETM ID* for an example.

3.6.3.2 Display of Change Markings

At publish time, the IETM author will be able to select whether the published IETM will contain change markings. If the IETM contains change markings, the Viewer shall provide the user an option, in the Additional Information Bar, to view change markings. The Viewer shall set the default for viewing change markings to off so that change markings are not displayed unless the user requests them. When new information is added within an element, such as new text, the Viewer shall display the added material in italics and the color green (hex code #00CC00). Example: This is unchanged. *This is changed.*

3.6.3.3 Paragraphs

The Viewer shall display titles on all paragraphs and subparagraphs. The title shall begin at the left margin. The paragraph title shall describe that paragraph's contents. The Viewer shall format paragraph and subparagraph titles as follows:

1. Primary paragraph titles shall be bold and in upper case letters. The paragraph text shall appear as block text, and shall start on a separate line.
2. Subparagraph level 1 titles shall be bold and in upper case letters. The paragraph text shall appear as block text and shall start immediately after the title.

3. Subparagraph level 2 titles shall be bold and shall be displayed as authored (title case). The paragraph text shall appear as block text and begin on a separate line.
4. Subparagraph level 3 titles shall be normal text and shall be displayed as authored (title case). The paragraph text shall appear as block text and shall start immediately after the title.
5. Subparagraph level 4 titles shall be italic and shall be displayed as authored (title case). The paragraph text shall appear as block text and shall start immediately after the title.

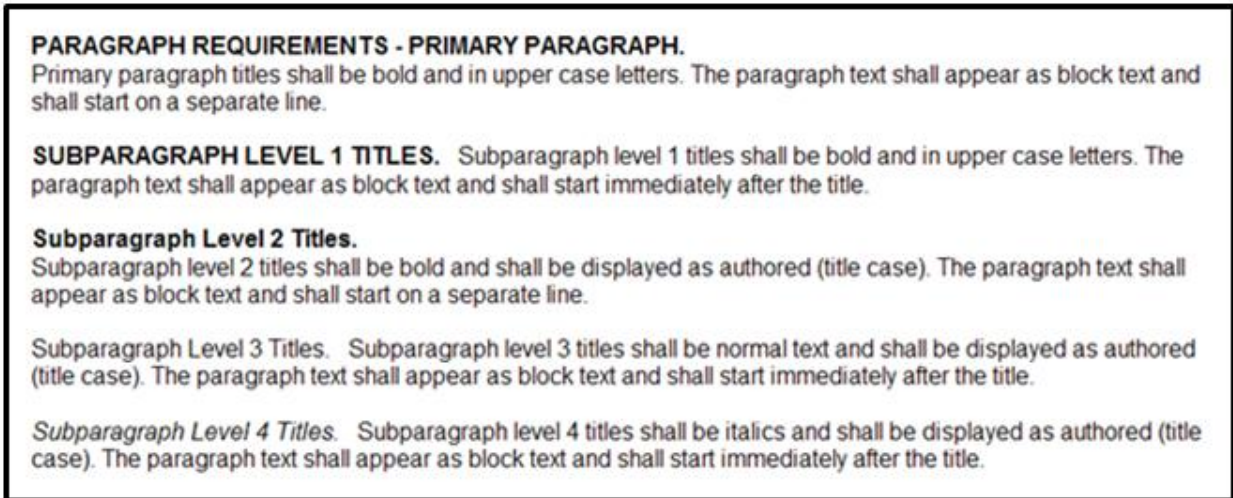


Figure 3-7 Paragraph/Subparagraph Example

3.6.3.4 Procedural Steps

The Viewer shall display procedural steps three steps at a time except for IETMs that display steps in a linear fashion (see 3.6.3.4.1 *Linear Display of Procedural Steps for IETMs*). The Viewer shall have the capability to require an acknowledgement that the three steps have been performed before displaying the next set of steps. Since IETM Acquiring Activities have the option of not requiring acknowledgement, the Viewer must also have the capability of advancing to the next set of steps without acknowledgement. The Viewer shall format procedural steps, sub-steps, and checklist items as follows:

1. First level procedural steps shall be numbered consecutively with Arabic numerals, have no title, and be block indented under first word of the step.
2. Second level procedural steps shall be numbered consecutively with lower case letters, have no title, and be block indented under first word of the step.
3. Third level procedural steps shall be numbered consecutively with Arabic numerals enclosed in parentheses, have no title, and be block indented under first word of the step.
4. Fourth level procedural steps shall be numbered consecutively with lower case letters enclosed in parentheses, have no title, and be block indented under first word of the step.

3.6.3.4.1 Linear Display of Procedural Steps for IETMs

For IETMs displaying procedural steps in a linear fashion, the Viewer shall display a blank line between steps and shall have no limit on the number of steps and sub-steps that can be displayed at any one time. As an IETM Acquiring Activity-determined option, the Viewer may display for each step a feature that permits the user to acknowledge that the step has been performed, for example, a check box or an icon. For diagnostics, testing, and troubleshooting, where there is a decision point, the Viewer shall provide the appropriate hot spots to navigate the user to the next step in the process. The Viewer shall display procedural steps such that they are scrollable.

3.6.3.4.2 Check-off Lists

For check-off lists, the Viewer shall display check boxes between the step number and the text as shown here: 1. ☒ This is a step.

3.6.3.4.3 Steps with Illustrations

For presentation of illustrations with steps, the Viewer shall either display the step on the left with illustration on the right or display the step below with the illustration above. If more panes are needed for illustration, the Viewer shall not use more than four panes. When this is not feasible (such as a scrolling screen), the Viewer shall place the graphic in-line or place a camera icon in-line so that the illustration can be displayed in another window (out-line). See Appendix A for screen layouts.

3.6.3.5 Lists

The Viewer is required to display three types of lists, as identified below. Lists may be unnumbered, numbered sequentially, or lettered alphabetically. They may have an optional title.

3.6.3.5.1 Random List

The random list shall consist of one or more items in a random order. In a random list with hierarchical elements, the top level elements shall be prefixed with a dash symbol [-], the second level elements shall be prefixed with a bullet symbol [·], and the third level elements shall be prefixed with a dash symbol [-]. Random lists within alerts and notes shall have a bullet prefix.

3.6.3.5.2 Sequential List

The sequential list shall consist of one or more items in a specified order, such as alphabetic, numeric, or alphanumeric. In a sequential list of hierarchical elements, the top level elements shall be numbered with Arabic numbers; the second level elements with lower case letters; the third level elements with Arabic numbers in parentheses; the fourth level elements with lower case letters in parentheses; and the fifth level elements roman numbers in parentheses. There shall be two blank lines between changes in levels of hierarchy in the list.



3.6.3.5.3 Definition List

The definition list shall consist of the term and the definition. The definition list shall have the headers, “Term” and “Definition” above the appropriate sections of the list.

3.6.3.6 Display and Acknowledgement of Alerts and Notes

The Viewer shall display alerts (dangers, warnings, and cautions) and notes either in-line or as a pop-up with acknowledgement required. The method of display will be determined by the author at publish time. The Viewer shall display the signal word panel, the message text, and the safety warning symbol or hazardous material symbol (if used) within an alert border as shown in *Table 3-2 Alerts*. Notes shall be displayed as described in *The Viewer shall display Hazardous Material icons* in accordance with the ANSI Z535 Series of Safety Alerting Standards. The Viewer shall pop-up the meaning of a hazardous material icon when the user hovers the cursor over the icon.

3.6.3.6.6 Display of Notes.

DANGER	<p>The symbol used for danger has the word danger in white text inside a red rectangle box with an optional ANSI Z535.3 hazard icon graphic. The danger statement is displayed below the danger symbol with all appearing within a larger white box with a red-hashed border. Note: For S1000D data, a warning tag will be output as a danger if the vital attribute is equal to "1".</p> <div data-bbox="451 787 1318 1045">  </div>
WARNING	<p>The symbol used for warning has the word warning in black text inside an orange rectangle box with an optional ANSI Z535.3 hazard icon graphic. The warning statement is displayed below the warning symbol with all appearing within a larger white box with an orange-hashed border.</p> <div data-bbox="451 1270 1318 1537">  </div>

CAUTION	<p>The symbol used for caution has the word caution in black text inside a yellow rectangle box with an optional ANSI Z535.3 hazard icon graphic. The caution statement is displayed below the caution symbol with all appearing within a larger white box with a yellow-hashed border.</p> <div data-bbox="440 373 1333 642" data-label="Image"> </div>
---------	--

Table 3-2 Alerts

3.6.3.6.1 In-line Alerts and Notes

When alerts and/or Notes are to be displayed in-line and apply to the entire task or procedure, the alerts/Notes shall be displayed in-line prior to the applicable data. Each step shall first display the Dangers (if any), then Warnings (if any), then Cautions (if any), and then Notes (if any) followed by the step number and step paragraph. The step anchor (Target ID) shall be at the beginning of the step and display all preliminary Danger, Warning, Cautions, and Notes (DWCNs) prior to each step action. The step number shall be with the step paragraph and follow the DWCNs. *Figure 3-8* provides how the Viewer shall display a step in the Content Window.

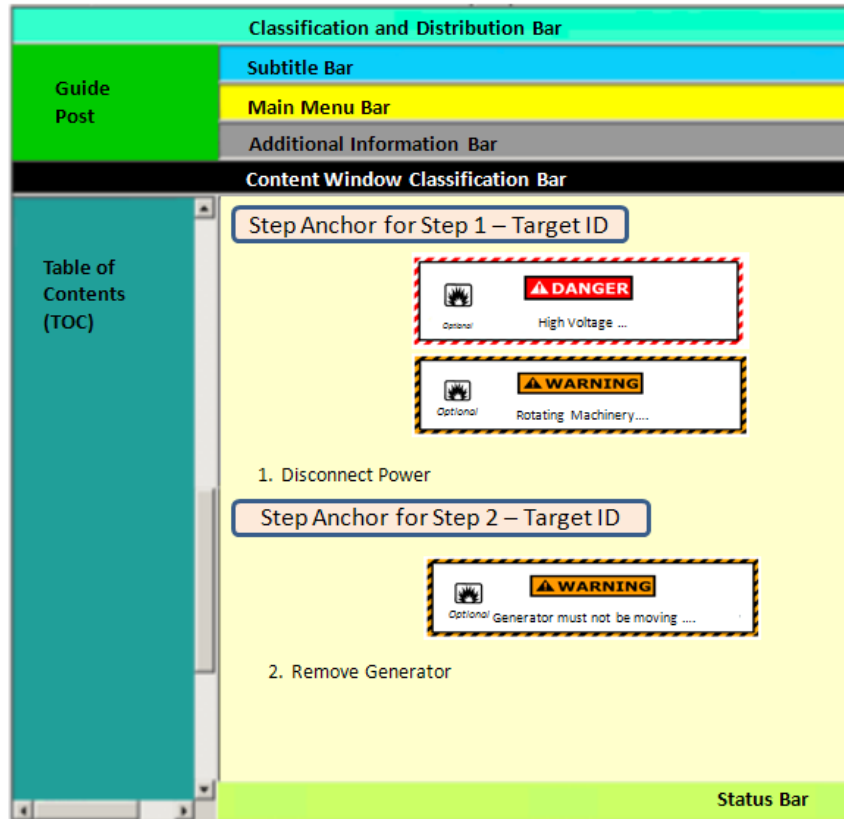


Figure 3-8 In-line Alerts Display

3.6.3.6.2 Pop-up Alerts and Notes

For pop-ups with acknowledgement, the Viewer shall display an acknowledgement button that the user must click before the Viewer proceeds with further displays. When there are multiple alerts and notes, the Viewer shall display the alerts and notes as stacked window frames in the order in which they were authored with the first alert appearing on the top of the stack. The Viewer shall require the user to acknowledge each alert and note individually before proceeding and shall create an audit log entry for each acknowledgement.

3.6.3.6.3 Alert Display on Status Bar

The Viewer shall display the appropriate icon, shown in *Table 3-3*, for the alert in the Status Bar at the bottom of the display and shall have it remain persistent until the entire task or procedure has been completed. In the case of multiple alerts of the same kind, the Viewer shall also display the number of open alerts immediately to the right of the minimized icon and enclosed in parentheses (for an example, see Figure A - 1). The Viewer shall allow the user to review the alert by selecting the icon on the Status Bar. If the user selects an alert icon at any time during the conduct of the task or procedure, the Viewer shall display the text of the applicable Danger, Warning, or Caution. The Viewer shall display the icon for the Danger, Warning, or Caution as long as the Danger, Warning, or Caution is applicable.




Minimized Danger Icon Danger(s) Apply	ICON: Red Square with a white triangle outlined in black with "D" inside the triangle.	
Minimized Warning Icon Warning(s) Apply	ICON: Orange Square with a white triangle outlined in black with "W" inside the triangle.	
Minimized Caution Icon Caution(s) Apply	ICON: Yellow Square with a white triangle outlined in black with "C" inside the triangle.	

Table 3-3 Alert Icons**3.6.3.6.4 Alert Colors**

The Viewer shall use the 8-bit safe colors listed in *Table 3-4* for display of the colors associated with Dangers, Warnings, Cautions, and Notes.

Color	Hexadecimal Value
Red	FF0033
Yellow	FFFF33
Orange	FF9933
Blue	0066CC
Black	000000
White	FFFFFF

Table 3-4 8 Bit Safe Colors for Alerts**3.6.3.6.5 Hazardous Material Icons**

The Viewer shall display Hazardous Material icons in accordance with the ANSI Z535 Series of Safety Alerting Standards. The Viewer shall pop-up the meaning of a hazardous material icon when the user hovers the cursor over the icon.

3.6.3.6.6 Display of Notes

The Viewer shall display Notes in an IETM as shown in *Figure 3-9*. The color shall be blue in accordance with *Table 3-4*. The Viewer shall display Notes in-line prior to the applicable text.

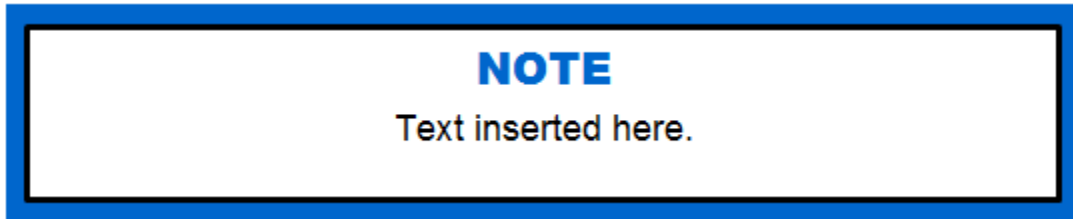


Figure 3-9 Note

3.6.3.7 Hot Spots/Links

The Viewer shall display all links to additional information, hotspots, and selectable areas using the standard web practice for displaying links or hot spot text (that is, blue underlined initially and turning purple underlined after the link is followed). The Viewer shall require a single click of a text hot spot or an icon hot spot to execute the link transfer. When an internal link is selected, the Viewer will open the target in the Main Content Window. The Viewer shall precede references to paragraphs, steps, figures and tables with the captions "Paragraph", "Step", "Figure" and "Table", respectively.

3.6.3.8 Tables

The Viewer shall display tables in a left-to-right, top-to-bottom array of cells. The Viewer shall display both in-line and out-line tables. The Viewer shall display a table listed in the TOC upon one click on the table listing. The Viewer shall maintain table headers on display as rows are scrolled. The Viewer shall display table footers, if used. Within footers, borders should be the same size lines as the rest of table; and a static line shall be maintained at the bottom of the table (separate frame optional). The Viewer shall have the capability to display table borders as single lines or double lines or, in the case of small tabular text, with no border lines, as specified by the IETM Acquiring Activity. The table title shall be placed two spaces after the table number, and they shall be centered above the table.

3.6.3.8.1 Standardized Information Tables

The Viewer shall display tables designated as “standardized information tables” with no deviations to the number of columns and the titles in the column headings. See Appendix C for the table format and table headings.

3.6.3.8.2 CALS and Simple Tables

A CALS table is a method for creating tabular data that gives the author control over formatting and size. CALS tables allow columns and rows to be spanned by cell data, alignments to be set and column and overall table width to be defined. The Viewer must be flexible enough to handle CALS tables. A simple table is a simplified version of a CALS table. Tables shall have a title. The Viewer shall display the table title centered above the table. The Viewer shall maintain consistent column spacing within a table. When more than one column of data is displayed, the

Viewer shall provide sufficient space to clearly distinguish the data. The Viewer shall display no footnotes in a table. The Viewer shall make footnote data available (linked) using a hot-spot technique.

3.6.3.9 Graphics

The Viewer shall display graphics either in-line or out line as specified by the author. The Viewer shall display graphics to a scale so that all essential detail is legible. The Viewer shall display graphics in an assigned data pane of the Main Content Window. The Viewer shall display both static and interactive types of graphics, as may be required in the IETM. The viewer shall display static graphics in full detail in the graphic area provided, with no ability for manipulation. If a graphic cannot be displayed in its entirety and in full detail, the Viewer shall display it using interactive graphic display techniques (for example, scrolling and zooming). If multiple graphics support one step, the Viewer shall display them simultaneously as the available display area allows. The Viewer shall display encoded graphics along with any associated callout overlays designed to indicate the specific components of the graphic. The graphic's title shall follow two spaces after the figure number, and they shall be centered under the figure if in-line and at the top of the graphic pane if out line.

The Viewer shall provide the following graphics control functions:

- A pan control function that allows the user to pan across or up and down a graphic that exceeds the size of the data pane.
- Vertical and horizontal scroll bars to indicate that panning is available.
- A zoom control function that allows the user to enlarge (zoom in) or reduce (zoom out) the displayed graphic.
- A centering control function that allows the user to return the view of the graphic to its original size, location and orientation.
- A magnify control function that allows the user to magnify (enlarge) selected portions of the graphic.

The Viewer shall be capability of displaying Graphic Interchange Format (GIF), Joint Photographic Experts Group (JPEG), Computer Graphics Metafile (CGM), and Portable Network Graphic (PNG).

3.6.3.9.1 Oversize Graphics

The viewer must be able to detect the size of the viewing device for oversize graphics. When the Viewer cannot display more than 50% of the graphic based on size, the Viewer shall provide a thumbnail with button to expand to the full-sized graphic, rather than displaying only a small part of the full-sized graphic. The Viewer shall display the button to expand the graphic in the middle of the graphics pane.

3.6.3.9.2 Illustrated Parts Breakdown (IPB)

The Viewer shall display the Illustrated Parts Breakdowns (IPBs) in accordance with the IPB Standardized Table found in Appendix C. The Viewer shall enable the user to move back and forth between elements within the IPB and hotspots on the graphics.

3.6.3.9.3 Troubleshooting Diagrams

The following interactive troubleshooting diagram functions are optional to the Viewer. For performing flow-tracing during troubleshooting, the Viewer function which allows the user to change the flow-trace highlight color is optional. (Example: Change the flow tracing color for different piping systems.) Optionally, the Viewer may dynamically generate a subset of the schematic/flow for a specific piping or wiring connection (a.k.a. “wire-on-the-fly”).

3.6.3.9.4 Tear Offs

The Viewer shall allow the user to select a graphic from the IETM and display it in another window which can be moved and used as a static reference when looking at other information within the IETM. This window can also be maximized so the graphic can be viewed at full-screen size. (See Figure A – 10.) This window is called a tear off. The Viewer shall display the Guidepost, the Classification and Distribution Bar, and the Content Window Classification Bar as a horizontal bar across the top of each Tear Off window. The Viewer shall display within the Content Window Classification Bar the classification marking for what is currently shown in the Tear Off window. (For detail requirements, see 3.3.1 Guidepost, 3.3.2 Classification and Distribution Bar, and 3.3.8.1 *Content Window Classification Bar*.) The Status Bar shall be displayed across the bottom of each Tear Off window. (For detail requirements, see 3.3.9 Status Bar.)

3.6.3.10 Multimedia

Multimedia shall be displayed without capability for manipulation. If multiple multimedia support one step, icons shall be displayed to allow the user to select each multimedia in turn. The multimedia Viewer shall support the following control functions: volume, enlarging, play, pause, and exit. The following multimedia formats shall be supported: Moving Picture Experts Group Layer-3 Audio (MP3), Waveform Audio File (WAV), Windows Media Audio (WMA), Audio Video Interleaved (AVI), QuickTime Movie (MOV), Moving Picture Experts Group Layer-4 Audio (MP4), RealVideo (RAM), Windows Media Video (WMV), Resource Header (RH), and Small Web Format/Shockwave/Flash(SWF).

3.6.4 Security Markings

Technical data shall have security classification markings in accordance with DODI 5200.01/DOD M-5200.01 and SECNAVINST 5510.36/SECNAV M-551-/36. Distribution statements for technical data shall be in accordance with DODI 5230.24. (The IETM Acquiring Activity will provide the appropriate distribution statement and specific text to be used for each IETM in accordance with SECNAVINST 5510.36/SECNAV M-5510.36.) *Table 3-5 Security Markings and Colors* identifies the security classification marking and color requirements for the Classification and Distribution Bar.

3.6.4.1 Security Markings for Classification Authority Box

For classified manuals, the Viewer shall support security markings for the Classification Authority Box. The marking involves standardized titled categories with author-driven text. Upon opening an IETM or when the user selects the hyperlinked text in the Classification and Distribution bar, the Viewer screen shall display the Classification Authority Box in accordance with DODI 5200.01/DOD M-5200.01, as follows:

'Classified by:' (person & position, office of origin)
 'Reason:' (text)
 'Derived from:' (the agency and, where available, the office of origin, and the date of the source or guide). If the information is derived from multiple sources, the words "Multiple Sources" shall be placed after 'Derived From:' and a link to a list of the multiple sources shall be provided.
 (optional) 'Downgrade to:' (text) ' on ' (date)
 (optional) 'Upgrade to:' (text) ' on ' (date)
 'Declassify on:' (date or other text)

Figure 3-10 Classification Authority Box

The Viewer shall display the Classification Authority Box (*Figure 3-10*) in a pop-up window.

3.6.4.2 Security Markings for Electronically Displayed Data

The Viewer shall display the Classification and Distribution bar (see 3.3.2 *Classification and Distribution Bar*) and the Content Window Classification Bar (see 3.3.8.1 *Content Window Classification Bar*) with a background color to reflect Security. Technical data developed using this specification shall have security classification markings in accordance with DODI 5200.01/DOD M-5200.01. The back ground color shall be as shown in below:

TITLE	Color	Example/Hex Color
TOP SECRET label	Orange	Hex Code #FF9933
SECRET label	Red	Hex Code #FF0033
CONFIDENTIAL label	Blue	Hex Code #00CCFF
UNCLASSIFIED label	Green	Hex Code #00CC33

Table 3-5 Security Markings and Colors

3.6.4.3 Security Markings for Printed Material

The Viewer shall print the classification, special handling instructions and distribution markings on all printed output in compliance with DODI 5200.01/DOD M-5200.01. Because graphics can be printed separately from the browser print function, classification markings shall be embedded within the graphic at the top and bottom. The Viewer shall embed required security markings at the top and the bottom of each page of all printed material.

3.6.4.4 Security Markings for Portions

The Viewer shall support portion marking for classified manuals. Portion marking shall be in accordance with DODINST 5200.01/DOD M-5200.01 and involves identifying the classification

level of each portion, ordinarily defined as a paragraph, but also includes subjects, titles, graphics, tables, charts, bullet statements, sub-paragraphs, classified signature blocks, bullets and other portions within technical manuals. Portion markings consist of the letters “(U)” for Unclassified, “(C)” for Confidential, “(S)” for Secret, and “(TS)” for Top Secret. The abbreviations, in parentheses, are placed before the portion to which they apply.

3.7 Interactive IETM Session Requirements

This section covers Viewer requirements to support IETM session interactivity.

3.7.1 User Interaction/Screen Dialogs

The Viewer shall use pop-ups and in-line dialog mechanisms for gathering information from IETM users. The types of information collected can include, but are not limited to, whether or not specific operations have been performed, the present condition of the system, and the environmental situation. The Viewer shall employ dialog boxes to allow users to enter data (e.g. radio buttons, check-boxes, push buttons, fill-ins, combo boxes, scrolling selection lists, etc.).

3.7.2 Screen Stacking

The Viewer shall not implement screen stacking, except when displaying alerts in accordance with 3.6.3.6 Display and Acknowledgement of Alerts and Notes. *Figure 3-11* illustrates screen stacking where multiple windows are opened and overlap each other.

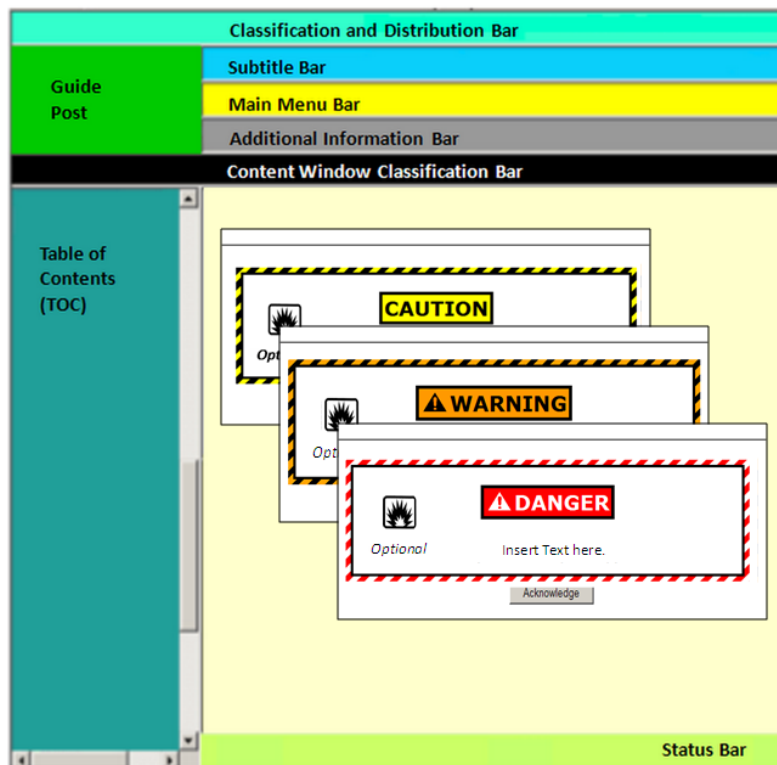


Figure 3-11 Screen Stacking

3.7.3 Response Time

If the IETM is busy for more than 2 seconds, the Viewer shall change the cursor to indicate a busy condition (e.g. an hourglass, circle in motion, etc.). When the busy condition has passed, the cursor shall be returned to its previous form.

3.7.4 Login

The Viewer shall support the Login function as an optional feature that can be requested by an IETM Acquiring Activity. Login provides the capability to identify a user by specific user ID (or profile) for tracking, authorization or other purposes including associating audit trail transactions, saved sessions and bookmarks with the user. If multiple individuals will be using the same user ID, then disambiguation of any specific user action may not be possible resulting in possible IETM malfunction and may greatly inhibit an incident reconstruction scenario.

3.7.5 Audit Trail

The Viewer shall support the Audit Trail function as an optional feature that can be requested by an IETM Acquiring Activity. An Audit trail captures all user and IETM interaction in an audit log to track where the user has navigated within the IETM. The audit log shall include dialog interaction entries along with the internal state table containing the status of the computerized variables underlying the IETM.

The audit log shall be saved upon suspension or exit of the IETM. The captured audit trail shall be written to a file and stored so that the log can be retrieved and viewed and/or attached to an external application system. The format of the log file shall be such that the individual events are identifiable, date/time stamped and the specific contents captured. The Audit log is not accessible to end-users and is not a selectable function from the Guidepost, Main Menu Bar, or Additional Information Bar. The audit log shall be a delimited (e.g., CSV, XML) text file of a format that can be opened in DON Application and Database Management System (DADMS) approved spreadsheet software.

The result of the audit trail logging shall (as a minimum) be saved to the device hosting the IETM (e.g., portable unattached device, server). The ability to sync the saved audit log over a network shall be provided. Audit logs shall only be overwritten when available free space has been exceeded or upon successful sync/transfer. The means for a system administrator to retrieve and review the audit log shall be provided and documented with the Viewer when delivered to the Government IETM Acquiring Activity.

APPENDICES

APPENDIX A USER INTERFACE INNER SHELL SCREEN

A.1 User Interface Screen Regions Tool

This section is intended to be used to lay out standard Inner Shell screens for Viewer developers. Screen shots are provided as visual guidance. There are several examples that allow Viewer developers to split up their main display region in a variety of ways to suit specific needs. The regions and a basic description are listed below. Unless otherwise noted, examples will show TOC with all other bars and regions included.

- Guidepost: used to get to custom or IETM-specific controls.
- Classification and Distribution Bar: displays the overall classification of the entire IETM and the distribution statement identifier for the IETM.
- Subtitle Bar: displays the title of the information being displayed in the Main Content Window.
- Main Menu Bar: displays the following set of functions, left justified and exactly in this order: Previous, Next, TOC, History, Search, Print, Feedback, Exit, Help, and IDSTATUS (S1000D only).
- Additional Information Bar: displays the following minimum set of functions: Back, Forward, Applicability, and Annotations.
- Table of Contents Panel: is a resizable area to display the table of contents, list of illustrations, and list of tables.
- Content Window Classification Bar: displays the classification marking for text and graphics currently on the screen.
- Main Content Window: where the viewer shall display the IETM text and graphics.
- Status Bar: used to communicate status and other messages to the end user.

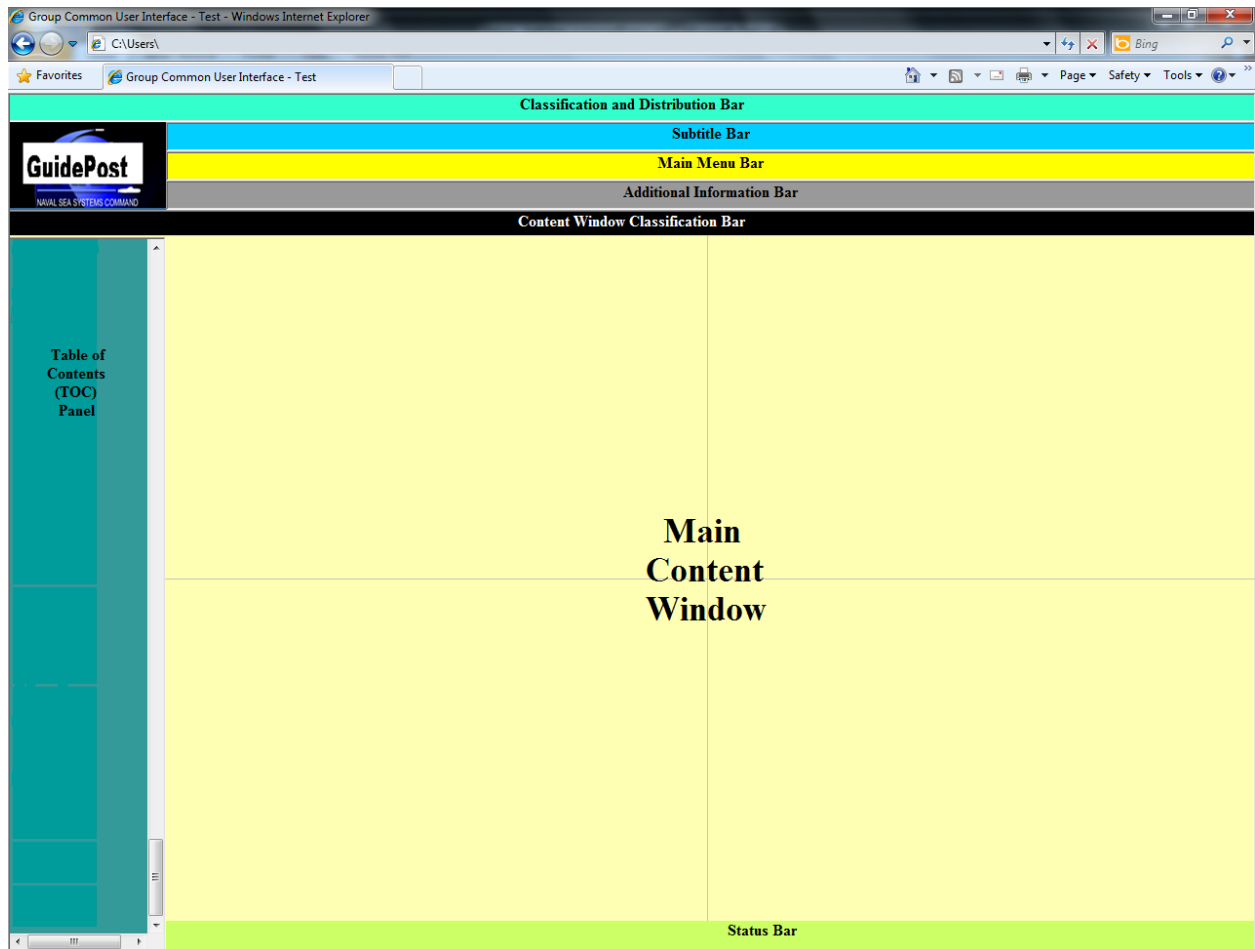


Figure A - 2 Inner Shell Layout

A.1.1 Single Main Frame Layout

This example shows the layout with TOC and the single main frame layout.

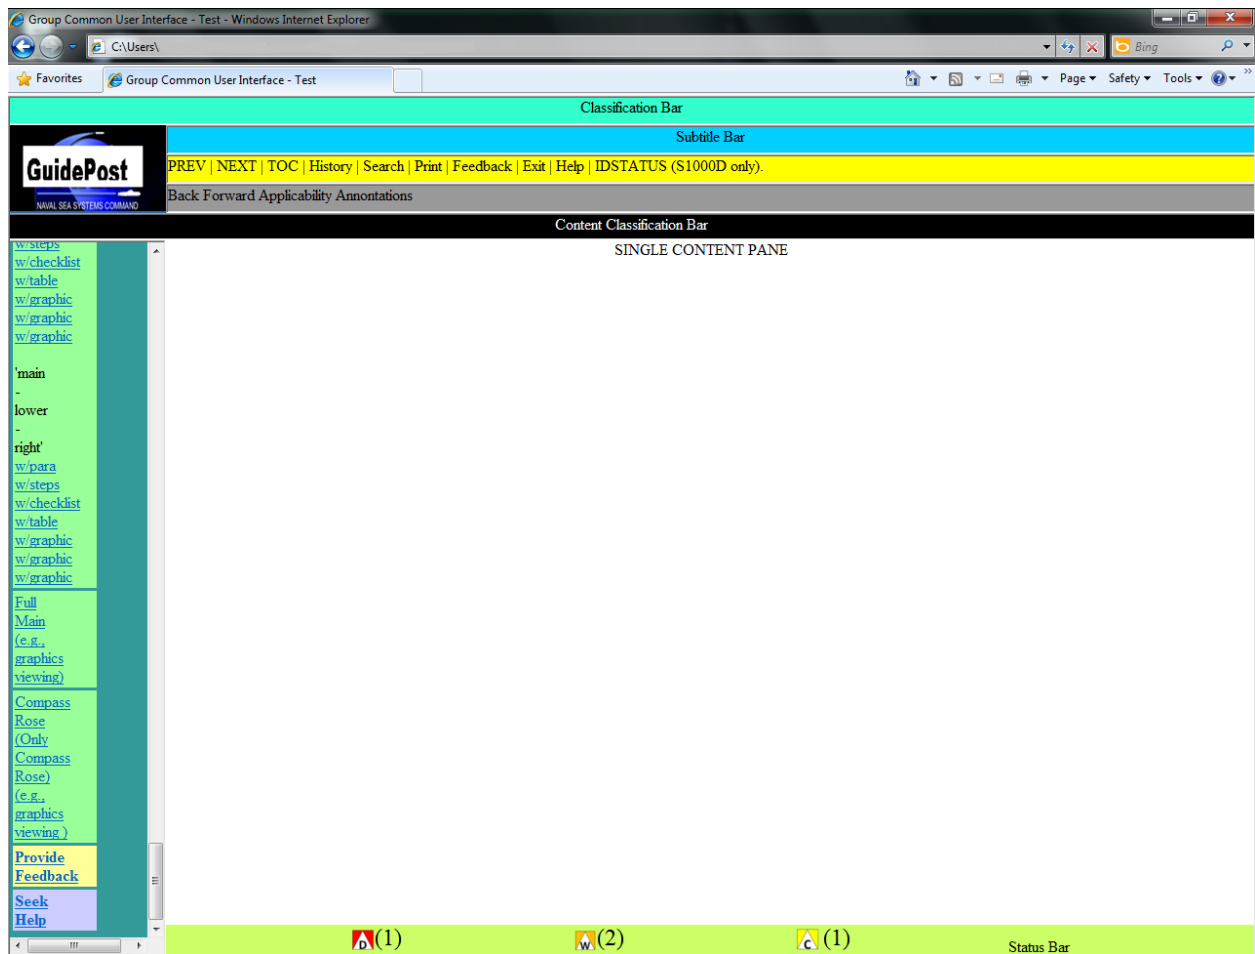


Figure A - 3 Single Main Frame Layout

A.1.2 Upper | Lower Dual Frame Layout

This example shows the layout with the TOC and an upper | lower frame. An upper/lower dual frame layout will have text in the lower frame and a graphic in the upper frame.

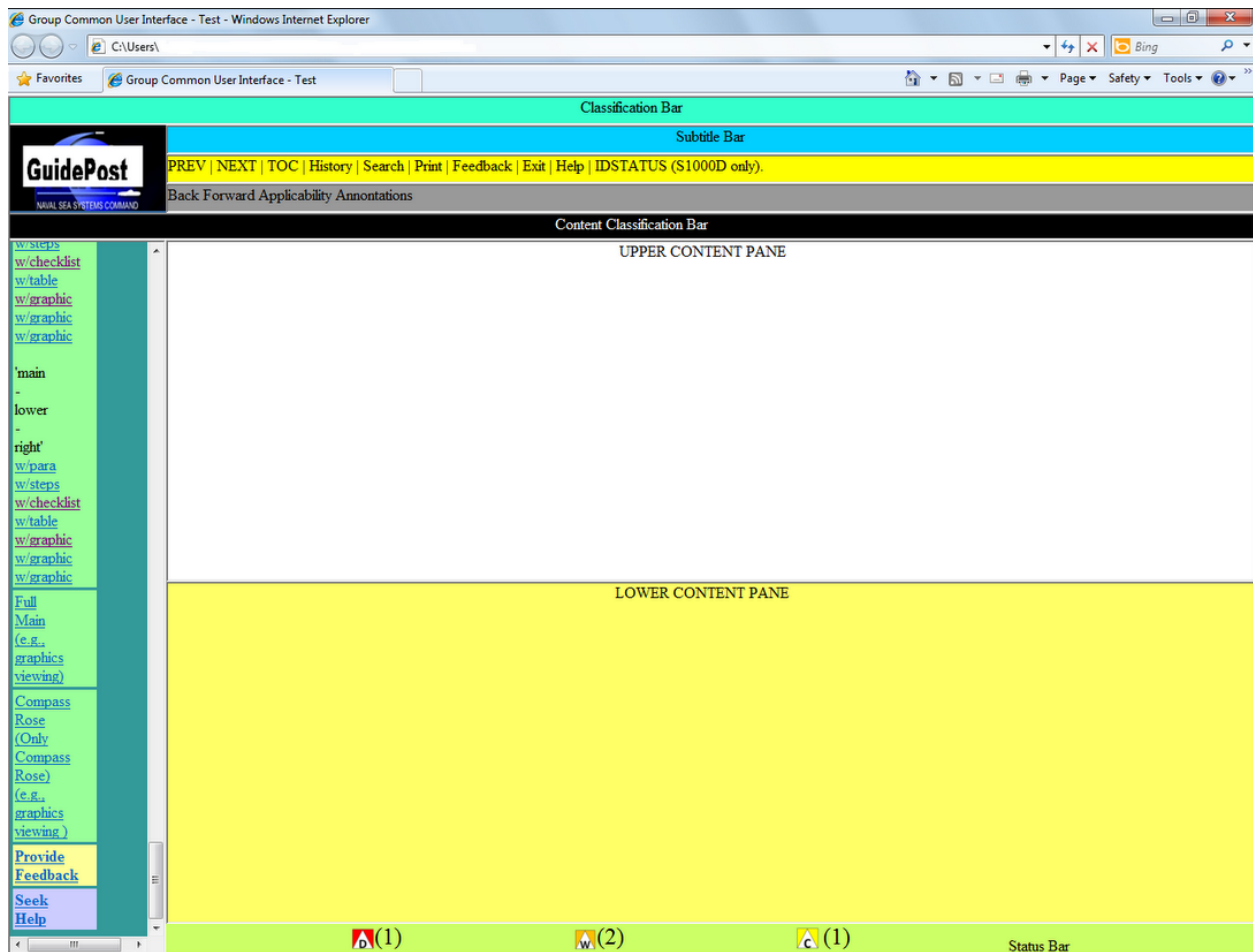


Figure A - 4 Upper | Lower Dual Frame Layout

A.1.3 Left | Right Dual Frames Layout

This example shows the layout with the TOC and a left | right frame. A left/right frame layout will have text in the right frame and a graphic in the left frame.

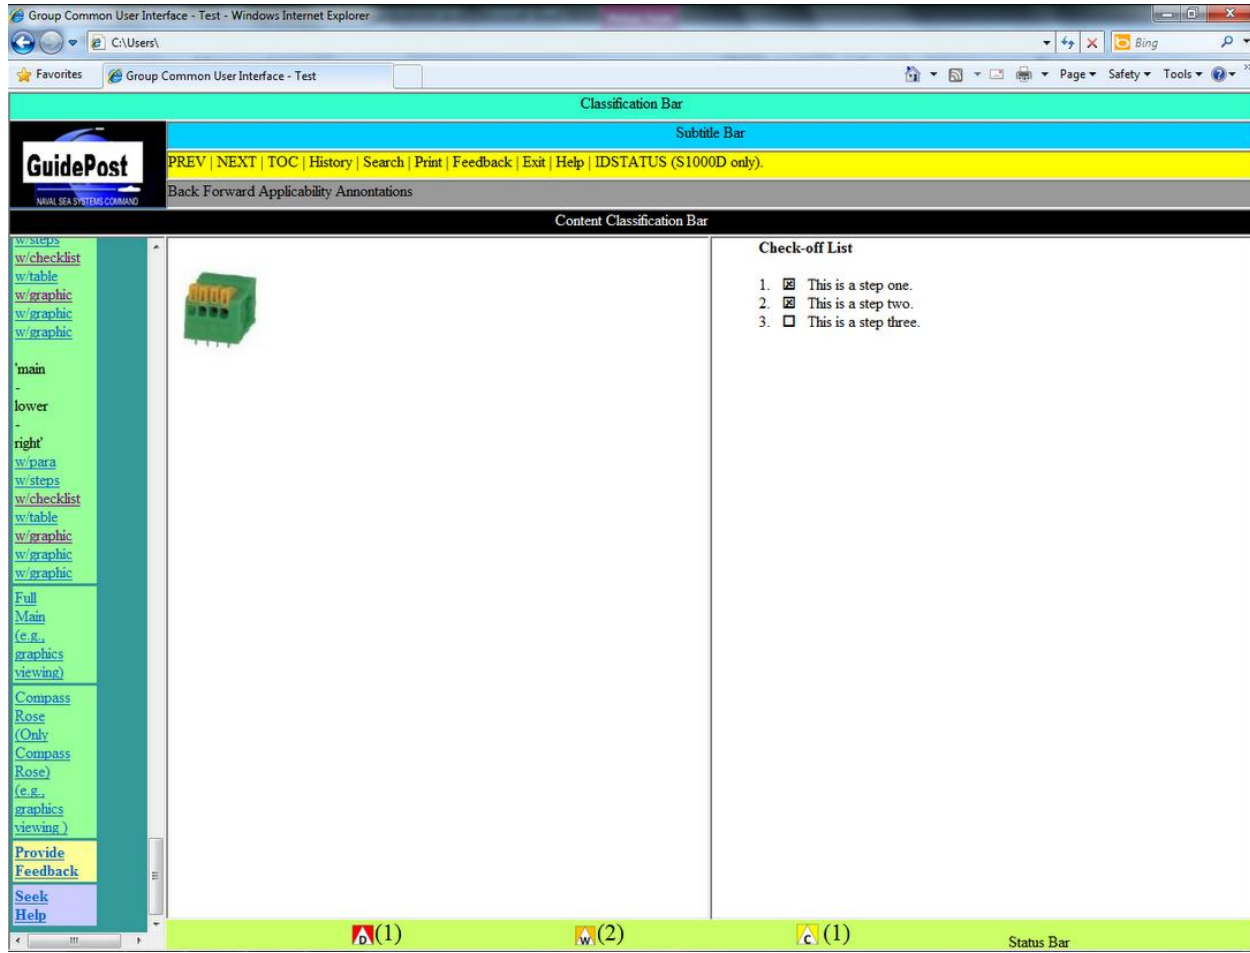


Figure A - 5 Left | Right Dual Frames Layout

A.1.4 Quadrant Frame Layout

This example shows a quadrant-based frame layout with the TOC and all bars/regions. In this layout, the upper left quadrant will always contain a graphic, the lower right quadrant will always contain text, and the other two quadrants may contain graphics or text as needed.

The screenshot displays a web application titled 'Group Common User Interface - Test' in a Windows Internet Explorer browser. The interface features a quadrant-based layout with the following elements:

- Top Bar:** Includes a 'Classification Bar' (green), a 'Subtitle Bar' (blue), and a navigation bar with links: PREV | NEXT | TOC | History | Search | Print | Feedback | Exit | Help | IDSTATUS (S1000D only).
- Left Sidebar:** Contains a 'GuidePost' logo and a list of navigation links: w/steps, w/checklist, w/table, w/graphic, w/graphic, w/graphic, 'main, lower, right', w/para, w/steps, w/checklist, w/table, w/graphic, w/graphic, w/graphic, Full Main (e.g., graphics viewing), Compass Rose (Only Compass Rose) (e.g., graphics viewing), Provide Feedback, Seek Help.
- Top-Left Quadrant:** Displays a 3D graphic of a green connector.
- Top-Right Quadrant:** Displays a technical schematic diagram of an electrical system.
- Bottom-Left Quadrant:** Contains a table titled 'Table 1. A/C Line Disconnect Characteristics'.
- Bottom-Right Quadrant:** Contains text describing the viewer's display requirements for titles and paragraphs.

Current Rating at 40 degrees C	Drive Horsepower / Voltage Rating
250 Amp	40-60 / 75-125 HP at 230 / 460 VAC ¹
250 Amp	40-60 / 75-125 HP at 230 / 460 VAC ¹
400 Amp	75 / 150 HP at 230 / 460 VAC
400 Amp	75 / 150 HP at 230 / 460 VAC

¹ Optimal HP is 45 / 85 HP at 230 / 460 VAC.

The Viewer shall display titles on all paragraphs and subparagraphs. The title shall begin at the left margin. The paragraph title shall describe that paragraph's contents. The Viewer shall format paragraph and subparagraph titles as follows:

PRIMARY PARAGRAPH TITLES SHALL BE BOLD AND IN UPPER CASE LETTERS.

The paragraph text shall appear as block text, shall start on a separate line, and shall have a blank line between the title and text block.

3 SUBPARAGRAPH LEVEL 1 TITLES SHALL BE BOLD AND IN UPPER CASE LETTERS.

The paragraph text shall appear as block text, and shall start on a separate line.

3.1 Subparagraph level 2 titles shall be bold and shall be displayed as authored (title case).

Paragraph text shall begin on the next line.

3.1.1 Subparagraph level 3 titles shall be bold and shall be displayed as authored (title case).

Figure A - 6 Quadrant Frame Layout

This example shows another triple frame layout (upper, lower left, and lower right) with the TOC with all bars/regions. In this layout, the upper half will contain a graphic and the lower left and right quadrants will contain text.

The screenshot displays a web application interface with a triple frame layout. The top half of the page features a graphic of a green terminal block. The bottom half is divided into two columns. The left column contains a table titled "Table 1. A/C Line Disconnect Characteristic Drive Horsepower / Voltage Rating". The right column contains a "Check-off List" with three items. The interface includes a sidebar with links, a top navigation bar, and a status bar at the bottom.

Table 1. A/C Line Disconnect Characteristic Drive Horsepower / Voltage Rating

Current Rating at 40 degrees C	Drive Horsepower / Voltage Rating
250 Amp	40-60 / 75-125 HP at 230 / 460 VAC [†]
250 Amp	40-60 / 75-125 HP at 230 / 460 VAC [†]
400 Amp	75 / 150 HP at 230 / 460 VAC
400 Amp	75 / 150 HP at 230 / 460 VAC

[†] Optimal HP is 45 / 85 HP at 230 / 460 VAC.

Check-off List

- ☒ This is a step one.
- ☒ This is a step two.
- ☐ This is a step three.

Figure A - 8 Triple Frame Layout (Upper, Lower Left, and Lower Right)

This example shows another triple frame layout (upper left, lower left, and right) with the TOC with all bars/regions. In this layout, the left upper and lower quadrants will contain graphics and the right half will contain text.

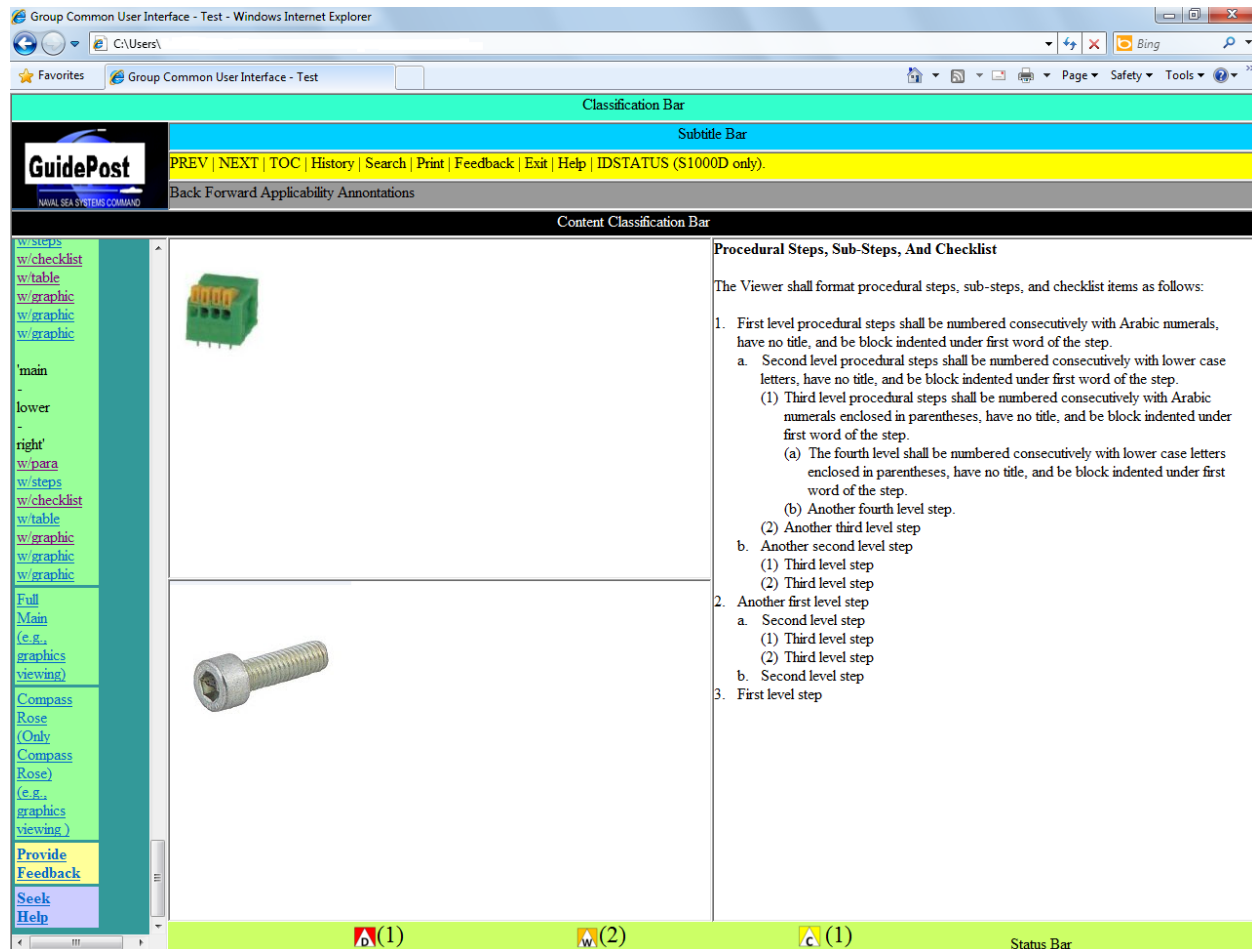


Figure A - 9 Triple Frame Layout (Upper Left, Lower Left, and Right)

This example shows another triple frame layout (left, upper right, and lower right) with the TOC. In this layout, the left half will contain a graphic and the right upper and lower quadrants will contain text.

Group Common User Interface - Test - Windows Internet Explorer

Classification Bar

Subtitle Bar

GuidePost

PREV | NEXT | TOC | History | Search | Print | Feedback | Exit | Help | IDSTATUS (S1000D only).

Back Forward Applicability Annotations

Content Classification Bar

Table 1. A/C Line Disconnect Characteristic Drive Horsepower / Voltage Rating

Current Rating at 40 degrees C	Drive Horsepower / Voltage Rating
250 Amp	40-60 / 75-125 HP at 230 / 460 VAC ¹
250 Amp	40-60 / 75-125 HP at 230 / 460 VAC ¹
400 Amp	75 / 150 HP at 230 / 460 VAC
400 Amp	75 / 150 HP at 230 / 460 VAC

¹ Optimal HP is 45 / 85 HP at 230 / 460 VAC.

Check-off List

- ☒ This is a step one.
- ☒ This is a step two.
- ☐ This is a step three.

Full Main (e.g., graphics viewing)

Compass Rose (Only Compass Rose) (e.g., graphics viewing)

Provide Feedback

Seek Help

Figure A - 10 Triple Frame Layout (Left, Upper Right, and Lower Right)

A.1.6 No TOC Frame Layout

This is the layout for use with graphics, foldouts, parts, and schematics to give more screen real estate to the user. In addition to the Content Window, only the Guidepost, Classification and Distribution Bar, Content Window Classification Bar, and Status Bars are displayed.

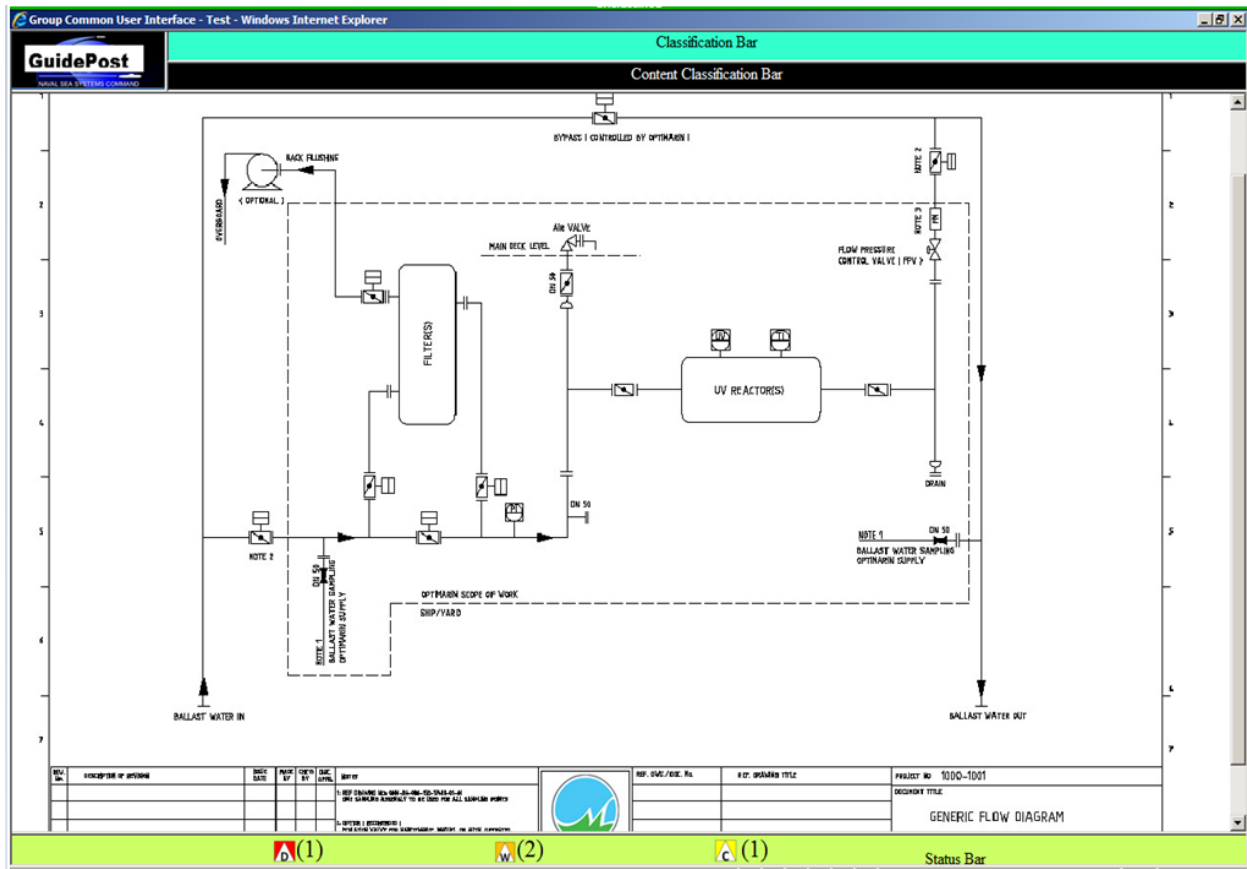
















Figure A - 11 No TOC Frame Layout

 






APPENDIX B SUGGESTED ICONS AND SYMBOLS












 



B.1 Suggested Icons and Symbols


As a part of the standard common user interface, the following icons and symbols are suggested for use by Viewer developers.









Element	Description	Function	Indicator	Sample
Classification Markings	Icon in Status footer to remind user of classification/distribution.	Unclassified	Icon: Open Lock (Black)	 (U)
		Confidential	Icon: Locked Lock (Blue) with “C”	 (C)
		NoForn	Icon: Locked Lock (Blue) with “NF”	 (NF)
		Secret	Icon: Red Lock with “S”	 (S)
		Top Secret	Icon: Orange Lock with “TS”	 (TS)
Session Controls - (aka EXIT Modes)	Pause, Resume or Exit a Session	Session Suspend	Icons: Pause (two vertical bars) Text: Pause Session	Pause Session
		Session Resume	Session Resume	Session Resume
		Session Complete-Normal Exit	Icon: Check Mark Text: Complete	✓ Complete
		Session Abort Only in Browse Mode	Icon: Rain Clouds	 Abort
Graphic Hotspot Icon	For use on graphics with hotspots.	Hot Spot Indication	ICON: Text or Cross-Hair When highlighting text for selectable elements (hot-spots), either use color changes or increase in background intensity .Use the standard web practice of text that is blue underlined and turns purple after followed.	Click Me
Search		Search Local TOC	Icon: Magnifying Glass	 :Search TOC

		Search Library	Icon: Magnifying Glass	 :Search Library
		Search Local Document	Icon: Magnifying Glass	 :Search Document
		Search Again/Find Next	Test: Repeat Search Search Up (Double Arrow Up) Search Down (Double Arrow Down)	Repeat Search
Bookmarks and Notes, Annotations CREATION	Icon used to indicate that you can create	Public Bookmark	Icon: Open Book (Black)	 Create Public Bookmark
		Private Bookmark	Icon: Open Book (Blue)	 Create Bookmark
		Public Note	Icon: Hand holding pencil (Black)	 Create Public Note
		Private Note	Icon: Hand holding pencil (Blue)	 Create Note
TMDER Submission		Submit TMDER NOTE: Fires off another Out-Line Window with the fill-in form that can be moved by the	Icon: Tag Out Symbol Text: Submit TMDER	 Submit TMDER

		user so they can reference the ETM they are submitting the TMDER on.		
		Comment	Icon: Piece of paper with upper right corner turned in Text: Create Comment	 Create Comment
		Suggested Changes/ Feedback	Icon: Clipboard Text: Create Feedback	 Create Feedback
		Form Complete - Submit	Button with Text: Submit	
		Form Cancel	Button with Text: Cancel	
Bookmarks and Notes, Annotations TRAVERS E TO or READ.	Icon used to indicate that you can go to and read a bookmark, or that you are reading a bookmark.	Public Bookmark	This is a Bookmark: Icon: Open Book-Black Text: None Go to a Bookmark: Icon: Open Book-Black Text: Goto Bookmark	  Goto Bookmark
		Private Bookmark	Icon: Open Book (Blue) Text: None	
		Public Note	This is a Note: Icon: Hand holding pencil-Black Text: None Read a Note: Icon: Hand holding pencil-Black Text: Read Note	  Read Note

		Private Note	Icon: Hand holding pencil- Blue Text: None	
Print Icons	Clicking on Print produces a dialog box with the following choices.	Print ETM Graphic	Icon: Printer	 Print
		Print Active ETM Window	Icon: Printer	 Print
		Print ETM Page	Icon: Printer	 Print
		Print ETM on Demand	Icon: Printer	 Print
Audio Control Icons		Access Volume Controls	Icon: Speaker Text: Audio Controls	 Audio Controls
		Volume Up	Icon: Rising Triangle	
		Volume Down	Icon: Descending Triangle	
		Mute	Icon: Speaker with slash through it Text: Mute	 Mute
		Play	Icon: Small Triangle Text: Play	 Play
		Stop	Icon: Small Square Text: Stop	 Stop
		Turn on Voice Input Recognition	Icon: Ear with sound coming in Text: Voice Recog On	 Voice Recog On
		Turn off Voice Recognition	Icon: Ear with sound slashed across Text: Voice Recog Off	 Voice Recog Off
		Turn on Voice Output	Icon: Head with sounds coming out	
		Turn off Voice Output	Icon: Head with sounds slashed across	

General Navigation		Next	Icon: Right Pointing Arrow Text: Next	Next ➔
		Previous [Chronological]	Icon: Left Pointing Arrow Text: Previous	⬅Previous
		Back [Logical]	Icon: Arrow Pointing up and left Text: Back	↶Back
		TOC	Icon: Stack of documents Text: Contents	📄Contents
		Undo	Icon: Curled Arrow CCW Text: Undo	↶Undo
		User Navigation Panel Minimized	Icon: Compass Rose Text: Navigation	✦Navigation
		Parts (IPB/RPSTL)	Icon: Number 10 in a circle Text: Parts	⑩Parts
		Diagnostics	Icon: +/- Text: Diagnostics	+/- Diagnostics
		Wiring Diagrams	Icon: Off Page Connector with X inside Text: Wiring	⊗ Wiring
		Support Equipment	Icon: Waving Flag	🚩
		Training	Icon: Schoolhouse Text: Training	🏫Training
		Multimedia Icon	Icon: Movie Projector Text: Show	🎬 Show
		Full Motion Video Icon	Icon: Clapboard Text: Video	🎬 Video
		Animation Icon	Icon: Comedy and Tragedy Masks Text: Animation	🎭 Animation
		Graphic Reference	Icon: Still Camera Text: Graphic	📷 Graphic
		Graphics Submenu	Multiple Icons on a pop-up: Disk to allow save Printer to allow printing Envelope to allow emailing Folder to allow saving in photo area.	

	Zoom Graphic	Icon: Magnifying Glass with + for Zoom In and with - for Zoom Out	
	Pan Graphic	Icon: Hand Note: Hand just above is acceptable	
	Acronyms/ Abbreviations	Icon: aA Symbol Text: Acronyms	aA Acronyms
	Acronyms/ Abbreviations	Icon: aA Symbol Text: Abbreviations	aA Abbreviations
	Help	Icon: Question Mark Text: Help	? Help
	Version Information	Icon: Interstate Road Sign Text: Version Info	 Version Info
	Performance Indicator	Icon: Hour Glass	
	Return UI to Default	Icon: Picture Frame with panes internal with Smiley Face	
	Reference to Text	Icon: Standard Web Practice - Blue Underlined Text as link to Text	See Reference 1
	Reference to Table	Icon: Black square surrounded by two additional squares	
	Reference to External Object	Icon: Lightning Bolt	
	Related Materials	Icon: Stack of books Text: Related Materials	 Related Materials
	Step Completed	Icon: Checkbox	<input checked="" type="checkbox"/> Adjust

APPENDIX C STANDARDIZED INFORMATION TABLES

C.1 Standardized Information Table Markup

Standardized Information Tables consist of content-tagged data which is formatted as a table. Each type of Standardized Information Table is always formatted in a standardized way. Each row and each cell within a row is uniquely identified by its content. Rows and columns are not format-tagged as rows and columns. Column heads are not tagged and are automatically generated by the publish engine for display in the Viewer.

C.2 Standardized Table Types

The following tables are designated as Standardized Information Tables:

- Controls and Indicators Table
- Displays/Alerts Table
- Environmental Conditions List
- Equipment, Accessories, and Documents Supplied Table
- Equipment Modification Table
- Fault Descriptions Table
- Field and Factory Changes List
- Major Equipment Table
- Materials List
- Protective Devices Index
- References List
- Required Conditions
- Safety Conditions List
- Special Tools List
- Test Fault Impacts Table
- Electrical Troubleshooting Index
- Abbreviations List
- Troubleshooting Procedure-B
- Useable On Codes List
- Group Assembly Parts List (GAPL)
- Numerical Index of Parts
- Reference Designation Index

C.3 Controls and Indicators Table

The Controls and Indicators Table provides the names of panel designations as marked on the equipment, the positions and operating functions for each control, and the normal operating condition of each indicator in each of the operating functions.

Table 1. Controls and Indicators - <title>

	Index No.	Control/Indicator	Position/Function
24784C	<i>Optional</i> <IndexNumber>	<ControlIndicator>	<function>
24784C	Notes: <i>Optional</i> <NotesList>		
S1000D Issue 3/4 (N/A)	NOT AVAILABLE (Use CALS Table)	NOT AVAILABLE (USE CALS Table)	NOT AVAILABLE (Use CALS Table)

Figure C - 1 Controls and Indicators Table Template

Table 1. Controls and Indicators

Index No.	Control/Indicator	Function
45A	Condenser Drain Gate Valve	When open, drains “shell side” of condenser into sump can drain.
45B	Pump Drain Gate Valve	When open, drains recirculating pump into sump can drain.

Figure C - 2 Controls and Indicators Table Example

C.4 Displays/Alerts Table

The purpose of the Displays/Alerts Table is to provide the required data for each display and alert. The table will indicate the index number (when used) referenced from the illustration, the associated display or alert and its nomenclature, including the reference designator, if applicable, and the function of the display or alert.

Table 1. Displays/Alerts - <title>

	Index No.	Display/Alert	Function
24784C	<i>Optional</i> <IndexNumber>	<DisplayAlert>	<function>
24784C	Notes: <i>Optional</i> <NotesList>		
S1000D Issue 3 IC=115 Schema= fault.xsd (Not until 4.1)	NOT AVAILABLE (Use CALS Table)	NOT AVAILABLE (USE CALS Table)	NOT AVAILABLE (Use CALS Table)
S1000D Issue 4.1 IC=115 <basicCorrelatedFaults> <faultDescr> <detectionInfo> Schema= fault.xsd	<viewLocation> <systemLocation> <catalogSeqNumberRef>	<systemIdent> <systemPosition> <faultMessageIndication> <faultMessageBody>	<faultEquip> <faultCond>
S1000D	Notes: <i>Optional</i> <remarks>		

Figure C - 3 Displays/Alerts Table Template

Table 1. Displays/Alerts.

Index No.	Display/Alert	Function
45A	Primary Widget Monitor	Monitors Widget Input
45B	Secondary Widget Monitor	Monitors Widget Output
Notes: - Return depleted widgets to Depot for recycling.		

Figure C - 4 Displays/Alerts Table Example

C.5 Environmental Conditions List

For each IP, the Environmental Conditions List provides a list of environmental conditions such as ambient temperatures, heat dissipation per unit, humidity limits, coolants (airflow, water or oil flow rate, chilled and de-mineralized seawater) that must be satisfied and that can be checked off.

Note (S1000D Only): Information Code (IC) “00Q” is reserved to identify the S1000D condcorssreftable.xsd (aka CCT) which can contain conditional applicability’s; however, the environmental information in CCT would not be presented in static tabular checkbox form. More likely, environmental choices within the CCT would be dynamically presented.

Table 1. Environmental Conditions - <title>

24784C	<EnvironmentEntry>
S1000D Issue 3 IC=030B, 043G, 126B, 142B, Schema= checklist.xsd, fault.xsd, proced.xsd, process.xsd, schedule.xsd	<reqcond> might be used; however, there is no attribute to categorize the information. Use CALS table.
S1000D Issue 4 IC=030B, 043G, 126B, 142B, Schema=checklist.xsd, fault.xsd, proced.xsd, process.xsd, schedule.xsd	<reqCond reqCondCategory="rcc02">

Figure C - 5 Environmental Conditions List Template

Note: In Figure C-6, the checkboxes to the left are for technicians to either check on paper or electronically.

Table 1. Environmental Conditions

<input type="checkbox"/>	Widgets must be stored at 25% humidity.
<input type="checkbox"/>	Widgets must be packed in foam.

Figure C - 6 Environmental Conditions List Example

C.6 Equipment, Accessories, and Documents Supplied Table

The Equipment, Accessories, and Documents Supplied Table is a tabular listing of all equipment, accessories, and other documents supplied.

Table 1. Equipment, Accessories, and Documents Supplied - <title>

	Qty.	Name	PIN/RIC/Unit No.	Dimensions	Weight/Volume
24784C	<Quantity>	<name>	<PINNumber> or <RICNumber> or <UnitNumber>	<Dimensions>	<WeightVolume>
24784C	Notes: <i>Optional</i> <NotesList>				
S1000D Issue 3 =017M, 063A Schema= fault.xsd, proced.xsd, checklist.xsd	<qty>	<name>	<identno>, <nsn @nsc @ncb @nin3to9>, <con>	<quantity @qtytype= "qty01">	<quantity @qtytype= "qty08"> Or <quantity @qtytype= "qty07">
S1000D Issue 4 IC=017M, 063A Schema= fault.xsd, proced.xsd, checklist.xsd <supplyDescr>	<reqQuantity>	<name>	<identNumber> <natoStockNumber @natoCodificationBureau, @natoltemIdentNumberC ore, @natoSupplyClass><supp lyRqmtRef>	Via <catalogSeqNum berRef> <quantity quantityType="qty 01">	<quantity quantityType="qty07 " or quantityType="qty08 ">
S1000D	Notes: <i>Optional</i> <remarks>				

Figure C - 7 Equipment, Accessories, and Documents Supplied Table Template**Table 1. Equipment, Accessories, and Documents Supplied.**

Qty.	Name	PIN/RIC/Unit No.	Dimensions	Weight/Volume
3	Control Panel	TF- 3237-F	69x30x16	800/19.2
2	Coil	TF-3246-J	38Rx69	7500/230
1	Coil	TF-3247-J	38Rx69	7500/230
2	Base	TF-3242-F	126x120x6	1930/52.5
1	Base	TF-3243-F	126x120x6	1930/52.5

Figure C - 8 Equipment, Accessories, and Documents Supplied Table Example

C.7 Equipment Modification Table

The Equipment Modification Table contains all equipment modification change data.

Table 1. Equipment Modification - <title>

	Change No.	Nomenclature	Description
24784C	<ChangeNumber>	<Nomenclature>	<remarks>
24784C	Notes: <i>Optional</i> <NotesList>		
S1000D Issue 3 IC=670C Schema=many	<authno>	<modtitle>	<notes>
S1000D Issue 4 IC=670C	@authorizationIdent	<modificationTitle>	<authorityNotes>

Schema=many <modification>			
S1000D	Notes: <i>Optional</i>		

Figure C - 9 Equipment Modification Table Template**Table 1. Equipment Modification**

Change No.	Nomenclature	Description
45A	Primary Widget Monitor	Do ASAP.
45B	Secondary Widget Monitor	Do next cycle.
Notes: - Check date to make sure modification is the latest. - Check to see if cycle modification is required.		

Figure C - 10 Equipment Modification Table Example

C.8 Fault Descriptions Table

The Fault Descriptions Table lists all fault descriptions along with the corresponding maintenance action to be taken.

Table 1. Fault Descriptions - <title>

	Fault Description	Maintenance Action
24784C	<FaultDescriptor>+	Optional <Reference> <MaintenanceAction>
	(Blank because <MaintenanceAction> Repeats)	
	<FaultDescriptor>+	<%ALTnote;>
	System: SystemFaultDescriptor<title>	
SubSystem: SubSystemEntry<title>		
24784C	Notes: <i>Optional</i> <NotesList>	
S1000D Issue 3 IC=410C Schema=fault.xsd <ifault>	<describe> <detail-fdesc> System: <sys-name> SubSystem: <subsys-name>	<locandrep> <remarks>
S1000D Issue 4 IC=410C Schema=fault.xsd <isolatedFault>	<faultDescr> <detailedFaultDescr> System: <systemName> SubSystem: <faultySubSystem>	<locateAndRepair> <remarks>

S1000D	Notes: <i>Optional</i>
--------	------------------------

Figure C - 11 Fault Descriptor Table Template**Table 1. Fault Descriptions**

Fault Description	Maintenance Action
Steam Leakage	Locate Steam Leak - NIST 123
	Plug Steam Leak - NIST 567
	Seal Steam Leak Plug – NIST 587
	Consult NIST Steam Pubs.
System: Plumbing	
Water Leak	Locate Water Leak – NIST 520
	Plug Water Leak – NIST 721
	Seal Water Leak Plug – NIST 889
	Consult NIST Plumbing Pubs.
SubSystem: Drainage	
Drainage Leak	Locate Drainage Leak – NIST 491
	Plug Drainage Leak – NIST 649
	Seal Plug Drainage Leak – NIST 851
	Consult NIST Drainage Pubs.
Notes:	
- All relevant NIST pubs are on-line.	

Figure C - 12 Fault Descriptor Table Example

C.9 Field and Factory Changes List

The Field and Factory Changes List identify field changes, factory changes, engineering changes or notices, modifications, and so forth.

Table 1. Field and Factory Changes - <title>

	Change No.	Nomenclature	Description
24784C	<ChangeNumber>	<Nomenclature>	<desc>
24784C	Notes: Optional <NotesList>		
S1000D Issue 3 IC=00T Schema=many	<authno>	<modtitle>	<notes>
S1000D Issue 4 IC=00T Schema=many	@authorizationIdent	<modificationTitle>	<authorityNotes>
S1000D	Notes: Optional		

Figure C - 13 Field and Factory Changes List Template**Table 1. Field and Factory Changes**

Change No.	Nomenclature	Description
45A	Primary Widget Monitor ¹	Adjust static filter to new tolerance.
45B	Secondary Widget Monitor	Change tuning dial to LCD. ²
Notes:		
- Return depleted widgets to Depot for recycling.		
¹ Use appropriate static filter.		
² Do not use Plasma option.		

Figure C - 14 Field and Factory Changes List Example

C.10 Major Equipment Table

A separate Major Equipment Table shall be provided for each combat system element. The tables shall include common name or abbreviation, nomenclature, quantity, and location.

Table 1. Major Equipment				
	Common Name	System Nomenclature	Qty.	Location
24784C	<CommonName>	<SystemNomenclature>	<Quantity>	<location>
24784C	<i>Optional <title> from <MajorEquipmentGroup></i>			
S1000D Issue 3 IC=044E Schema= ipd.xsd <isn>	<dfp>		<uoi>	<dfi>
S1000D Issue 3	Optional <name> from <ein>			
S1000D Issue 4 IC=044E Schema=ipd.xsd <itemSequenceNumber>	<descrForPart>	<descrForItem>	<unitOfIssue>	<descrForLocation>
S1000D Issue 4	<i>Optional <name> from <functionalItemRef></i>			

Figure C - 15 Major Equipment Table Template

Table 1. Major Equipment			
Common Name	System Nomenclature	Qty.	Location
Shipboard Monitoring			
Widget1 Monitor	Electronic Device	1	Bulkhead 1
Widget1 Sensor	Electronic Device	5	Bulkhead 1
Widget2 Monitor	Electronic Device	3	Bulkhead 3

Figure C - 16 Major Equipment Table Example

C.11 Materials List

The Materials List¹ is a list of all materials (consumable materials and/or expendable items) required to perform maintenance type procedures.

Table 1. Materials				
	Nomenclature	Restriction(s)	Qty.	Part No. / Spec No.
24784C	<Nomenclature>	@maintlevel	<Quantity>	Part No: <PartNumber>
				Spec No: <SpecNumber>
				Not Specified here for <NotSpecified>

¹ See also S1000D Issue 3.0 Chap 6.2.3.3 para 2.4.5 Consumables, materials and expendables

			Blank here for missing <Quantity>	Spec No: <SpecNumber>
24784C	Notes: Optional <NotesList>			
S1000D Issue 3 IC=070D,072A, 302A, 402A, 502A, 602A, 934A Schema=proced. xsd	<nomen>	@refapplic <Itemloc>	<qty>	Part No: <pnr> Spec No: @authdoc CAGE: @mfc Stock No: <nsn @nsc @ncb @nin3to9>
S1000D Issue 4 IC=070D,072A, 302A, 402A, 502A, 602A, 934A Schema=proced. xsd <reqSupplies>	<name>	@itemLocationCode @applicRefId	<reqQuantity>	Part No: <partNumber> Spec No: @authorityDocument CAGE: @manufacturerCodeValue Stock No: <natoStockNumber @natoCodificationBureau, @natolItemIdentNumberCo re, @natoSupplyClass>
S1000D	Notes: Optional <remarks>			

Figure C - 17 Materials List Template

Nomenclature	Restrictions	Qty.	Part No. / Spec No.
Cooling fan, dual auxiliary, Unit 61			Part No: Not Specified
Oscilloscope, AN/USM-425			Part No: SCAT 4308
Probe, oscilloscope, 10:1			Part No: Not Specified
Screwdriver, adjustment			Part No: Not Specified
Screwdriver, flat tip, 4"			Part No: JJ134252 Cage: K0378 Stock No: 4920-99-1234567
Screwdriver, No. 2 Phillips			Part No: Not Specified
System Diagnostic Test (SDT) tape			Spec No: MIL-T-27730A

Figure C - 18 Materials List Example

C.12 Protective Devices Index

The Protective Devices Index lists all protective devices, such as fuses, circuit breakers, and so forth. It includes the item reference designation, front panel marking of the device, trip-out value of the circuit breaker and rating of fuses, name of the circuit protected and a reference to troubleshooting diagram(s).

Table 1. Protective Devices Index - <title>

	Ref. Desig.	Front Panel Marking	Voltage Rating	Amp Rating	Circuit Protected	Reference
24784C	<Reference Designator>	<FrontPanel Marking>	<Rating Volts>	<Rating Amps>	<Circuit Protected>	<Reference>

24784C	Notes: <i>Optional</i> <NotesList>					
S1000D Issue 3 IC=441C Schema= fault.xsd, ipd.xsd	<lru> with <csnref> to retrieve <rfd>	<nomen>	<qtyvalue> <quantity @qtytype=qt y06>	<qtyvalue>qty uom="A">	<reqconds> <reqcblst>	<refs>
S1000D Issue 4 IC=441C Schema= fault.xsd, ipd.xsd	<lru> with <catalogSeq NumberRef> to retrieve <referenceD esignator>	<name>	<quantityV alue quantityUni tOfMeasure ="V"> <quantity @quantityT ype=qty06>	<quantityVal ue quantityUnit OfMeasure= "A">	<reqCondGro up> <reqCondCirc uitBreaker>	<refs>
S1000D	Notes: <i>Optional</i>					

Figure C - 19 Protective Devices Index Template

Table 1. Protective Devices Index

Ref. Desig.	Front Panel Marking	Voltage Rating	Amp Rating	Circuit Protected	Reference
123-3456	APQ-37	123V	789A	<i>Zinc jacket</i>	NIST 235-567
456-2348	AEVI-8	456V	321A	Tin top	NIST 434-567/8
Notes: - See other relevant NIST publications for more details.					

Figure C - 20 Protective Devices Index Example

C.13 References List

The References List² is a list of the manuals that pertain to system and subsystem equipment, and other documents of interest or use to operating or maintenance personnel.

	Document No.	Document Title
24784C	<Reference>	<title>
S1000D Issue 3 IC=017B Schema= many	<pubcode>	<pubtitle>
S1000D Issue 4 IC=017B Schema=many	<externalPubCode>	<externalPubTitle>

Figure C - 21 References List Template

Table 1. References	
Document No.	Document Title
TMINS	AN/MK-53 Decoy Launching System
TMINS	AN/SLA-10B
TMINS	AN/ULQ-16(V)2

² See also S1000D Issue 3.0 Chap 6.2.2 para 15 References

TMINS	Additional Documentation
-------	--------------------------

Figure C - 22 References List Example**C.14 Required Conditions**

Required Conditions³ presents a list of settings that must be checked before continuing with a procedure.

Table 1. Required Conditions - <title>

24784C	<RequiredCondEntry>
S1000D Issue 3 IC=126A, 126B Schema= checklist.xsd, fault.xsd, proced.xsd, process.xsd	<reqconds>
S1000D Issue 4 IC=126A, 126B Schema=checklist.xsd, fault.xsd, proced.xsd, process.xsd	<reqCondGroup>

Figure C - 23 Required Conditions Template

Note: In Figure C-24, the checkboxes to the left are for technicians to either check on paper or electronically.

Table 1. Required Conditions	
<input type="checkbox"/>	Power is on.
<input type="checkbox"/>	Operating Mode is stopped.

Figure C - 24 Required Conditions Example**C.15 Safety Conditions List**

The Safety Conditions List⁴ is a list of general safety instructions for the IP.

Table 1. Safety Conditions - <title>

24784C	<SafetyEntry>
S1000D Issue 3 IC=012C Schema= checklist.xsd, fault.xsd, proced.xsd, process.xsd	<safety>
S1000D Issue 4 IC=012C Schema= checklist.xsd, fault.xsd, proced.xsd, process.xsd	<reqSafety>

³ See also S1000D Issue 3.0. Chap 6.2.3.3 para 2.4.2 Required Conditions

⁴ See also S1000D Issue 3.0 Chap 6.2.3.3 para 2.4.7 Safety Conditions List

Figure C - 25 Safety Conditions List Template

Note: In Figure C-26, the checkboxes to the left are for technicians to either check on paper or electronically.

Table 1. Safety Conditions

	Make sure power is de-energized.
	Make sure pressure is within the operating range.

Figure C - 26 Safety Conditions List Example

C.16 Required Persons List (S1000D Only)

The Required Persons ⁵List is a list of people and skills required for the DM.

Table 1. Required Persons

Person	Category	Skill Level	Trade/Trade Code	Estimated Time
<person>	category	skill	<trade>	<esttime>
<asrequir>				

Figure C - 27 Required Persons List

C.17 Special Tools List

The Special Tools List⁶ is a tabular listing of all special tools, tool kits, test equipment, miscellaneous parts, and Government-furnished items that form a part of, or are supplied (or not supplied) with, the system or equipment.

Table 1. Special Tools

	Nomenclature	Qty.	Part No. / Spec No. / CAGE Code / Stock Code No.
24784C	<Nomenclature>	<Quantity>	Part No: <PartNumber>
			Spec No: <SpecNumber>
			CAGE: <CageCode>
			Stock No: <StockCodeNumber>
			...
			One of <PartNumber> or <SpecNumber> or <CageCode> or <StockCodeNumber>
24784C	Notes: <i>Optional</i> <NotesList>		

⁵ See also S1000D Issue 3.0 Chap 6.2.3.3 para 2.4.3 pg 12 Required Persons List

⁶ See also S1000D Issue 3.0 Chap 6.2.3.3 para 2.4.4.7 Support Equipment

S1000D Issue 3 IC=061B Schema= checklist.xsd, fault.xsd, proced.xsd, process.xsd <supequi>	<nomen>	<qty>	Part No: <pnr> Spec no: @authdoc CAGE: @mfc Stock No: <nsn @nsc @ncb @nin3to9>
S1000D Issue 4 IC=061B Schema= checklist.xsd, fault.xsd, proced.xsd, process.xsd <supportEquipDescr >	<name>	<reqQuantity>	Part No: <partNumber> Spec no: @authorityDocument CAGE: @manufacturerCodeValue Stock No: <natoStockNumber @natoCodificationBureau, @natoltemIdentNumberCore, @natoSupplyClass>
S1000D	Notes: Optional <remarks>		

Figure C - 28 Special Tools List Template

Note: In Figure C-29, based on the tag used in the right-most column, the words “Part No:”, “Spec No:”, “CAGE:” or “Stock No:” will be automatically generated as appropriate. Also, the checkboxes to the left are for technicians to either check on paper or electronically.

Table 1. Special Tools

Nomenclature	Qty.	Part No. / Spec No. / CAGE Code / Stock Code No.
Torque wrench	1	Part No.: 234-12A
Hose fitting wrench	2	Stock Code No.: 4987-99-1234567
Notes: - Reserve these tools in advance.		

Figure C - 29 Special Tools List Example

C.18 Test Fault Impacts Table

The Test Fault Impacts Table is provided for each major combat system function. This table contains tests with fault isolation pictorial and fault impact evaluation references for each combat mission (AAW, ASW, SUW, and shore bombardment).

Table 1. Test Fault Impacts - <title>

	Ref.	Test	Test Brief	Fault Isolation Pictorial	Impact Evaluation Ref.
24784C	<IndexNumber>	<Test>	<Equipment>	<FaultIsolationRef>	<ImpactEvaluationRef>
24784C	Notes: Optional <NotesList>				
S1000D Issue 3 IC=415A Schema=fault.xsd	<lr>	<testnomen>	<testdesc>	<figure>	<testproc>

S1000D Issue 4 IC=415A Schema=fault.xsd	<lru>	<testName>	< testDescr>	<figure>	< testProcedure>
S1000D	Notes: <i>Optional</i> <remarks>				

Figure C - 30 Test Fault Impacts Table Template

Table 1. Test Fault Impacts				
Ref.	Test	Test Brief	Fault Isolation Pictorial	Impact Evaluation Ref.
45A	Voltage	Volt Meter	Sec. 2, # 3	Sec.5, para. 5
46B	Amperage	Ammeter	Sec. 3, #16	Sec.5, para. 6
Notes: - Do not conduct this test if a thunderstorm is nearby.				

Figure C - 31 Test Fault Impacts Table Example**C.19 Electrical Troubleshooting Index**

Electrical Troubleshooting Indices are prepared for all relay coils, switches, and indicator lamps. They shall include the item reference designation, the functional name, energizing voltage, and a reference to the troubleshooting diagram(s).

Table 1. Electrical Troubleshooting Index - <index>

	Ref. Des.	Functional Name	Voltage	Reference
24784C	<ReferenceDesignator>	<name>	<Voltage>	<Reference>
24784C	Notes: <i>Optional</i> <NotesList>			
S1000D Issue 3 IC=367A Schema= fault.xsd, ipd.xsd	<lru> with <csnref> to retrieve <rfd>	<nomen>	<qtyvalue> <quantity @qtytype=qty06>	<figure>
S1000D Issue 4 IC=367A Schema=fault.xsd, ipd.xsd	<lru> with <catalogSeqNumberRef > to retrieve <referenceDesignator>	<name>	<quantityValue> <quantity @quantityType=qty0 6>	<figure>

Figure C - 32 Electrical Troubleshooting Index Template**Table 1. Electrical Troubleshooting Index**

Ref. Des.	Functional Name	Voltage	Reference
A14AL1	Power Line Filter	120 VAC	NIST 43-23 Sec. 3, para.12
A39	Thermal Switch Assembly	12 VDC	NIST 42-56 Sec. 4. para. 3
Notes: - NIST references are available on line.			

*Figure C - 33 Electrical Troubleshooting Index Example***C.20 Abbreviations List**

The Abbreviations List is a consolidated list that identifies and defines all abbreviations, acronyms, and uncommon terms used in the TM.

Table 1. Abbreviations - <title>

	Abbreviation/Acronym/Term	Definition
24784C	<abbrev>	<def>
S1000D Issue 3 IC=005A,005B, 005C Schema=many	<acronym>	<acrodef> <acroterm>
S1000D Issue 4 IC=005A,005B, 005C Schema=many	<acronym>	<acronymDefinition> <acronymTerm>

*Figure C - 34 Abbreviations List Template***Table 1. Abbreviations**

Abbreviation/Acronym/Term	Definition
AAA	Anti-Aircraft Artillery
AOS	Acquisition of Signal
est	Estimated
ETA	Estimated Time of Arrival
ETD	Estimated Time of Departure
LOS	Loss of Signal

*Figure C - 35 Abbreviations List Example***C.21 Troubleshooting Procedure-B**

Troubleshooting Procedure-B lists procedures for detecting, isolating, and correcting systems, subsystems, and equipment failures and malfunctions.

Table 1. Troubleshooting Procedure - <title>

	Symptom	Probable Cause/ Malfunction	Corrective Action
24784C	<symptom>	<malfunction>	<action> <i>Optional</i> <Reference>
	(Blank because <SymptomGroup has multiple <MalfunctionGroups>)	<malfunction>	<action> <i>Optional</i> <Reference>

		<malfunction>	<action> <i>Optional</i> <Reference>
	<symptom>	<malfunction>	<action> <i>Optional</i> <Reference>
		(Blank because <MalfunctionGroup> has multiple <action>s)	<action> <i>Optional</i> <Reference>
			<action>
			<action>
	<symptom>	<malfunction>	<action>

	<symptom>	<malfunction>	<action>
24784C	Notes: <i>Optional</i> <NotesList>		
S1000D Issue 3 IC=410F Schema=fault.xsd	<afr><fcondition> <describe>	<afi><describe> <fbasicdesc> <findication>	<afi><afi- proc><isoproc>
S1000D Issue 4 IC=410F Schema=fault.xsd	<faultReporting> <faultCode> <faultDescr>	<faultIsolation><faultDescr> <systemName> <faultMessageBody> <faultMessageIndication>	<faultIsolation> <faultIsolationProcedure> <isolationProcedure>
S1000D	Notes: <i>Optional</i> <remarks>		

Figure C - 36 Troubleshooting Procedure-B Template

Table 1. Troubleshooting Procedure

Symptom	Probable Cause/ Malfunction	Corrective Action
High steam pressure light is on and steam pressure has high reading above 110 psig.	Steam dump valve malfunction.	Check operation of steam dump valve. Manually open valve if it is stuck closed. To open manually, turn hand wheel to full counterclockwise (open) position.
	Malfunctioning of the pilot control pneumatic valve due to plugged steam pressure line or cracked pneumatic line.	Blow down pneumatic lines to controller. Check air supply to pilot controller.
Low feedwater level light on.	Low water level in feedwater tank.	Check feedwater tank. Add water as required.
High feedwater level light on.	High water level in feedwater tank.	Check feedwater tank. Do not overfill.
Salinity light on.	Salinity above .05 epm in the condensate discharge from the boiler condenser or the condensate cooler due to water leak.	<ul style="list-style-type: none"> • Locate and fix leak. • Flush system to clean salinity cells. • Return system to normal operation.

Figure C - 37 Troubleshooting Procedure-B Example

C.22 Usable On Codes List

The Usable On Codes List provides a list of the useable on codes and their meanings.

Table 1. Usable On Codes for Figure 1 IPB Figure

	Used on Code	Definition
24784C	<UseableOnCode>	<ModelNumber>
		<ModelNumber>Optional <remarks>
S1000D Issue 3 IC= Schema= ipd.xsd	<smr>	@mov
S1000D Issue 4 IC= Schema=ipd.xsd <locationRcmdSegment>	<sourceMaintRecoverability>	@modelVersionValue
		@modelVersionValue optional<effectivity>

Figure C - 38 Usable On Codes List Template**Table 1. Usable On Codes for Figure 1 IPB Figure**

Used on Code	Definition
A	EL-587
B	EL-588 This is a remark.

Figure C - 39 Usable On Codes List Example**C.23 Group Assembly Parts List (GAPL)**

The GAPL is a tabular listing of all authorized repair parts for use in the performance of maintenance.

Table 1. GAPL for Figure 1 IPB Figure								
	Figure and Index No.	Ref. Desig.	Part No.	Part Name and Description	Qty. Per Assy.	CAGE Code	Used On Code	SM &R Code
24784C	@refs @Con figIDR ef Magn etic Liquid - oxyge n QECA ESDS HCI	<Refere nceDesi gnator>	GAPLPartNumb er @type <GAPLPartNum ber>	<Nomenclature> Optional <NHANote> Optional <DrawingSpecN umber> Optional <ExternalRef> Optional <tolerance> Optional <size> Optional <drilltrim> Optional <DescriptionNot e>	Option al <units >	Option al <Cage Code>	Optional <Useable OnCode>	Opti onal <S MR Cod e>

NSWCCD-80-TR-2013/011

			Govt: <GAPLPartNum ber>					
			Vendor:					
			None					
			Not Assigned					
			NSN:					
			Commerical: (Standard is not Labeled)					
	<IndexNum ber>			<DescriptionNot e>				
S1000D Issue 3 IC=075C, 907B Schema=ipd.xsd	<isn>	<rfd>	<pnr> <nsn @nsc @ncb @nin3to9>	<qtytolerance> <qna> <remarks>	<qui>	<mfc>	= <ccs> <uca> <uce>	<sm r>
S1000D Issue 4 IC=075C, 907B Schema=ipd.xsd	@item SeqN umber Value	referen ceDesig nator	partNumber @natoCodificatio nBureau @natoSupplyCla ss @natoltemIdentN umberCore fullNatoStockNu mber	quantityTolera nce quantityPerNex tHigherAssy remarks	quanti tyPer Unit	@man ufactur erCod eValue	<applicabil itySegmen t> usableOn CodeAssy usableOn CodeEqui p	sour ceM aint Rec over abilit y

Figure C - 40 GAPL Template

Table 1. GAPL for Figure 3 IPB Figure

Figure and Index No.	Ref. Desig .	Part No.	Part Name and Description							Qty. Per Assy .	CAG E Cod e	Use d On Cod e	SM&R Code
			1	2	3	4	5	6	7				
Fig 3													
-1	1A1	3052251G1 3052359G1	END ITEM . Detailed part for End Item							REF 1			PFOG EN
-2		3052398G1	. ASSEMBLY							1			
-3		3017972G1	. Attaching Part for Assembly							1			
-4		MS1957-28	. . Detailed part A for Assembly							18			
		MS15795- 805	. . Detailed part B for Assembly							18			
-5		3052395G1	. . SUBASSEMBLY							1			
-6		MS1957-28	. . Attaching part A for Subassembly							6			

-7		MS15795-805 82-35-302-15	.. Attaching part B for Subassembly .. Attaching part C for Subassembly and this Attaching Part has a runover line	6 2	9422 2		
-8		MS20426AD 3-5	... Detailed part for Subassembly	2			
-9		3065314P3	... SUB-SUBASSEMBLY	1			
-10		3052395P1	... Attaching part for Sub-Subassembly	1			
-11	1A1A 1	3052323G2 Detailed Part A for Sub-Subassembly	1		A	
	1A1A 1	3052323G1 Detailed Part B for Sub-Subassembly	1		B	
-12	1A1A 2	3052333G1 SUB-SUB-SUBASSEMBLY	1			
-13	1A1A 3	3052255G1 Attaching part A for Sub-Sub- Subassembly	1			
-14	1A1A 4	3052328G1 Attaching part B for Sub-Sub- Subassembly	1			
-15	1A1A 5	3017930G1 Attaching part C for Sub-Sub- Subassembly	1			
-16	1A1A 6	3017946G1 Attaching part D for Sub-Sub- Subassembly	1			
-17	1A1A 7	3017926G1 Attaching part E for Sub-Sub- Subassembly	1			
-18	1A1A 8	3052333G2 Attaching part F for Sub-Sub- Subassembly	1			
-19	1A1A 9	3052260G2 Detailed part A for Sub-Sub- Subassembly	1		A	
	1A1A 9	3052260G1 Detailed part B for Sub-Sub- Subassembly	1		B	
	1B1A 9	4667840N3 Detailed part Alternate part for Sub- Sub- Subassembly	1		*C	

Figure C - 41 GAPL Example

C.24 Numerical Index of Parts

The Numerical Index of Parts is an auto-generated index of part numbers. This table is auto-generated by the publisher

Table 1. Numerical Index of Parts

	Part No.	IP/Figure/Index No.
24784C	GAPLPartNumber @type <GAPLPartNumber>	IP, Figure #, <IndexNumber>
S1000D Issue 3 IC=942B Schema=ipd.xsd	<csn>	<graphic boardno>
S1000D Issue 4 IC=942B Schema=ipd.xsd	<catalogSeqNumber>	<graphic infoEntityIdent>

Figure C - 42 Numerical Index of Parts Template

Table 1. Numerical Index of Parts

Part No.	IP/Figure/Index No.
123456789012345	055 00/1/-
A1234567 23456	055 00/1/1
	055 00/2/1
AB1234567 23456	055 00/1/-
AC1234567 23456	055 00/2/-
C1234567 23456	055 00/1/-
D1234567 23456	055 00/1/-
E1234567 23456	055 00/1/2
F1234567 23456	055 00/1/3

Figure C - 43 Numerical Index of Parts Example

C.25 Reference Designation Index

The Reference Designation Index provides direct access to the specific manual, figure, and index number related to a specific reference designation. It is auto-generated by the publisher.

Table 1. Reference Designation Index

	Ref. Desig.	IP/Figure/Index No.	Part No.
24784C	<ReferenceDesignator>	IP, Figure #, <IndexNumber>	GAPLPartNumber @type <GAPLPartNumber>
S1000D Issue 3 IC=942C Schema=ipd.xsd	<rfd>	<graphic boardno	<pnr>
S1000D Issue 4 IC=942C Schema=ipd.xsd	<referenceDesignator>	<graphic infoEntityIdent	<partNumber>

Figure C - 44 Reference Designation Index Template

Table 1. Reference Designation Index

Ref. Desig.	IP/Figure/Index No.	Part No.
1A1	055 00/1/-	123456789012345
1A1A1	055 00/1/1	A1234567 23456
	055 00/1/-	D1234567 23456
	055 00/2/1	A1234567 23456
1A1A1-EQ	055 00/1/-	C1234567 23456
1A1A2	055 00/1/2	E1234567 23456
	055 00/1/3	F1234567 23456
1A1A21C	055 00/1/-	AB1234567 23456
	055 00/2/-	AC1234567 23456

Figure C - 45 Reference Designation Index Example

APPENDIX D REQUIREMENTS FOR PREVIOUS (STEP) AND NEXT (STEP) AND RELATION TO OUTER SHELL BACK AND FORWARD

D.1 Introduction

The requirements for PREVIOUS and NEXT are explained here through use cases and state tables.

D.1.1 General Requirements and Definitions

1. BACK and FORWARD are native to the outer shell (e.g., common web browser). BACK button is to display the previous screen (if the user has been to one). FORWARD button is to display the next screen (if the user has already been to it). Shortcuts within the Inner Shell to these may be placed on the Project Specific/Additional Navigation Bar for convenience.
2. PREVIOUS and NEXT are for procedural steps and therefore read as PREVIOUS (step) and NEXT (step).
3. Upon initially entering the first step, PREVIOUS (step) shall be grayed out and will not become active until after NEXT (step) has been selected. Upon reaching the final step, NEXT (step) shall be grayed out.
4. Initially entering a procedure starts with the preliminary requirements and safety information before arriving at the first step.
5. For S1000D only, after initially entering a Procedural Data Module (DM), selecting NEXT (step) shall step through the following sections of the DM (in the sequence identified below):
 - a. <commonInfo>
 - b. Each first child of the <productionMaintData> element(if present)
 - c. Each first child of the <reqCondGroup> element
 - d. Each grandchild of the <reqSafety> element
 - e. Each <proceduralStep> element (to include nested <proceduralStep> elements)
 - f. Each first child of the <closeRqmts><reqCondGroup> element
6. Linking from steps in one S1000D DM or 24784 Information Package (IP) to another must be to the **start** of the second DM (or IP) and cannot be to a step within the second DM (or IP). This avoids a major safety issue where it is possible to by-pass both the Preliminary Requirements and any applicable Dangers, Warnings, and Cautions. See also “Traversing” below.
7. Display of Alerts and Notes (e.g., Danger, Warning, Caution, Notes [DWCN]). When an alert or alerts are to be displayed in-line and apply to the entire task or procedure, the alert shall be displayed in-line prior to the applicable data. Each step shall first display the Dangers (if any), then Warnings (if any), then Cautions (if any), and then Notes (if any) followed by the step number and step paragraph. The step anchor (Target ID) shall be at the beginning of the step and display all preliminary DWCNs prior to each step action. The step number shall be with the step paragraph and follow the Dangers, Warnings, Cautions, and

Notes. (See also 3.6.3.6 *Display and Acknowledgement of Alerts and Notes* in main document.)

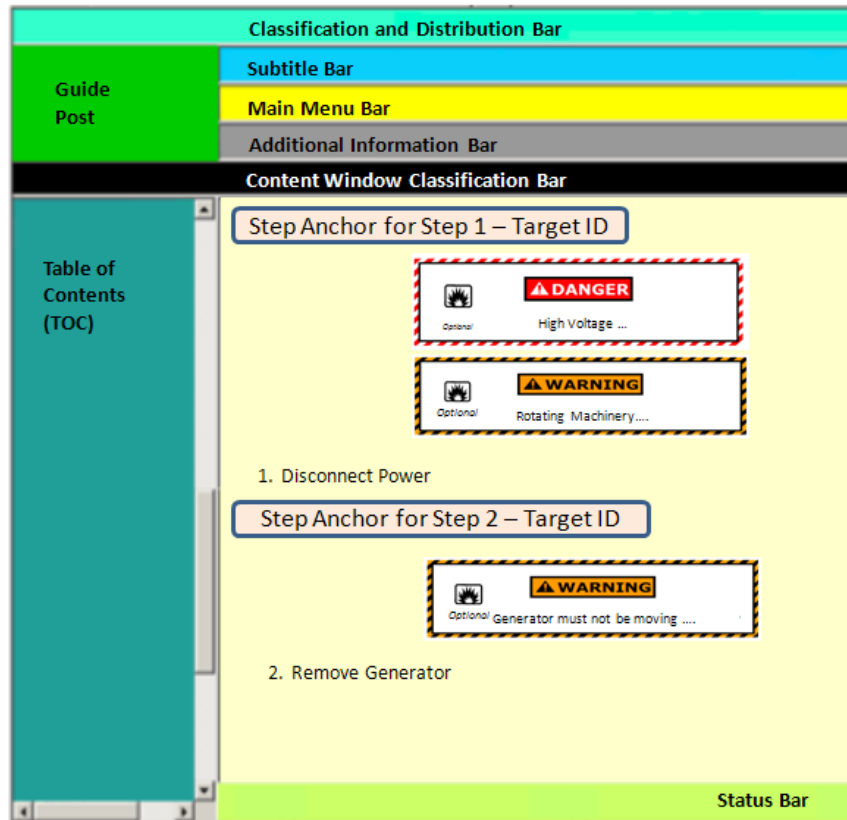


Figure D - 1 Step Display in Content Window

8. When the viewer displays a step, the Content Window should display as in Figure D - 1.
9. "Before State" means the current neutral state of buttons/function before action is taken.
10. "After State" provides information on the action when a button/function is performed.
11. "Back" only goes to prior screen before starting procedural steps. When procedural steps cover more than one screen, use of PREVIOUS (step) is required to reach prior screens.
12. For S1000D only, PREVIOUS (step)/NEXT (step) are only available for the following DM Types:
 - Procedural information
 - Fault information
 - Crew/operator information
 - Process data module
 - Learning data module
 - Maintenance checklists and inspections
 - Training information
 - The following Data Module Types do not have step elements.

- Descriptive information
 - Parts information
 - Maintenance planning information
 - Battle damage assessment and repair information
 - Wiring information
 - Technical information repository data module
 - Applicability
13. “ON” within the state tables means that the control is visible and enabled. “OFF” within the state tables mean that the control is disabled. A “?” within a state table means that the visibility and whether the control is enabled is unknown for that mode of operation.
14. Within the same DM (or IP), “Branching” targets steps, while “Internal Referencing” targets other elements such as tables and figures. “Traversing” is to another DM (or IP). “Traversing” targets include tables, figures, and descriptive information; however, never to another step in the second DM (or IP). This avoids a major safety issue where it is possible to by-pass both the Preliminary Requirements and any applicable Dangers, Warnings, and Cautions.
15. “Scroll” “ON” means that if needed scrolling is available.
16. For MIL-DTL-24784C only, within a <step>:
- 16.1. <CrossRef> or <xlink> with only the attribute ‘ xrefid’ is an internal reference within the IP.
- 16.1.1. If the xrefid does not point to a <step> ID, then the destination is not to a step. Thus, only BACK should be enabled (NEXT (step) and PREVIOUS (step) should be grayed out). This is because the destination of the xrefid (e.g., a figure) is within the same IP as the <step> so clicking the link (e.g., to the figure) is the same as scrolling down the page to that figure. The anchor remains at the current step.
- 16.1.2. However, if the xrefid is to a <step> then BACK, NEXT (step), PREVIOUS (step), etc. shall be as normal since the focus/anchor will now be moved to the destination step.
- 16.2. <FigureRef> or <external> uses the ENTITY reference mechanism to open another file. Thus, it is as if going to an external reference for reference material. Typically, <external> is for looking at a media presentation usually for training. Thus, only BACK should be enabled (NEXT (step) and PREVIOUS (step) should be grayed out).
- 16.3. <CrossRef> with either the attribute ‘ otherprocedure’ or the attribute’ otheip’ means it is a traversal to another IP. Also, <xlink> containing a <CrossRef> with either the attribute ‘ otherprocedure’ or the attribute’ otheip’ means it is a traversal to another IP. Thus, only BACK should be enabled (NEXT (step) and PREVIOUS (step) should be grayed out).
- 16.4. <ExternalRef> is by definition a traversal to another something. Thus, only BACK should be enabled (NEXT (step) and PREVIOUS (step) should be grayed out).
- 16.5. <CalloutData> element can then provide for two types of links:
- 16.5.1. <PartDataRef>, thus, only BACK should be enabled (NEXT (step) and PREVIOUS (step) should be grayed out).

- 16.5.2. <NavigateRef> is a traversal to a task or other parts on the IETM. If the 'xref' is to a <step> then, BACK, NEXT (step), PREVIOUS (step), etc. shall be as normal. Otherwise, only BACK should be enabled (NEXT (step) and PREVIOUS (step) should be grayed out).

D.1.2 Other Actions and Functions

Table D-1 provides the states of other actions and functions associated with the viewer while procedural actions are being performed. The controls for TOC, SEARCH and TABS are listed with "?" because whether the controls should be visible and enabled is unknown at this time for procedural steps.


Before State							Action 	After State						
Guidepost	Print	Applicability	TMDER	TOC	SEARCH	TABS		Guidepost	Print	Applicability	TMDER	TOC	SEARCH	TABS
On	On	On	On	On	On	On	Procedural Steps	On	On	On	On	?	?	?

Table D - 1 Other Actions & Functions

D.2 Step Use cases

D.2.1 Basic Step Navigation

Table D-2 provides the basic sequential action of the viewer navigating through steps either advancing to the next step or returning to the previous step. An example is: In a non-dynamic procedure, user currently on Step 3 [Index 3] would use NEXT (step) function to go to Step 4 [Index 4] and use PREVIOUS (step) to return to Step 2 [Index 2] (at the target location which is the DWCN if any prior to the step) from Step 3 [Index 3].


Index	Before State						Step Loc	Action 	After State				
	BACK	FORW	PREV (Step)	NEXT (Step)	Scroll	Prev Step Loc			BACK	FORW	PREV (Step)	NEXT (Step)	Scroll
1	On	Off	Off	On	On	None	1	Initial Step 1	Prior Screen	None	None	2	On
2	On	Off	On	On	On	1	2	Step 2	Prior Screen	None	1	3	On
3	On	Off	On	On	On	2	3	Step 3	Prior Screen	None	2	4	On
4	On	Off	On	On	On	3	4	Step 4	Prior Screen	None	3	5	On
5	On	Off	On	On	On	4	5	Step 5	Prior Screen	None	4	6	On
6	On	Off	On	Off	On	5	6	Last Step 6	Prior Screen	None	5	None	On

Table D - 2 Basic Step Navigation


D.2.2 Basic Step Branching (Within the same DM or IP)

For basic step branching, a branch question is placed in a step and the user answers the question either by selecting NEXT (step) or ‘one-click’ on the answer. For example, a step might read “Check Voltage. If the voltage is above 4.5 V, go to Step 15”, where “go to Step 15” is a hyperlink.


In Table D-3 the user arrives at Step 2 [Index 2] and responds to a statement that could cause branched navigation. If the response is ‘False’, then Viewer continues to Step 3 [Index 4] using NEXT (step) but if the response is ‘True’ then the user jumps to Step 15 [Index 3]. This means the user could have arrived at Step 15 either directly from Step 14 [Index 16] or by branching from Step 2 [Index 3]. At Step 15, using PREVIOUS (step), the user’s return will depend on how they arrived and will return them to either Step 14 [Index 16] (at the target location which is the DWCN if any prior to the step) or because of branching to Step 2 [Index 17] (at the target location which is the DWCN if any prior to the step).

If the user returns to Step 2 using PREVIOUS (step) [Index 4 or Index 17], the user must re-answer the branch question in Step 2 to advance in the procedure. This is to ensure the user did not mistakenly respond to the branched step and is returning to correct the mistake. When returning to a step that branches, PREVIOUS (step) will return the user to the logical step that initially led them to the branch step (at the target location which is the DWCN if any prior to the step).

In the Table D-3 example, when the user in Step 2 [Index 2 or Index 3] selects PREVIOUS (step), the Viewer will always return the user to Step 1 [Index 1].

Index	Before State									After State					
	BACK	FORW	PREV (Step)	NEXT (Step)	Scroll	Prev Step Loc	Step Loc	Action 	Link Target	BACK	FORW	PREV (Step)	NEXT (Step)	Scroll	Comment
1	On	Off	Off	On	On	None	1	Initial Step 1		Prior Screen	None	None	2	On	
2	On	Off	On	On	On	1	2	Step 2 IF/Then "False" to Step 3		Prior Screen	None	1	3	On	To Index 4
3	On	Off	On	On	On	1	2	Step 2 IF/Then "True" Jump to Step 15. Need to select link to jump to Step 15.	Step 15	Prior Screen	None	1	3	On	To Index 17
4	On	Off	On	On	On	2	3	Step 3		Prior Screen	None	2	4	On	From Index 2


NSWCCD-80-TR-2013/011

Index	Before State									After State					
	BACK	FORW	PREV (Step)	NEXT (Step)	Scroll	Prev Step Loc	Step Loc	Action 	Link Target	BACK	FORW	PREV (Step)	NEXT (Step)	Scroll	Comment
5	On	Off	On	On	On	3	4	Step 4		Prior Screen	None	3	5	On	
6	On	Off	On	On	On	4	5	Step 5		Prior Screen	None	4	6	On	
7	On	Off	On	On	On	5	6	Step 6		Prior Screen	None	5	7	On	
8	On	Off	On	On	On	6	7	Step 7		Prior Screen	None	6	8	On	
9	On	Off	On	On	On	7	8	Step 8		Prior Screen	None	7	9	On	
10	On	Off	On	On	On	8	9	Step 9		Prior Screen	None	8	10	On	
11	On	Off	On	On	On	9	10	Step 10		Prior Screen	None	9	11	On	
12	On	Off	On	On	On	10	11	Step 11		Prior Screen	None	10	12	On	
13	On	Off	On	On	On	11	12	Step 12		Prior Screen	None	11	13	On	
14	On	Off	On	On	On	12	13	Step 13		Prior Screen	None	12	14	On	
15	On	Off	On	On	On	13	14	Step 14		Prior Screen	None	13	15	On	
16	On	Off	On	On	On	14	15	Step 15 from Step 14		Prior Screen	None	14	16	On	
17	On	Off	On	On	On	2	15	Step 15 from Step 2		Prior Screen	None	2	16	On	From Index 3
18	On	Off	On	On	On	15	16	Step 16		Prior Screen	None	15	17	On	
19	On	Off	On	Off	On	17	17	Step 17		Prior Screen	None	16	None	On	


*Table D - 3 Basic Step Branching***D.2.3 Basic Step Navigation with Traverse Hyperlinks (Between DMs or IPs)**

Selecting a hotspot or other link within a step traverses the user to the intended target. To return to the step, the user must select BACK. Some examples of traverse links include tables, figures, and descriptive information (but never another step). For example, a user at Task A Step 4 clicks the table reference and traverses to the target table (located within Task B). Selecting PREVIOUS (step), the user would navigate to Task A Step 3 and NEXT (step) would navigate the user to Task A Step 5. To return to Task A Step 4, the user must select BACK.

In Table D-4 the user at Step 4 is responds to a hyperlink to non-step elements table or figure. Even though the user traversed from Step 4, the Viewer must recognize the user is still active at Step 4 in evaluating how to proceed should the user select PREVIOUS (step) or NEXT (step). If the user selects PREVIOUS (step), the user arrives at Step 3 and for NEXT (step) selection, the user advances to Step 5. To return to Step 4 from the traversed target by selecting BACK.

Index	Before State						After State								
	BACK	FORW	PREV (Step)	NEXT (Step)	Scroll	Prev Step Loc	Step Loc	Action 	Link Target	BACK	FORW	PREV (Step)	NEXT (Step)	Scroll	Comment
1	On	Off	Off	On	On	None	1	Initial Step 1		Prior Screen	None	None	2	On	
2	On	Off	On	On	On	1	2	Step 2		Prior Screen	None	1	3	On	
3	On	Off	On	On	On	2	3	Step 3		Prior Screen	None	2	4	On	
4	On	Off	On	On	On	3	4	Step 4 has link to a table, figure, etc.	Link either to same screen (index 5) or different screen	Prior Screen	None	3	5	On	Within same screen (index 5) On different screen (index 8)

NSWCCD-80-TR-2013/011

Index	Before State									After State					Comment
	BACK	FORW	PREV (Step)	NEXT (Step)	Scroll	Prev Step Loc	Step Loc	Action 	Link Target	BACK	FORW	PREV (Step)	NEXT (Step)	Scroll	
									(index 8)						
5	On	On	On	On	On	3	4	Hyperlink selected to target of Table, figure, etc. within same screen	Link to Table, Figure, etc, within same screen	Prior Screen	None	3	5	On	
6	On	On	On	On	On	3	4	At Target location within same screen.		Prior Screen	None	3	5	On	
7	On	On	On	On	On	3	4	Returning to Step 4 after going to a table, figure, etc.	Link to Table, Figure, etc, within same screen	Prior Screen	Return to the Target For Step 4 hyperlink	3	5	On	
8	On	On	On	On	On	3	4	Hyperlink selected to target of Table, figure, etc. within a different screen	Link to Table, Figure, etc, within a different screen	Prior Screen	None	3	5	On	


Index	Before State									After State					
	BACK	FORW	PREV (Step)	NEXT (Step)	Scroll	Prev Step Loc	Step Loc	Action 	Link Target	BACK	FORW	PREV (Step)	NEXT (Step)	Scroll	Comment
9	On	On	On	On	On	3	4	At Target location within Different screen.		To Step 4	None	3	5	On	
10	On	On	On	On	On	3	4	Returning to Step 4 after going to a table, figure, etc.	Link to Table, Figure, etc, within a different screen	Prior Screen	Return to the Target For Step 4 hyperlink	3	5	On	
11	On	On	On	On	On	4	5	Step 5		Prior Screen	None	4	6	On	
12	On	On	On	Off	On	5	6	Last Step 6		Prior Screen	None	5	None	On	

Table D - 4 Basic Step Navigation with Traverse Hyperlinks


D.2.4 Step Branching with ‘Yes-No’ Dialog Box (Within the same DM or IP)

An advanced branching method is through ‘Yes-No’ dialog boxes. When the user arrives at a step, a dialog box is placed either in-line or as a pop-up box. For example, the dialog box might read “Is the pressure between 28 and 32 psi?” with selections of “Yes” or “No”.

Using this question and Table D-5, the user arrives at Step 2 with the dialog box and example question. By selecting ‘No’, the Viewer advances to Step 3 or selecting ‘Yes,’ the Viewer advances to Step 15. Based on the example of Table D-5, the user could have arrived at Step 15 either directly from Step 14 or by branching from Step 2. Using PREVIOUS (step), the user’s return will depend on how they arrived and will return them to Step 14 or because of branching to Step 2. If the user returned to step 2 using PREVIOUS (step), the user must again respond to the dialog box in Step 2 to advance in the procedure. This is to ensure the user did not mistakenly respond to the branched step and is returning to correct the mistake. When returning to a step that branches, PREVIOUS

NSWCCD-80-TR-2013/011

(step) will return the user to logical step that initially led them to the branch step. In the Table D-5 example, when the user in Step 2 selects PREVIOUS (step), the Viewer will always return the user to Step 1.

Index	Before State									After State					Comment
	BACK	FORW	PREV (Step)	NEXT (Step)	Scroll	Prev Step Loc	Step Loc	Action 	Link Target	BACK	FORW	PREV (Step)	NEXT (Step)	Scroll	
1	On	Off	Off	On	On	None	1	Initial Step 1		Prior Screen	None	None	2	On	
2	On	Off	On	On	On	1	2	Step 2 Select "No" to proceed to Step 3	3	Prior Screen	None	1	Off	On	To Index 4. Should scrolling be affected by this type logic?
3	On	Off	On	On	On	1	2	Step 2 Select "Yes" to Jump to Step 15	15	Prior Screen	None	1	Off	On	To Index 17
4	On	Off	On	On	On	2	3	Step 3		Prior Screen	None	2	4	On	
5	On	Off	On	On	On	3	4	Step 4		Prior Screen	None	3	5	On	
6	On	Off	On	On	On	4	5	Step 5		Prior Screen	None	4	6	On	
7	On	Off	On	On	On	5	6	Step 6		Prior Screen	None	5	7	On	
8	On	Off	On	On	On	6	7	Step 7		Prior Screen	None	6	8	On	
9	On	Off	On	On	On	7	8	Step 8		Prior Screen	None	7	9	On	
10	On	Off	On	On	On	8	9	Step 9		Prior Screen	None	8	10	On	
11	On	Off	On	On	On	9	10	Step 10		Prior Screen	None	9	11	On	
12	On	Off	On	On	On	10	11	Step 11		Prior Screen	None	10	12	On	
13	On	Off	On	On	On	11	12	Step 12		Prior Screen	None	11	13	On	
14	On	Off	On	On	On	12	13	Step 13		Prior Screen	None	12	14	On	


Index	Before State									After State					Comment
	BACK	FORW	PREV (Step)	NEXT (Step)	Scroll	Prev Step Loc	Step Loc	Action 	Link Target	BACK	FORW	PREV (Step)	NEXT (Step)	Scroll	
15	On	Off	On	On	On	13	14	Step 14		Prior Screen	None	13	15	On	
16	On	Off	On	On	On	14	15	Step 15 from Step 14		Prior Screen	None	14	16	On	
17	On	Off	On	On	On	2	15	Step 15 from Step 2		Prior Screen	None	2	16	On	From Index 3
18	On	Off	On	On	On	16	16	Step 16		Prior Screen	None	15	17	On	
19	On	Off	On	Off	On	17	17	Step 17		Prior Screen	None	16	None	On	


Table D - 5 'Yes-No' Dialog Box

D.2.5 Step Branching with Multiple Choice Responses (Within the same DM or IP)

Step branching with Logical Calculations involves selecting multiple choice responses or inputting a value for multiple outputs. The operations is similar to branching through 'Yes-No' dialog boxes with additional outcomes. When the user arrives at a step, a dialog - box or input box is placed either in-line or as a pop-up box. For example, the dialog box might read "Select the range of pressures below." with selections of "a. under 28 psi", "b. 28 to 32 psi", and "c. over 32 psi". Using this example and Table D-5, the user arrives at Step 3 with the dialog box and example question. By selecting 'a', the Viewer advances to Step 4, selecting 'b', the Viewer advances to Step 10, or selecting 'c', the Viewer advances to Step 15.

Based on the examples of Table D-6, the user could have arrived at Steps 10 and 15 either directly from the previous sequential step or through branching. Using PREVIOUS (step), the user's return will depend on how they arrived and will return them to either the previous sequential step or the branched step. If the user returned to Step 3 using PREVIOUS (step), the user must again respond to the dialog box in Step 3 to advance in the procedure. This is to ensure the user did not mistakenly respond to the branched step and is returning to correct the mistake. When returning to a step that branches, PREVIOUS (step) will return the user to logical step that initially led them to the branch step. In the Table D-6 example, when the user in Step 3 selects PREVIOUS (step), the Viewer will always return the user to Step 2.

NSWCCD-80-TR-2013/011

Index	Before State									After State					Comment
	BACK	FORW	PREV (Step)	NEXT (Step)	Scroll	Prev Step Loc	Step Loc	Action 	Link Target	BACK	FORW	PREV (Step)	NEXT (Step)	Scroll	
1	On	Off	Off	On	On	None	1	Initial Step 1		Prior Screen	None	None	2	On	
2	On	Off	On	On	On	1	2	Step 2		Prior Screen	None	1	3	On	
3	On	Off	On	On	On	2	3	Step 3 - Select Multiple choices or input a value for multiple outputs. Result A proceeds to Step 4	4	Prior Screen	None	2	Off	On	To Index 6. Should scrolling be affected by this type logic?
4	On	Off	On	On	On	2	3	Step 3 - Select Multiple choices or input a value for multiple outputs. Result B proceeds to Step 10	10	Prior Screen	None	2	Off	On	To Index 13. Should scrolling be affected by this type logic?
5	On	Off	On	On	On	2	3	Step 3 - Select Multiple choices or input a value for multiple outputs. Result C proceeds to Step 15	15	Prior Screen	None	2	Off	On	To Index 19. Should scrolling be affected by this type logic?
6	On	Off	On	On	On	3	4	Step 4		Prior Screen	None	3	5	On	
7	On	Off	On	On	On	4	5	Step 5		Prior Screen	None	4	6	On	
8	On	Off	On	On	On	5	6	Step 6		Prior Screen	None	5	7	On	
9	On	Off	On	On	On	6	7	Step 7		Prior Screen	None	6	8	On	
10	On	Off	On	On	On	7	8	Step 8		Prior	None	7	9	On	


Index	Before State									After State					Comment
	BACK	FORW	PREV (Step)	NEXT (Step)	Scroll	Prev Step Loc	Step Loc	Action 	Link Target	BACK	FORW	PREV (Step)	NEXT (Step)	Scroll	
										Screen					
11	On	Off	On	On	On	8	9	Step 9		Prior Screen	None	8	10	On	
12	On	Off	On	On	On	9	10	Step 10 from Step 9		Prior Screen	None	9	11	On	
13	On	Off	On	On	On	3	10	Step 10 from Step 3		Prior Screen	None	3	11	On	From Index 4
14	On	Off	On	On	On	10	11	Step 11		Prior Screen	None	10	12	On	
15	On	Off	On	On	On	11	12	Step 12		Prior Screen	None	11	13	On	
16	On	Off	On	On	On	12	13	Step 13		Prior Screen	None	12	14	On	
17	On	Off	On	On	On	13	14	Step 14		Prior Screen	None	13	15	On	
18	On	Off	On	On	On	14	15	Step 15 from Step 14		Prior Screen	None	14	16	On	
19	On	Off	On	On	On	3	15	Step 15 from Step 3		Prior Screen	None	3	16	On	From Index 5
20	On	Off	On	On	On	15	16	Step 16		Prior Screen	None	15	17	On	
21	On	Off	On	Off	On	16	17	Step 17		Prior Screen	None	16	None	On	

Table D - 6 Step Branching with Multiple Choice Responses

APPENDIX E REQUIREMENT REFERENCES TO OTHER SPECIFICATIONS

Appendix E provides a reference from each Viewer Requirement's paragraph to a corresponding location/paragraph in MIL-DTL-24784C and S1000D Issues 3 and 4. Included are references to the S1000D business rules through the NAVSEA S1000D Unified Decision Point Option (DPO) numbers.

Viewer Req. Doc. Location (Para) (This Document)	Requirement Title (This Document)	MIL-DTL- 24784C Location	S1000D Issue 3 Chapter	S1000D Issue 3 Paragraph	S1000D Issue 4 Chapter	S1000D Issue 4 Paragraph	NAVSEA S1000D Unified DPO #	Authority Level of Decision Req't			
								Joint Services Business Rule	Dept of Navy Business Rule	NAVSEA Business Rule	Project? (Y=Yes)
3.2	Physical IETM Screen Layouts - The Outer Shell and Functions	B.4.1					None				
3.2.1	Title Bar	B.4.1.1.2	6.3.1	4.2	6.3.1	2.3.2	00771	X		X	
3.2.2	The Outer Shell	B.4.1.1	6.3.1	4.2	6.3.1	2.3.2	00771	X		X	
3.3	Physical IETM Screen Layouts and Functions - The Inner Shell	B.4.1.2	6.3.1	4.3.1	6.3.1	2.3.3.1	00772	X		X	
3.3.1	Guidepost	B.4.1.2.2.1	6.3.1	4.5	6.3.1	2.3.5	00776	X		X	

NSWCCD-80-TR-2013/011

								Authority Level of Decision Req't			
Viewer Req. Doc. Location (Para) (This Document)	Requirement Title (This Document)	MIL-DTL- 24784C Location	S1000D Issue 3 Chapter	S1000D Issue 3 Paragraph	S1000D Issue 4 Chapter	S1000D Issue 4 Paragraph	NAVSEA S1000D Unified DPO #	Joint Services Business Rule	Dept of Navy Business Rule	NAVSEA Business Rule	Project? (Y=Yes)
3.3.1.1	Reset User Interface	B.4.1.2.2.1	6.3.1	4.5	6.3.1	2.3.5	00776	X		X	
3.3.1.2	IETM ID	3.6					None				
3.3.1.3	Revision Summary	A.3.3.2.1.2	3.9.4	2.4	3.9.4	2.4	00076			X	
3.3.1.4	Safety Summary	3.7.5.10	5.3.1.2	3.1	5.3.1.1	3	00692			X	
3.3.1.5	Navy Distance Support	B.4.1.2.2.1					None				
3.3.1.6, 3.3.5.6	Feedback	B.4.1.2.5.2.2	6.3.1	5.2	6.3.1	2.4.2	00781	X		X	
3.3.1.6.1, 3.3.5.6.1	TMDER Website	B.4.4.10	4.6	1	4.6	2	00579			X	
3.3.1.6.2, 3.3.5.6.2	TMDER PDF	B.4.4.10	4.6	1	4.6	2	00579			X	
3.3.1.6.3, 3.3.5.6.3	Other Feedback	B.4.4.10	4.6	1	4.6	2	00579			X	
3.3.1.7	Certification Sheet	N/A	5.3.1.2	3.1	5.3.1.1	3	00692			X	
3.3.1.8	Print Current Window	B.4.1.2.2.1					None				
3.3.1.9	Session Control	B.4.4.1					None				

NSWCCD-80-TR-2013/011

								Authority Level of Decision Req't			
Viewer Req. Doc. Location (Para) (This Document)	Requirement Title (This Document)	MIL-DTL- 24784C Location	S1000D Issue 3 Chapter	S1000D Issue 3 Paragraph	S1000D Issue 4 Chapter	S1000D Issue 4 Paragraph	NAVSEA S1000D Unified DPO #	Joint Services Business Rule	Dept of Navy Business Rule	NAVSEA Business Rule	Project? (Y=Yes)
3.3.1.10	Exit	B.4.1.2.5.2.7	6.3.1	4.5	6.3.1	2.3.5	00776	X		X	
3.3.2	Classification and Distribution Bar	B.4.1.2.4	5.3.1.2	3.1	5.3.1.1	2.3	00692			X	
3.3.3	Navigation Panel	B.4.1.2.5	6.3.1	4.3.1	6.3.1	2.3.3.1	00772	X		X	
3.3.4	Subtitle Bar	B.4.1.2.5.1	6.3.1	5.1	6.3.1	2.4.1	00780	X		X	
3.3.5	Main Menu Bar	B.4.1.2.5.2	6.3.1	5.2	6.3.1	2.4.2	00781	X		X	
3.3.5.1	Previous and Next	B.4.1.2.5.2.2	6.3.1	5.2	6.3.1	2.4.2	00781	X		X	
3.3.5.2	Table of Contents (TOC)	B.4.1.2.5.2.2	6.3.1	5.2	6.3.1	2.4.2	00781	X		X	
3.3.5.3	History	B.4.1.2.5.2.2	6.3.1	5.2	6.3.1	2.4.2	00781	X		X	
3.3.5.4	Search Function	B.4.1.2.5.2.2	6.3.1	5.2	6.3.1	2.4.2	00781	X		X	
3.3.5.5	Print	B.4.1.2.5.2.2	6.3.1	5.2	6.3.1	2.4.2	00781	X		X	
3.3.5.5.1	Print Current Window	B.3.2.50	3.9.2	3	3.9.2	2.1	00035				Y

NSWCCD-80-TR-2013/011

								Authority Level of Decision Req't			
Viewer Req. Doc. Location (Para) (This Document)	Requirement Title (This Document)	MIL-DTL- 24784C Location	S1000D Issue 3 Chapter	S1000D Issue 3 Paragraph	S1000D Issue 4 Chapter	S1000D Issue 4 Paragraph	NAVSEA S1000D Unified DPO #	Joint Services Business Rule	Dept of Navy Business Rule	NAVSEA Business Rule	Project? (Y=Yes)
3.3.5.5.2	Print Current Module	N/A	3.9.2	3	3.9.2	2.1	00035				Y
3.3.4.5.3	Print Module Figures	N/A	3.9.2	3	3.9.2	2.1	00035				Y
3.3.5.5.4	Print Current Figure	N/A	3.9.2	3	3.9.2	2.1	00035				Y
3.3.5.7	Exit	B.4.1.2.5.2.2	6.3.1	5.2	6.3.1	2.4.2	00781	X		X	
3.3.5.8	Help	B.4.1.2.5.2.2	6.3.1	5.2	6.3.1	2.4.2	00781	X		X	
3.3.5.9	ID Status (S1000D Only)	N/A	6.3.1	5.2	6.3.1	2.4.2	00781	X		X	
3.3.6	Additional Information Bar	N/A	6.3.1	5.3	6.3.1	2.4.3	00783		X	X	
3.3.6.1	Back	B.3.2.25	6.3.1	5.3	6.3.1	2.4.3	00783		X	X	
3.3.6.2	Forward	B.3.2.25	6.3.1	5.3	6.3.1	2.4.3	00783		X	X	
3.3.6.3	Applicability	N/A	6.3.1	5.3	6.3.1	2.4.3	00783		X	X	
3.3.6.4	Annotations	B.3.2.28	3.9.2.1	11.1	3.9.2.1	2.10.1	00038			X	

NSWCCD-80-TR-2013/011

								Authority Level of Decision Req't			
Viewer Req. Doc. Location (Para) (This Document)	Requirement Title (This Document)	MIL-DTL- 24784C Location	S1000D Issue 3 Chapter	S1000D Issue 3 Paragraph	S1000D Issue 4 Chapter	S1000D Issue 4 Paragraph	NAVSEA S1000D Unified DPO #	Joint Services Business Rule	Dept of Navy Business Rule	NAVSEA Business Rule	Project? (Y=Yes)
3.3.6.4.1	Add Bookmark	B.3.2.72	3.9.2.1	11.1	3.9.2.1	2.10.1	00038			X	
3.3.6.4.2	Add Note	N/A	3.9.2.1	11.1	3.9.2.1	2.10.1	00038			X	
3.3.6.4.3	Manage Bookmarks/N otes	N/A	3.9.2.1	11.1	3.9.2.1	2.10.1	00038			X	
3.3.6.5	Additional Content	B.3.2.32					None				
3.3.7	Table of Contents (TOC) Panel	B.4.1.2.3	6.3.1	4.4	6.3.1	2.3.4	00773	X		X	
3.3.8	Main Content Window	B.4.1.2.5.4	6.3.1	4.3.1	6.3.1	2.3.3.1	00772	X		X	
3.3.8.1	Content Window Classification Bar	B.4.1.2.4	6.3.1	4.3.1	6.3.1	2.3.3.1	00772	X		X	
3.3.9	Status Bar	B.4.1.2.5.5	6.3.1	4.5	6.3.1	2.3.5	00776	X		X	
3.4	Icons	B.4.1.2.6					None				
3.5	Screen Resolutions	B.4.2	6.3.1	2	6.3.1	2.1	00762				Y
3.6.1	Text and Display Colors	B.4.3	6.3.1	6.2	6.3.1	2.5.2	00784	X		X	

NSWCCD-80-TR-2013/011

								Authority Level of Decision Req't			
Viewer Req. Doc. Location (Para (This Document)	Requirement Title (This Document)	MIL-DTL- 24784C Location	S1000D Issue 3 Chapter	S1000D Issue 3 Paragraph	S1000D Issue 4 Chapter	S1000D Issue 4 Paragraph	NAVSEA S1000D Unified DPO #	Joint Services Business Rule	Dept of Navy Business Rule	NAVSEA Business Rule	Project? (Y=Yes)
3.6.2	Standard Text/Fonts	B.4.3.2.1	6.3.1	6.2	6.3.1	2.5.2	00784	X			
3.6.2.1	Font Requirement s	B.4.3.2.1	6.3.1	6.2	6.3.1	2.5.2	00784	X			
3.6.2.2	Margins	B.4.3.2.5.1	6.2.2	11.1.4	6.2.2	2.10.1.4	00731		X	X	
3.6.2.3	Justification	B.4.3.2.5.2	6.2.2	5	6.2.2	3	00758	X		X	
3.6.2.4	Text Wrapping	B.4.3.2.5.3					None				
3.6.3.1	Title Screen	3.6					None				
3.6.3.2	Display of Change Markings	B.4.3.2.5.12.1	6.3.1	13	6.3.1	2.12	00766			X	
3.6.3.3	Paragraphs	B.4.3.2.5.4	3.9.5.2. 1.5	2.2	3.9.5.2. 1.5	2	00186			X	
3.6.3.4	Procedural Steps	B.4.3.2.5.5	6.2.2	6	6.2.2	2.3.1	00744			X	
3.6.3.4.1	Linear Display of Procedural Steps for IETMs	B.4.3.2.5.6	6.2.2	6	6.2.2	2.3.1	00744			X	
3.6.3.4.2	Check-off Lists	B.4.3.2.5.5					None				

NSWCCD-80-TR-2013/011

Viewer Req. Doc. Location (Para) (This Document)	Requirement Title (This Document)	MIL-DTL- 24784C Location	S1000D Issue 3 Chapter	S1000D Issue 3 Paragraph	S1000D Issue 4 Chapter	S1000D Issue 4 Paragraph	NAVSEA S1000D Unified DPO #	Authority Level of Decision Req't			
								Joint Services Business Rule	Dept of Navy Business Rule	NAVSEA Business Rule	Project? (Y=Yes)
3.6.3.4.3	Steps with Illustrations	N/A	6.3.1	9	6.3.1	2.8.1	00787		X		
3.6.3.5	Lists	3.7.6.4					None				
3.6.3.5.1	Random List	3.7.6.4.b	3.9.5.2. 1.3	2.2	3.9.5.2. 1.3	2.2	00180				Y
3.6.3.5.2	Sequential List	3.7.6.4.c					None				
3.6.3.5.3	Definition List	3.7.6.4.a			3.9.5.2. 1.3	2.3.1	00181				Y
3.6.3.6	Display and Acknowledge ment of Alerts and Notes	B.4.3.2.5.9.2	3.9.3	1	3.9.3	1	00049		X		
3.6.3.6.1	In-line Alerts and Notes	B.4.3.2.5.9.2	3.9.3	1	3.9.3	1	00049		X		
3.6.3.6.2	Pop-up Alerts and Notes	B.4.3.2.5.9.2	3.9.3	1	3.9.3	1	00049		X		
3.6.3.6.3	Alert Display on Status Bar	B.4.3.2.5.9.2	3.9.3	1	3.9.3	1	00049		X		
3.6.3.6.4	Alert Colors	3.7.5.9.5	3.9.3	1	3.9.3	1	00049		X		
3.6.3.6.5	Hazardous Material Icons	3.7.5.3.2	6.3.1	12.2	6.3.1	2.11.2	00763	X		X	

NSWCCD-80-TR-2013/011

								Authority Level of Decision Req't			
Viewer Req. Doc. Location (Para) (This Document)	Requirement Title (This Document)	MIL-DTL- 24784C Location	S1000D Issue 3 Chapter	S1000D Issue 3 Paragraph	S1000D Issue 4 Chapter	S1000D Issue 4 Paragraph	NAVSEA S1000D Unified DPO #	Joint Services Business Rule	Dept of Navy Business Rule	NAVSEA Business Rule	Project? (Y=Yes)
3.6.3.6.6	Display of Notes	B.4.3.2.5.10	3.9.3	2.4.1	3.9.3	2.3	00061		X		
3.6.3.7	Hot Spots/Links	B.4.3.5	3.9.5.2. 1.2	3.9.5.2.1.2	2.1	2.1	00170	X			
3.6.3.8	Tables	B.4.3.5	3.9.5.2. 1.2	3.9.5.2.1.2	2.1	2.1	00170	X			
3.6.3.8.1	Standardized Information Tables	B.4.3.3.1					None				
3.6.3.8.2	CALS and Simple Tables	B.4.3.3	3.9.5.2. 1.6	3.9.5.2.1.6	2.2	2.1	00190			x	
3.6.3.9	Graphics	B.4.3.4.6			6.4.1	2.4.6.1	None				
3.6.3.9.1	Oversize Graphics	B.4.3.4.2					None				
3.6.3.9.2	Illustrated Parts Breakdown (IPB)	3.1.1.10					None				
3.6.3.9.3	Troubleshoot ing Diagrams	3.7.8.2.7					None				
3.6.3.9.4	Tear Offs	B.3.2.69					None				
3.6.3.10	Multimedia	B.4.4.12					00803				Y

NSWCCD-80-TR-2013/011

								Authority Level of Decision Req't			
Viewer Req. Doc. Location (Para) (This Document)	Requirement Title (This Document)	MIL-DTL- 24784C Location	S1000D Issue 3 Chapter	S1000D Issue 3 Paragraph	S1000D Issue 4 Chapter	S1000D Issue 4 Paragraph	NAVSEA S1000D Unified DPO #	Joint Services Business Rule	Dept of Navy Business Rule	NAVSEA Business Rule	Project? (Y=Yes)
3.6.4	Security Markings	B.4.3.2.5.11	6.2.1	2.4.2	6.2.1	2.4.2	00714			X	
3.6.4.1	Security Markings for Classification Authority Box	N/A					None				
3.6.4.2	Security Markings for Electronically Displayed Data	B.4.3.2.5.11	6.2.1	2.4.2	6.2.1	2.4.2	00714			X	
3.6.4.3	Security Markings for Printed Material	B.4.3.2.5.11	6.2.1	2.4.2	6.2.1	2.4.2	00714			X	
3.6.4.4	Security Markings for Portions	B.4.3.2.5.11	6.2.1	2.4.2	6.2.1	2.4.2	00714			X	
3.7.1	User Interaction/S creen Dialogs	B.4.4.5	3.9.5.2. 10	3.9.5.2.10	2.2.8.2	2.3.4.1.6	00378				Y
3.7.2	Screen Stacking	B.4.4.7					None				
3.7.3	Response Time	B.4.4.8					None				
3.7.4	Login	B.3.2.38					None				

NSWCCD-80-TR-2013/011

								Authority Level of Decision Req't			
Viewer Req. Doc. Location (Para) (This Document)	Requirement Title (This Document)	MIL-DTL- 24784C Location	S1000D Issue 3 Chapter	S1000D Issue 3 Paragraph	S1000D Issue 4 Chapter	S1000D Issue 4 Paragraph	NAVSEA S1000D Unified DPO #	Joint Services Business Rule	Dept of Navy Business Rule	NAVSEA Business Rule	Project? (Y=Yes)
3.7.5	Audit Trail	B.3.2.7					None				