# NAVSEA STANDARD ITEM

FY-15

# 1. SCOPE:

1.1 Title: Resilient Mount; remove and install

### 2. REFERENCES:

- 2.1 Standard Items
- 2.2 Equipment Technical Manual
- 2.3 S9073-A2-HBK-010, U.S. Navy Resilient Mount Handbook

#### 3. REQUIREMENTS:

- 3.1 Notify the SUPERVISOR of the presence of heavily mis-loaded or deformed mounts prior to mount removal.
  - 3.2 Remove resilient mount assemblies, using 2.2 and 2.3 for guidance.
- 3.2.1 Inspect each equipment foundation for structural integrity, deterioration, pitting, cracks, and areas of damage or distortion.
- 3.2.1.1 Submit one legible copy, in approved transferrable media, of a report listing results of the requirements of 3.2.1 to the SUPERVISOR within 5 working days after equipment removal.
- 3.2.2 Accomplish the requirements of 009-32 of 2.1 for disturbed surfaces of each foundation where resilient mount assemblies have been removed.
- 3.3 Select, procure, assemble, install, load, and adjust new resilient mount assemblies including load bolts, foundation bolts, nuts, and snubbers in accordance with 2.3.
- 3.3.1 Stamp the installation date on each resilient mount flange adjacent to the identification date. The date shall be visible and legible when the mount is installed with 1/8-inch minimum lettering size.
- 3.3.2 Submit one legible copy, in approved transferrable media, of a report listing results of the requirements of 3.3 and 3.3.1 to the SUPERVISOR. The report shall include the following:

1 of 2 ITEM NO:  $\frac{009-92}{\text{FY}-15}$ 

- 3.3.2.1 Ship's name and hull number
- 3.3.2.2 Contractor and subcontractor
- 3.3.2.3 Job Order and Work Item number
- 3.3.2.4 Identity of equipment
- 3.3.2.5 Amount and designation of mounts installed

# 4. NOTES:

- $4.1\,$  Equipment technical manual and drawings referenced in invoking Work Item may identify mount designation and loading requirements.
  - 4.2 This item does not apply to turbine enclosure mounts.